

★
T.O. 1C-124A-2A
(Formerly Section X,
AN 01-40NVA-2)

HANDBOOK
MAINTENANCE INSTRUCTIONS
WIRING DATA SUPPLEMENT

USAF SERIES
YC-124
C-124A
AND
C-124C
AIRCRAFT

REVISION
NOTICE

LATEST REVISED PAGES SUPERSEDE
THE SAME PAGES OF PREVIOUS DATE

Insert revised pages into basic
publication. Destroy superseded pages.

PUBLISHED UNDER AUTHORITY OF THE SECRETARY OF THE AIR FORCE
AND THE CHIEF OF THE BUREAU OF AERONAUTICS

T.O. 1C-124A-2A

Reproduction for non-military use of the information or illustrations contained in this publication is not permitted without specific approval of the issuing service (BuAer or USAF). The policy for use of Classified Publications is established for the Air Force in AFR 205-1 and for the Navy in Navy Regulations, Article 1509.

LIST OF REVISED PAGES ISSUED

INSERT LATEST REVISED PAGES. DESTROY SUPERSEDED PAGES.

NOTE: The portion of the text affected by the current revision is indicated by a vertical line in the outer margins of the page.

Page No.	Date of Latest Revision	Page No.	Date of Latest Revision	Page No.	Date of Latest Revision
* B	15 January 1955	78A	1 October 1954	136A	1 April 1954
* C	15 January 1955	78B	1 October 1954	139	1 July 1954
1	1 April 1954	* 78C	15 January 1955	140	1 July 1954
3	1 April 1954	* 78D	15 January 1955	140A	1 July 1954
4	1 April 1954	* 79	15 January 1955	141	1 July 1954
9	1 July 1954	* 80	15 January 1955	142	1 July 1954
10	1 July 1954	* 90	15 January 1955	143	1 April 1954
13	1 July 1954	* 91	15 January 1955	145	1 July 1954
15	1 July 1954	92	1 April 1954	146	1 July 1954
16	1 July 1954	93	1 April 1954	147	1 July 1954
18	1 July 1954	96	1 October 1954	148	1 July 1954
19	1 July 1954	96A	1 April 1954	149	1 July 1954
21	1 April 1954	97	1 April 1954	152	1 July 1954
23	1 July 1954	98A	1 July 1954	*154	15 January 1955
25	1 July 1954	98B	1 April 1954	155	1 July 1954
26	1 July 1954	99	1 April 1954	157	1 July 1954
28	1 April 1954	100	1 July 1954	161	1 July 1954
28A	1 October 1954	101	1 July 1954	165	1 July 1954
28B	1 April 1954	102	1 July 1954	166	1 July 1954
29	1 April 1954	103	1 July 1954	167	1 July 1954
30	1 July 1954	104A	1 October 1954	168	1 July 1954
31	1 July 1954	105	1 October 1954	169	1 July 1954
34	1 April 1954	106	1 October 1954	170	1 July 1954
37	1 April 1954	106A	1 October 1954	*171	15 January 1955
40A	1 April 1954	106B	1 July 1954	172	1 July 1954
41	1 April 1954	106C	1 July 1954	173	1 July 1954
42A	1 April 1954	106D	1 July 1954	*174	15 January 1955
42B	1 April 1954	114	1 April 1954	177 Deleted	1 July 1954
43	1 April 1954	114A	1 April 1954	178 Deleted	1 July 1954
50	1 July 1954	114B	1 April 1954	179	1 July 1954
51	1 July 1954	115	1 July 1954	181	1 July 1954
57	1 July 1954	116	1 April 1954	182	1 July 1954
58	1 October 1954	117	1 July 1954	183	1 July 1954
58A	1 October 1954	118	1 October 1954	184A	1 April 1954
60	1 July 1954	*118A	15 January 1955	*185	15 January 1955
60A Deleted	1 July 1954	119	1 July 1954	187	1 July 1954
61 Deleted	1 July 1954	120	1 April 1954	188	1 July 1954
62 Deleted	1 July 1954	122	1 April 1954	188A	1 April 1954
* 63	15 January 1955	123 Deleted	1 July 1954	189	1 July 1954
64	1 July 1954	124 Deleted	1 July 1954	190	1 July 1954
65	1 July 1954	125	1 July 1954	190A	1 April 1954
68	1 July 1954	128A	1 April 1954	191	1 July 1954
70	1 April 1954	*129 Deleted	15 January 1955	192	1 April 1954
70A	1 April 1954	*130 Deleted	15 January 1955	193	1 April 1954
71	1 April 1954	*131	15 January 1955	195	1 July 1954
72	1 July 1954	*132	15 January 1955	197	1 April 1954
73	1 July 1954	133	1 April 1954	198	1 April 1954
76	1 April 1954	134	1 July 1954	198A	1 July 1954
76A	1 July 1954	134A	1 April 1954	198B	1 April 1954
78	1 October 1954	136	1 July 1954	201	1 July 1954

* The asterisk indicates pages revised, added or deleted by the current revision.

ADDITIONAL COPIES OF THIS PUBLICATION MAY BE OBTAINED AS FOLLOWS:

USAF ACTIVITIES.—In accordance with Technical Order No. 00-5-2.

NAVY ACTIVITIES.—Submit request to nearest supply point listed below, using form NavAer-140: NASD, Philadelphia, Pa.; NAS, Alameda, Calif.; NAS, Jacksonville, Fla.; NAS, Norfolk, Va.; NAS, San Diego, Calif.; NAS, Seattle, Wash.; ASD, NSC, Guam.

For listing of available material and details of distribution see Naval Aeronautics Publications Index NavAer 00-500.

Revised 15 January 1955

LIST OF REVISED PAGES ISSUED

Page No.	Date of Latest Revision	Page No.	Date of Latest Revision	Page No.	Date of Latest Revision
202A	1 April 1954	303	1 July 1954	391	1 April 1954
202B	1 April 1954	304	1 April 1954	397	1 April 1954
203	1 July 1954	304A	1 July 1954	400	1 July 1954
*204	15 January 1955	304B	1 July 1954	*400A	15 January 1955
*204A	15 January 1955	304C	1 October 1954	*400B	15 January 1955
205	1 July 1954	304D	1 October 1954	401	1 April 1954
208	1 July 1954	304E	1 October 1954	405	1 July 1954
*210A	15 January 1955	304F	1 October 1954	406	1 April 1954
211	1 July 1954	305	1 April 1954	406A	1 April 1954
216	1 April 1954	307	1 October 1954	412	1 July 1954
216A	1 April 1954	308	1 October 1954	416	1 July 1954
217	1 April 1954	*308A	15 January 1955	416A	1 July 1954
*219	15 January 1955	309	1 July 1954	416B	1 July 1954
220	1 April 1954	310	1 April 1954	416C	1 July 1954
222	1 July 1954	313	1 April 1954	416D	1 July 1954
224	1 July 1954	314	1 April 1954	416E	1 July 1954
225	1 July 1954	320A	1 April 1954	417	1 April 1954
*227	15 January 1955	321	1 October 1954	420	1 April 1954
234	1 July 1954	322	1 July 1954	420A	1 April 1954
235	1 April 1954	322A	1 July 1954	*421	15 January 1955
237	1 April 1954	324	1 July 1954	425	1 April 1954
240	1 July 1954	324A	1 October 1954	426A	1 April 1954
242	1 April 1954	324B	1 July 1954	426B	1 April 1954
242A	1 April 1954	330	1 July 1954	*426C	15 January 1955
244	1 April 1954	330A	1 October 1954	*426D	15 January 1955
244A	1 April 1954	331	1 April 1954	*427	15 January 1955
244B	1 April 1954	341	1 July 1954	430	1 April 1954
247	1 July 1954	342	1 July 1954	430A	1 April 1954
248	1 July 1954	*342A	15 January 1955	432	1 July 1954
254	1 July 1954	*342B	15 January 1955	*432A	15 January 1955
255	1 July 1954	342C	1 October 1954	438	1 July 1954
264	1 April 1954	342D	1 April 1954	438A	1 July 1954
266	1 April 1954	343	1 April 1954	438B	1 April 1954
269	1 July 1954	346	1 April 1954	438C	1 April 1954
*277	15 January 1955	346A	1 April 1954	438D	1 April 1954
278	1 July 1954	346B	1 April 1954	438E	1 April 1954
279 Deleted	1 July 1954	*346C	15 January 1955	439	1 April 1954
280 Deleted	1 July 1954	346D	1 July 1954	*440	15 January 1955
281	1 July 1954	*346E	15 January 1955	441	1 July 1954
282A	1 July 1954	346F	1 July 1954	442	1 April 1954
283	1 July 1954	347	1 July 1954	444	1 April 1954
284	1 April 1954	348	1 July 1954	445	1 April 1954
284A	1 July 1954	348A	1 April 1954	446	1 July 1954
286	1 July 1954	349	1 April 1954	450	1 April 1954
286A	1 July 1954	352	1 April 1954	451	1 April 1954
287	1 April 1954	356	1 April 1954	454	1 April 1954
288	1 July 1954	358	1 April 1954	461	1 July 1954
293	1 July 1954	361	1 April 1954	462	1 July 1954
294	1 July 1954	364	1 April 1954	462A	1 July 1954
294A	1 July 1954	364A	1 April 1954	*462B	15 January 1955
294B	1 July 1954	366	1 July 1954	*462C	15 January 1955
294C	1 July 1954	366A	1 April 1954	*462D	15 January 1955
294D	1 July 1954	367	1 April 1954	*462E	15 January 1955
294E	1 October 1954	368A	1 April 1954	*465	15 January 1955
294F	1 October 1954	368B	1 April 1954	*466	15 January 1955
294G	1 July 1954	369	1 April 1954	*466A	15 January 1955
295	1 October 1954	372A	1 April 1954	*466B	15 January 1955
*296	15 January 1955	373	1 July 1954	466C	1 October 1954
*296A	15 January 1955	375	1 April 1954	466D	1 October 1954
297	1 July 1954	376	1 April 1954	466E	1 October 1954
298	1 July 1954	376A	1 April 1954	*466F	15 January 1955
299 Deleted	1 July 1954	385	1 April 1954	*467	15 January 1955
300 Deleted	1 July 1954	387	1 April 1954	470A	1 April 1954
301 Deleted	1 July 1954	388	1 July 1954	470B	1 July 1954
302 Deleted	1 July 1954	389	1 April 1954	470C	1 July 1954

* The asterisk indicates pages revised, added or deleted by the current revision.

LIST OF REVISED PAGES ISSUED

<i>Page No.</i>	<i>Date of Latest Revision</i>	<i>Page No.</i>	<i>Date of Latest Revision</i>
470D	1 July 1954	*509	15 January 1955
470E	1 April 1954	*510	15 January 1955
471	1 April 1954		
472	1 July 1954		
472A	1 October 1954		
472B	1 July 1954		
472C	1 July 1954		
472D	1 July 1954		
472E	1 October 1954		
476	1 July 1954		
476A	1 October 1954		
477	1 April 1954		
478	1 April 1954		
478A	1 April 1954		
*478B	15 January 1955		
*478C	15 January 1955		
*478D	15 January 1955		
*478E	15 January 1955		
*480	15 January 1955		
*480A	15 January 1955		
480B	1 October 1954		
480C	1 October 1954		
481	1 July 1954		
483	1 July 1954		
484	1 April 1954		
484A	1 April 1954		
486	1 April 1954		
486A	1 July 1954		
486B	1 October 1954		
486C	1 October 1954		
486D	1 October 1954		
488A	1 April 1954		
489	1 July 1954		
490	1 July 1954		
*490A	15 January 1955		
*490B	15 January 1955		
490C	1 October 1954		
491	1 October 1954		
496	1 April 1954		
497	1 April 1954		
*498	15 January 1955		
498A	1 October 1954		
*498B	15 January 1955		
*499	15 January 1955		
*500	15 January 1955		
500A	1 October 1954		
*500B	15 January 1955		
*500C	15 January 1955		
*500D	15 January 1955		
*500E	15 January 1955		
*500F	15 January 1955		
*500G	15 January 1955		
*500H	15 January 1955		
*500J	15 January 1955		
*500K	15 January 1955		
*500L	15 January 1955		
*500M	15 January 1955		
501	1 July 1954		
*502	15 January 1955		
503	1 October 1954		
*504	15 January 1955		
*505	15 January 1955		
*506	15 January 1955		
*507	15 January 1955		
*508	15 January 1955		

* The asterisk indicates pages revised, added or deleted by the current revision.

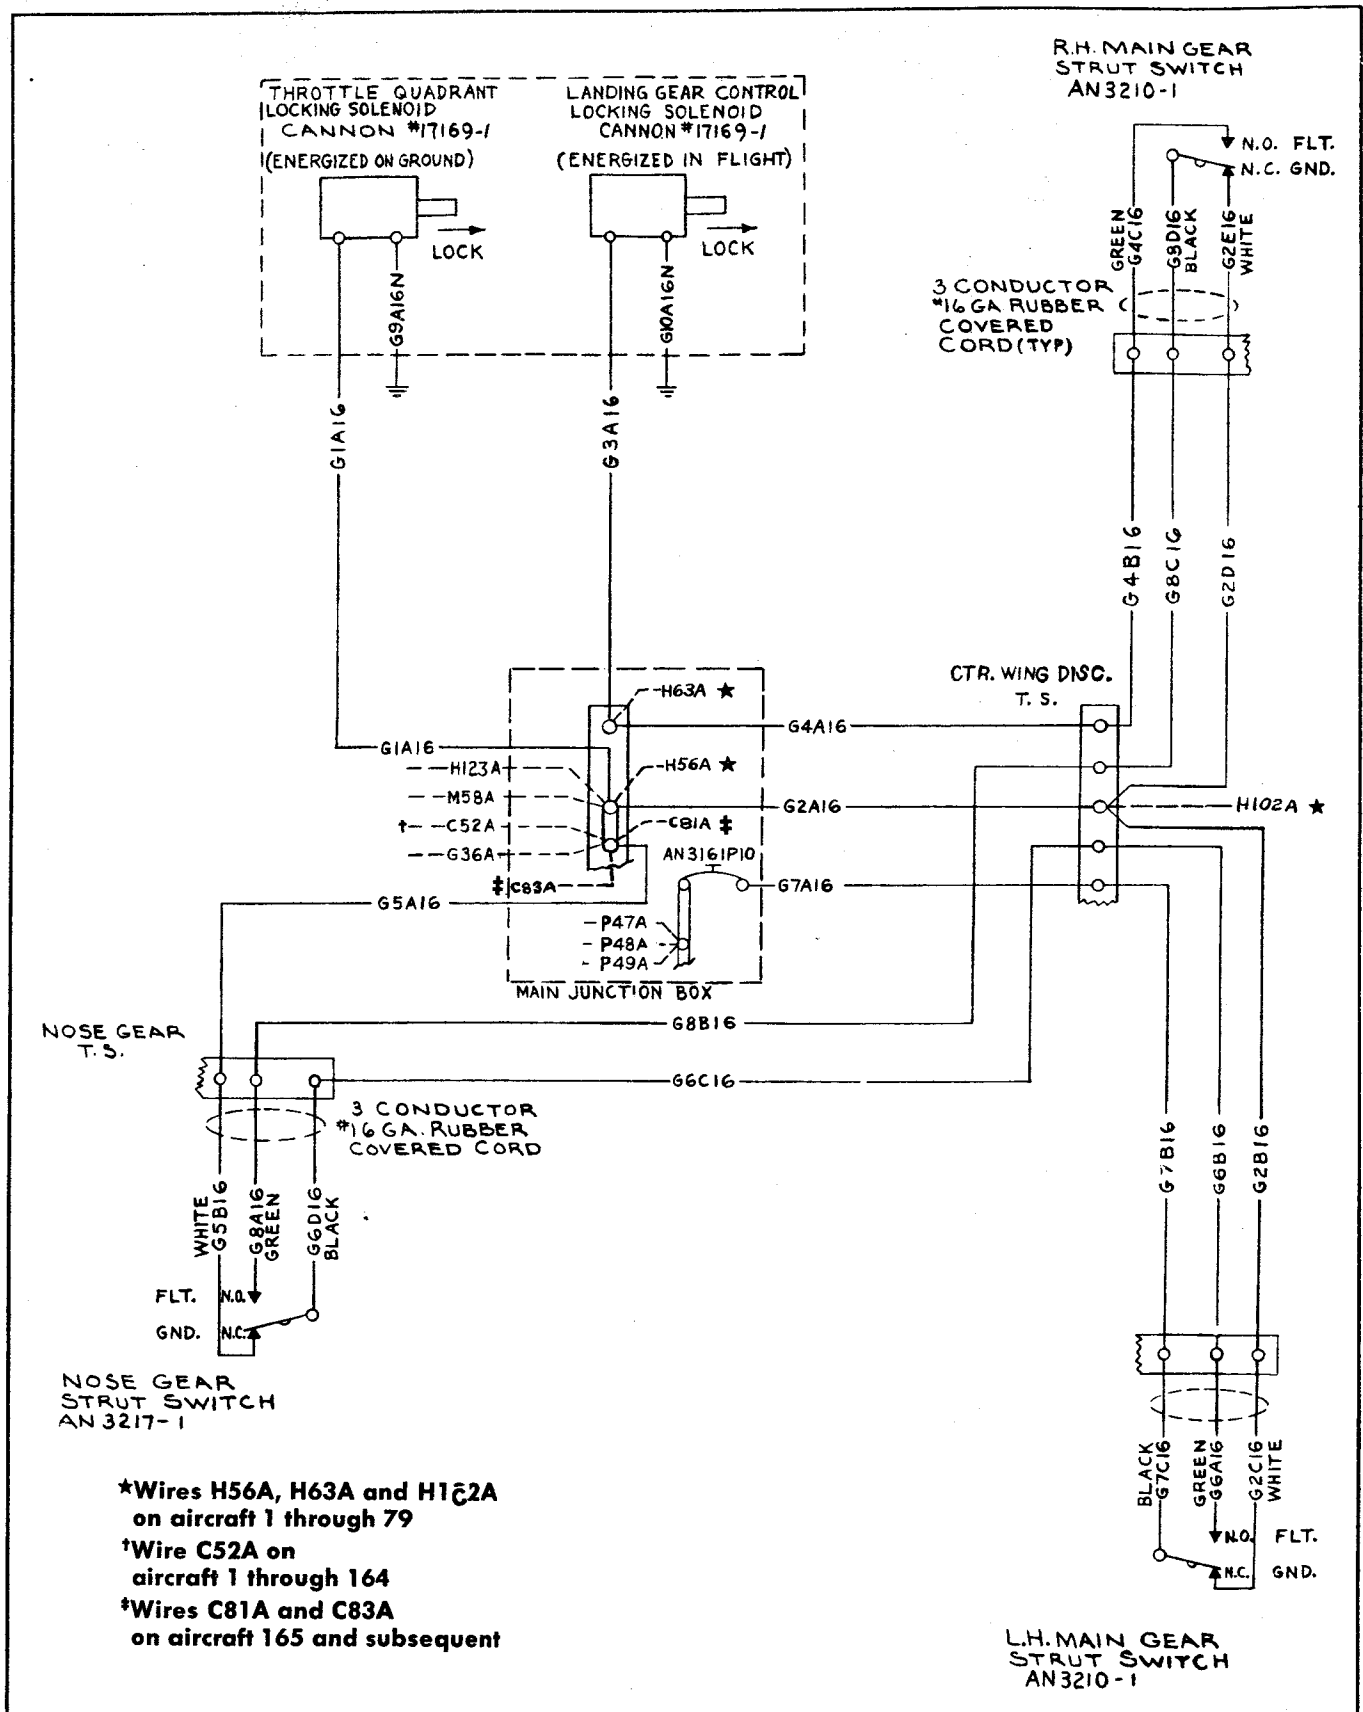


Figure 57. Alighting Gear Safety Switches and Throttle Quadrant Lock (Aircraft 1 through 214)



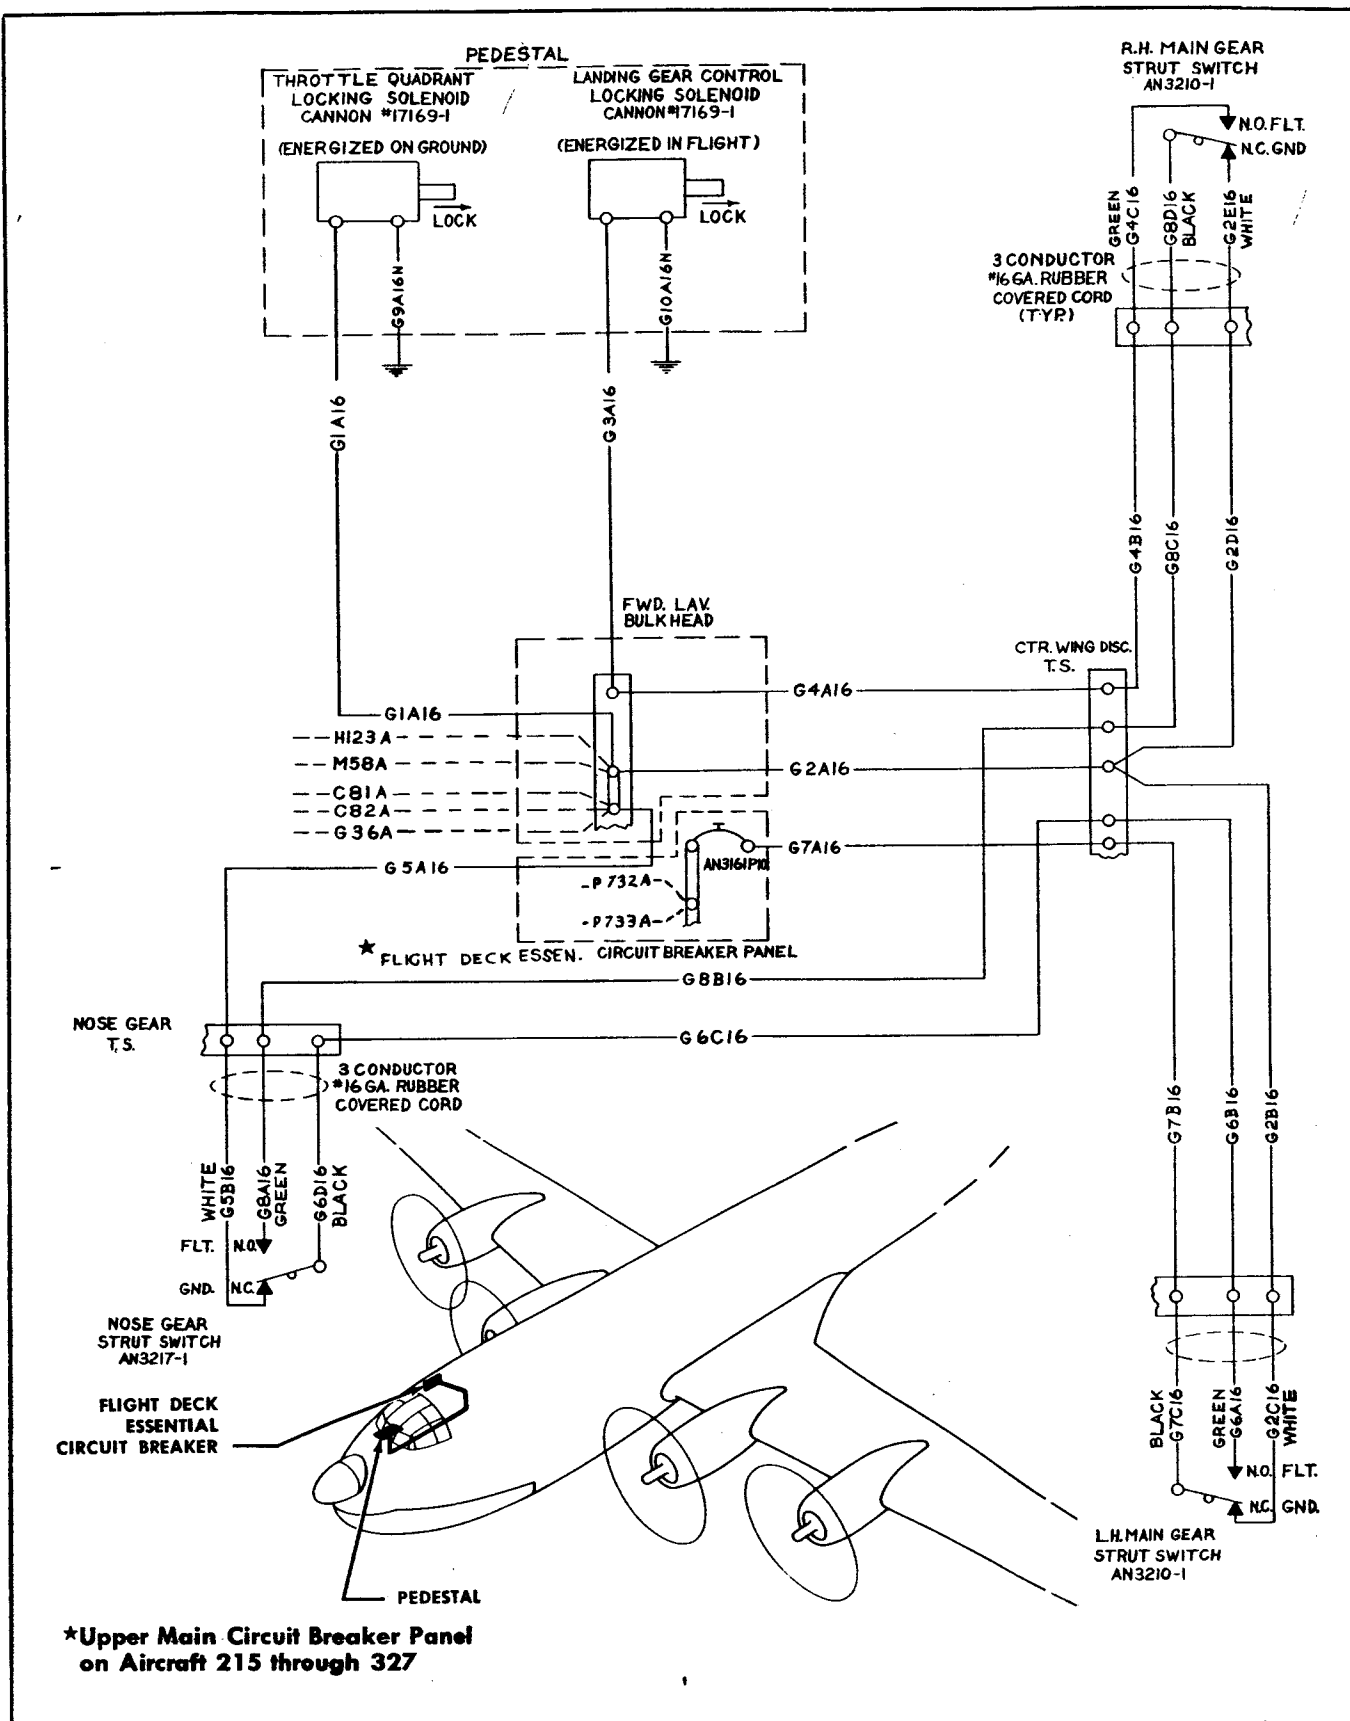


Figure 58. Alighting Gear Safety Switches and Throttle Quadrant Lock (Aircraft 215 and Subsequent)



Figure 72C. Heater – Flight Compartment (Aircraft 1 through 29)

 ALTERNATE VENT AIR BLOWER CIRCUITS -

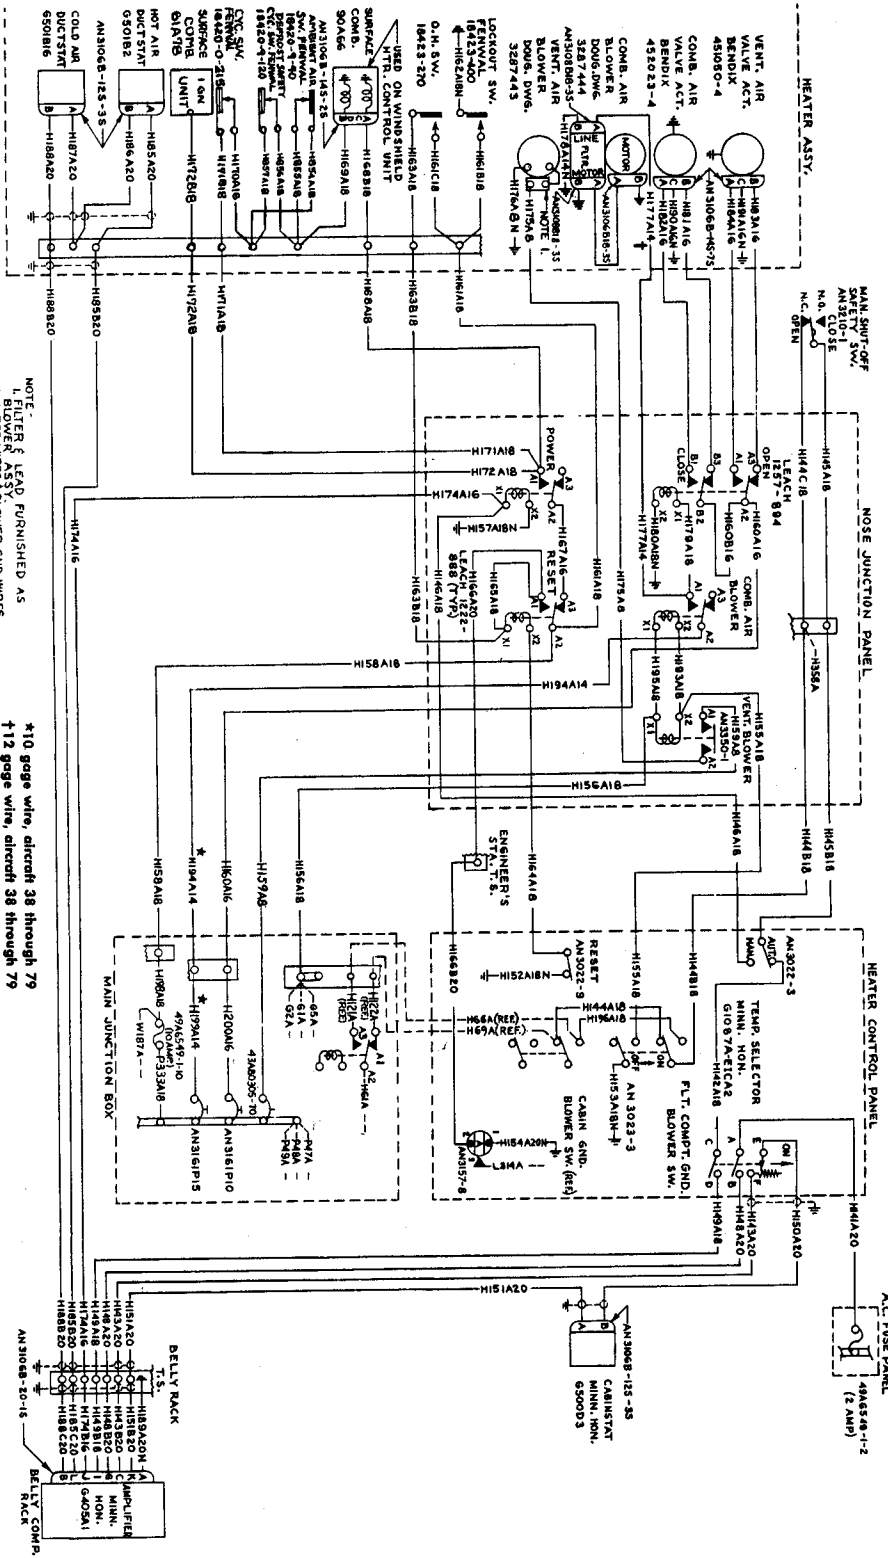

NOTE:
1. FILTER & LEAD FURNISHED AS
2. BLOWER ASSY. LOWER GND WIRES
3. MUST BE WIRING SHORT & DIRECT AS
POSSIBLE.

*10 gage wire, aircraft 38 through 79
†12 gage wire, aircraft 38 through 79

Figure 72D. Heater - Flight Compartment (Aircraft 30 through 79)

Figure 73 deleted.

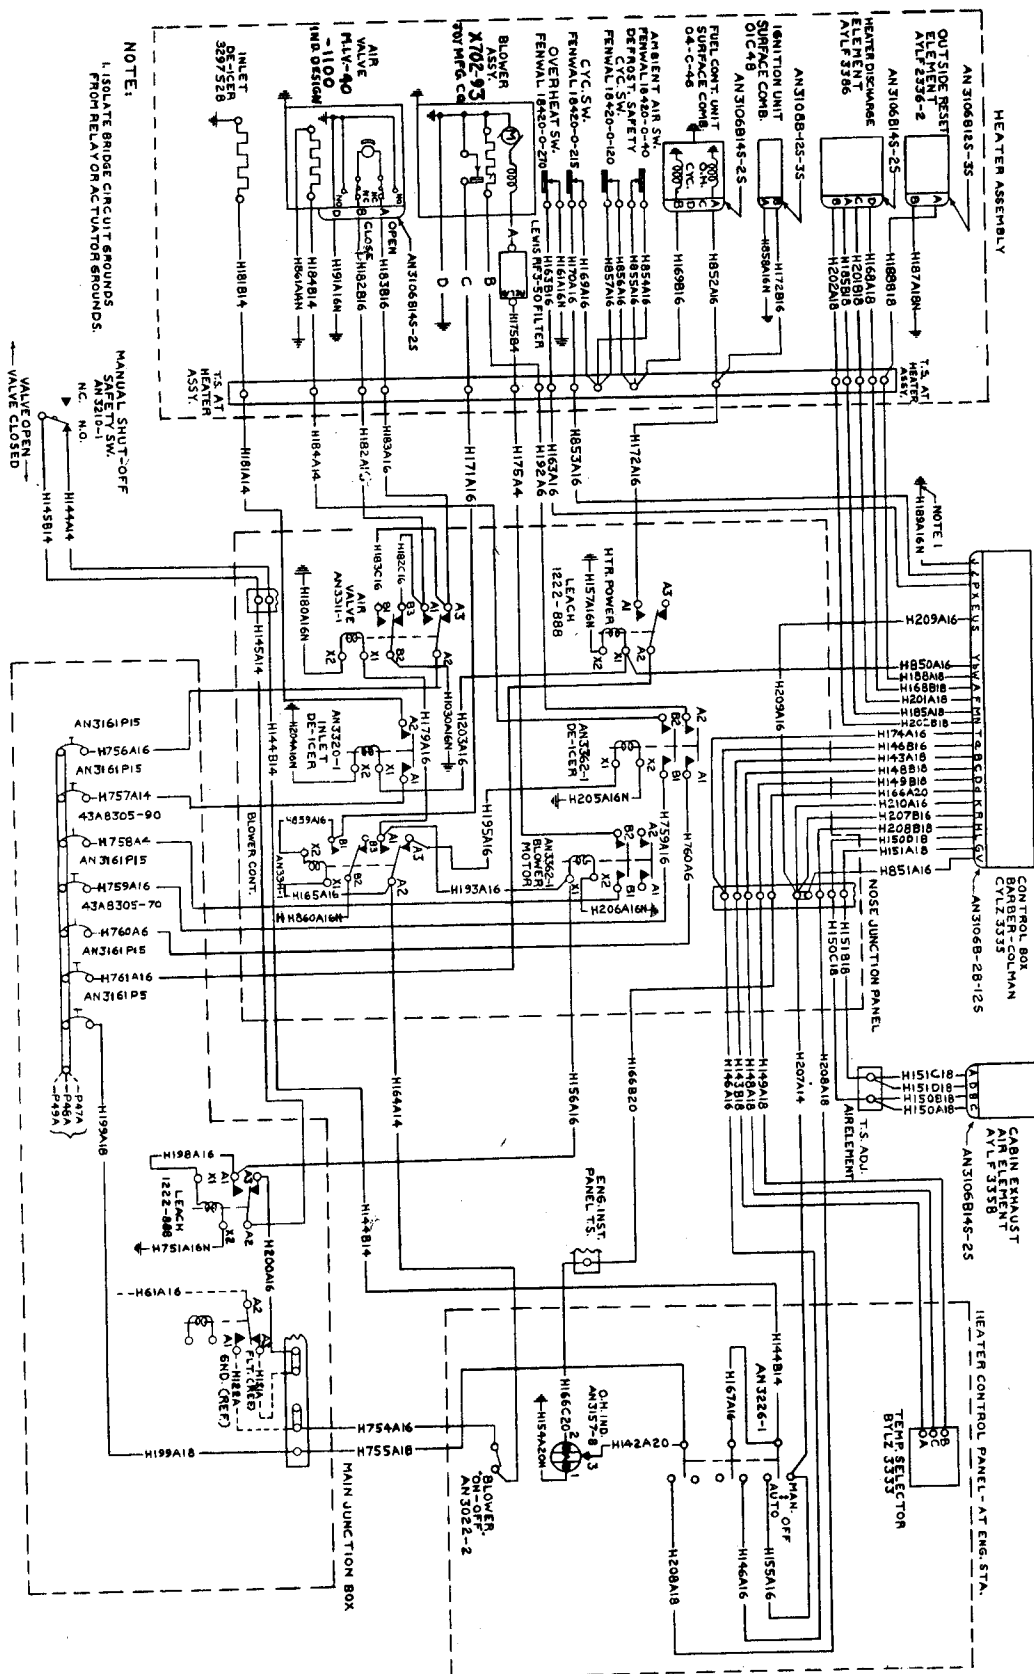


Figure 74. Heater - Flight Compartment (Aircraft 80 through 164)





06

- NOTE:
 ISOLATE BRIDGE CIRCUIT GROUNDS FROM
 RELAY OR ACTUATOR GROUNDS.
 1 SEE ALIGHTING GEAR SAFETY SWITCHES
 2 SEE THROTTLE QUADRANT LOCK
 3 SEE HEATER-ANTI-ICER
 4 SEE TAIL ANTI-ICER
 5 SEE HEATER-FLIGHT COMPARTMENT
 6 SEE D-C FEEDER SYSTEM

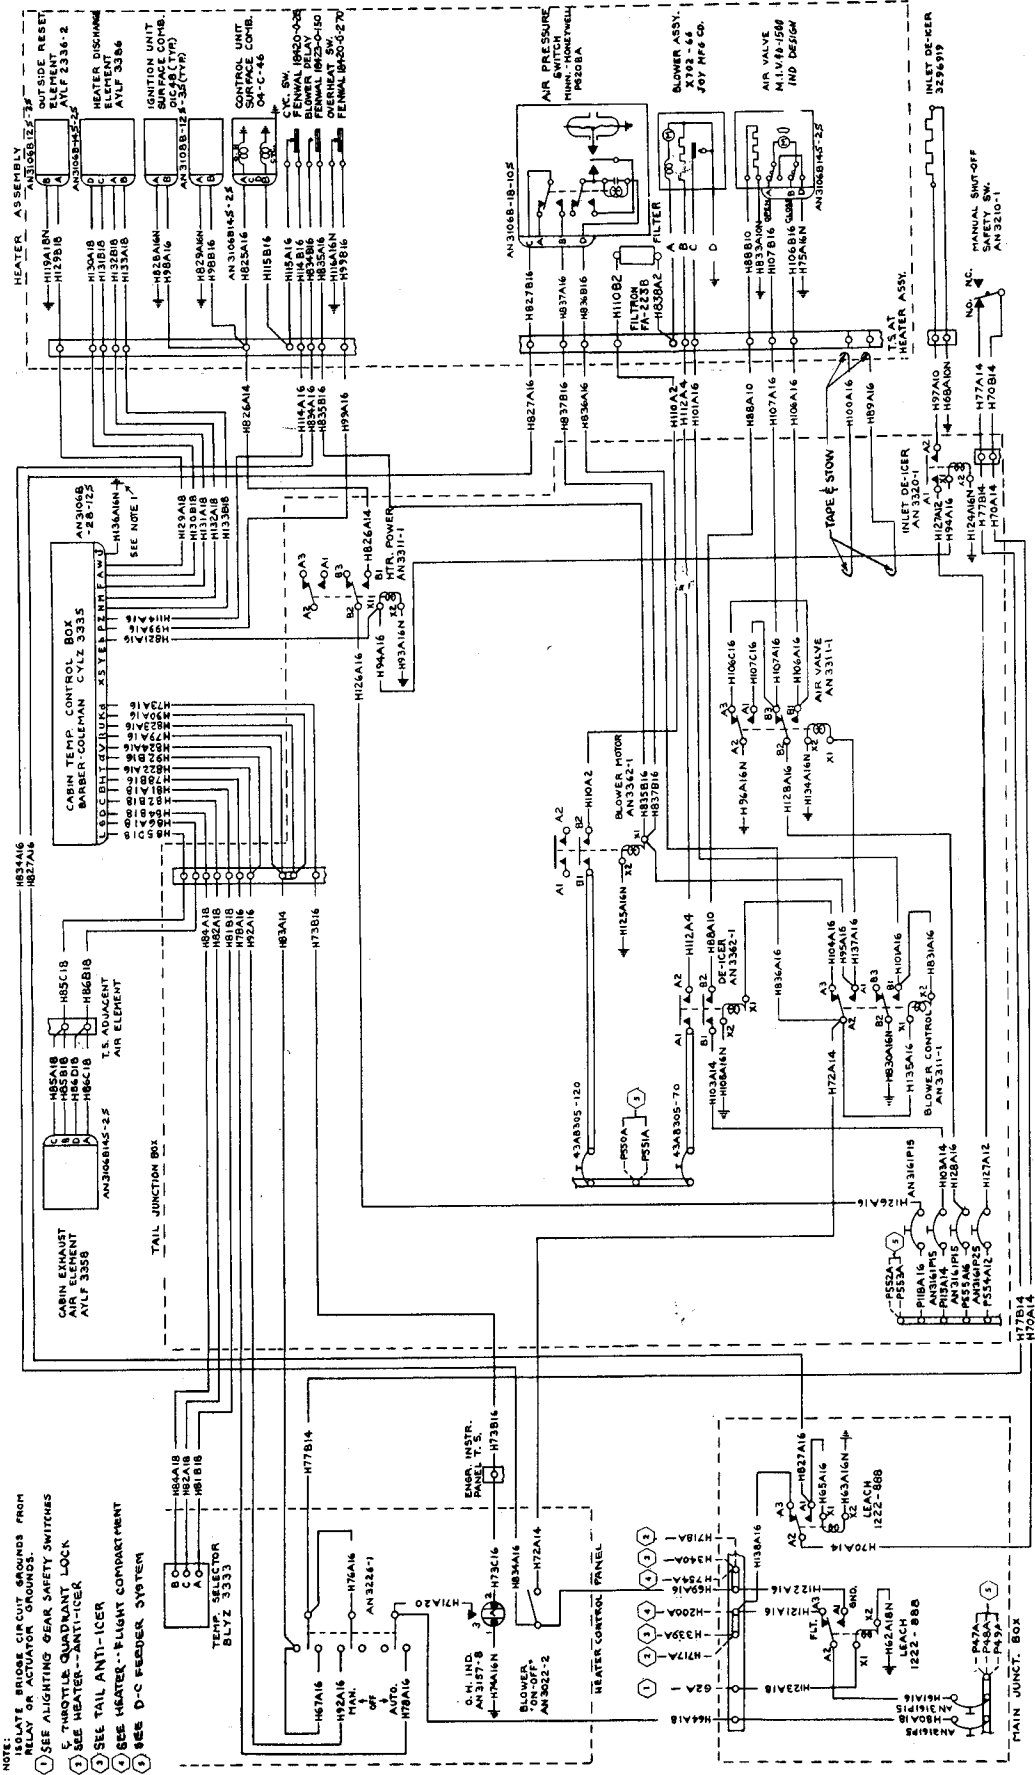


Figure 85. Heater - Cabin (Aircraft 115 through 129)



Revised 1 April 1954

Figure 112A deleted.



Revised 15 January 1955

118A

Revised 15 January 1955

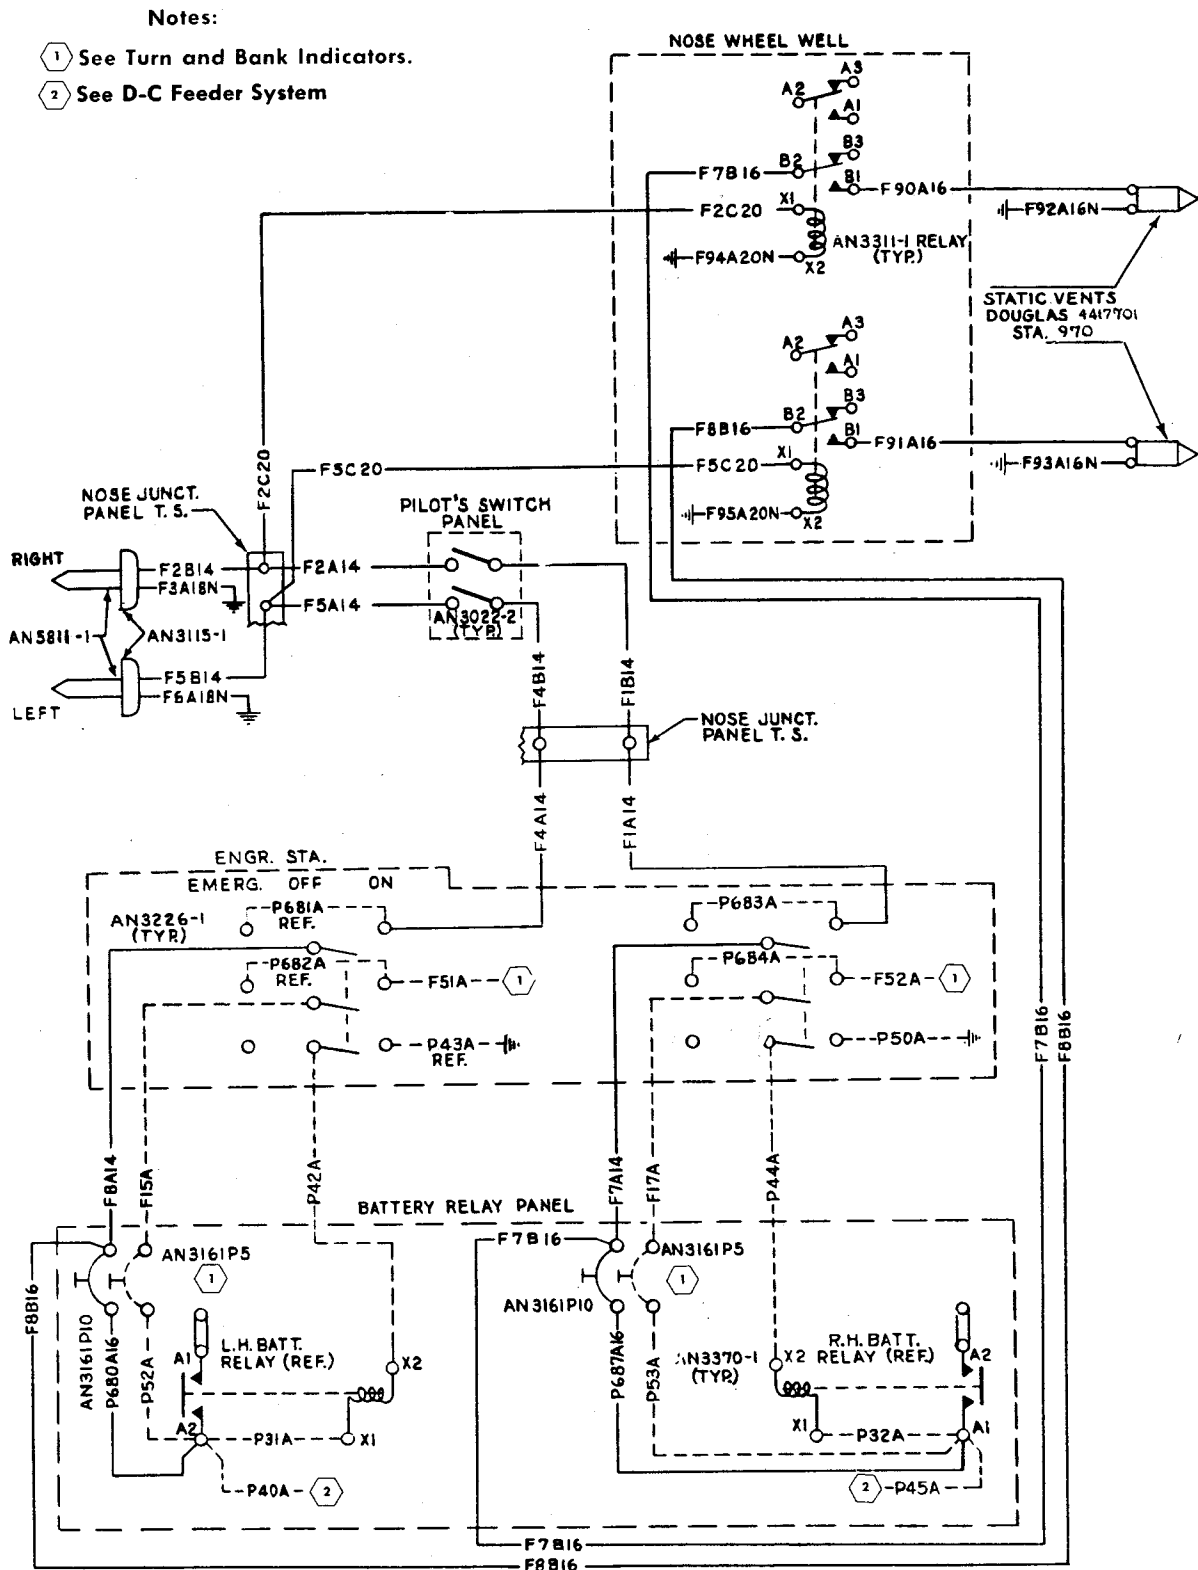


Figure 125A. Heater - Pitot Tube (Aircraft 1 through 164)

10,550

Figure 126 deleted.

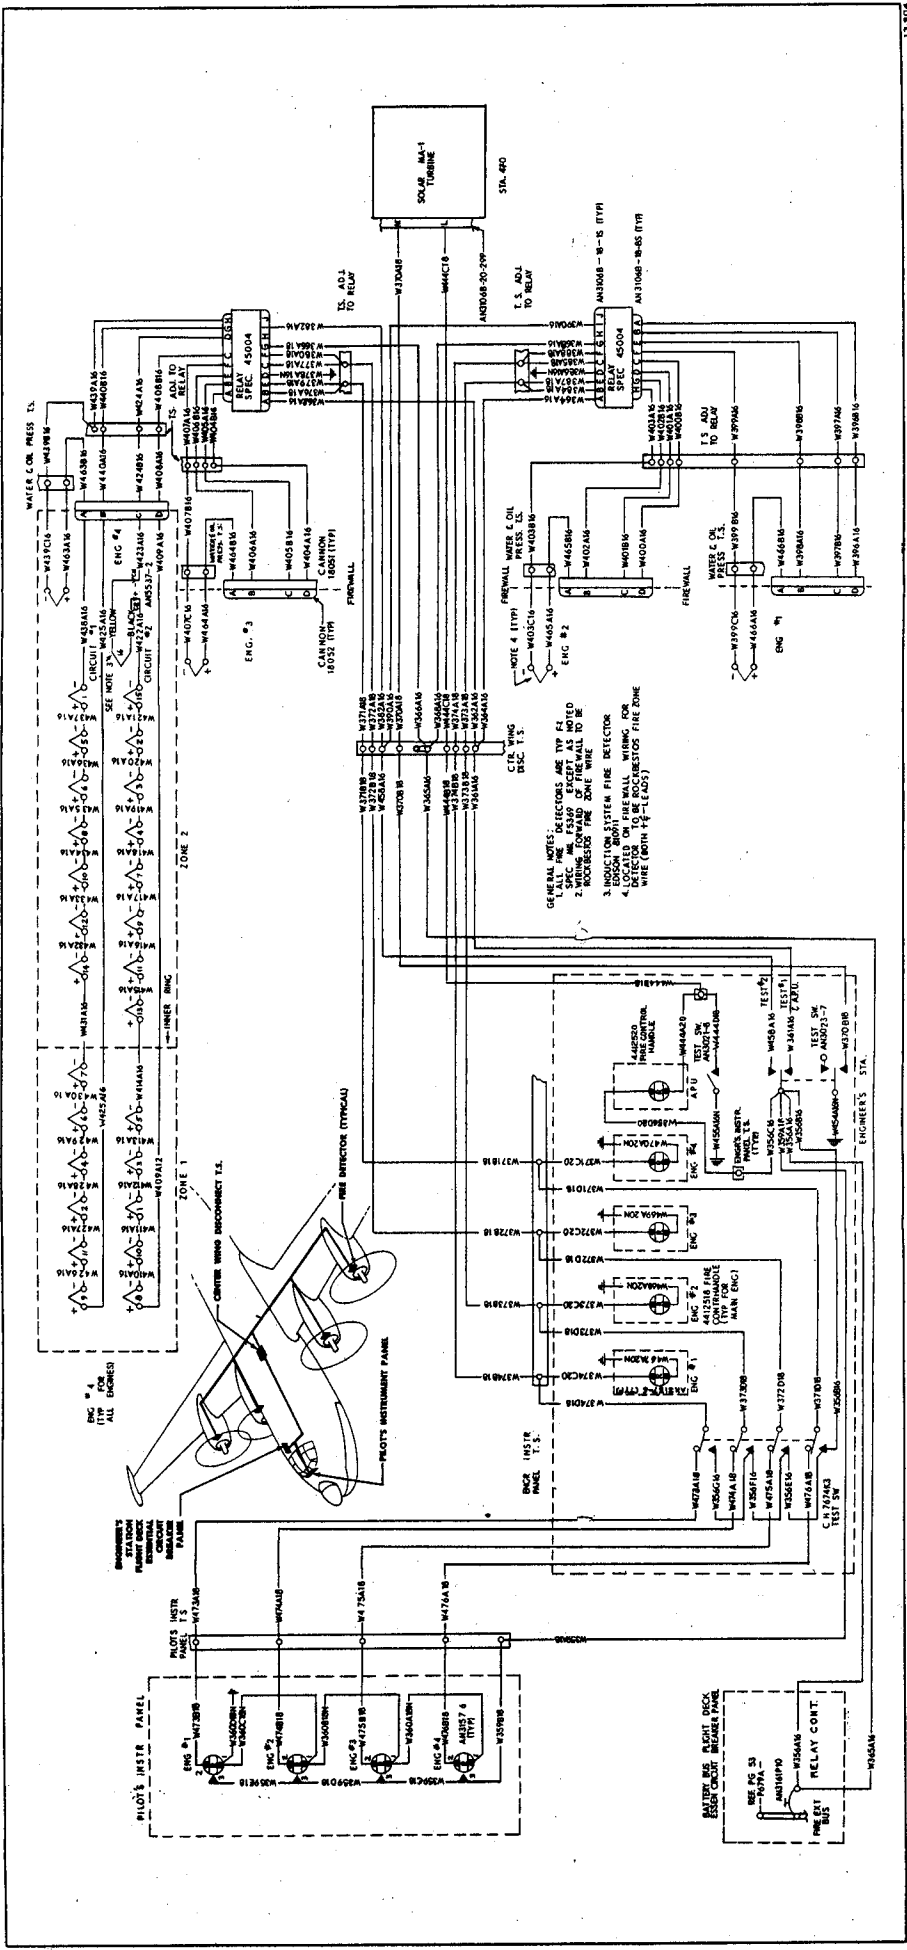


Figure 147. Fire Detectors - Engine and Auxiliary Power Plant (Aircraft 328 and Subsequent)



Figure 147A. Detectors — Generator and Alternator Overheat (Aircraft 422 and Subsequent,

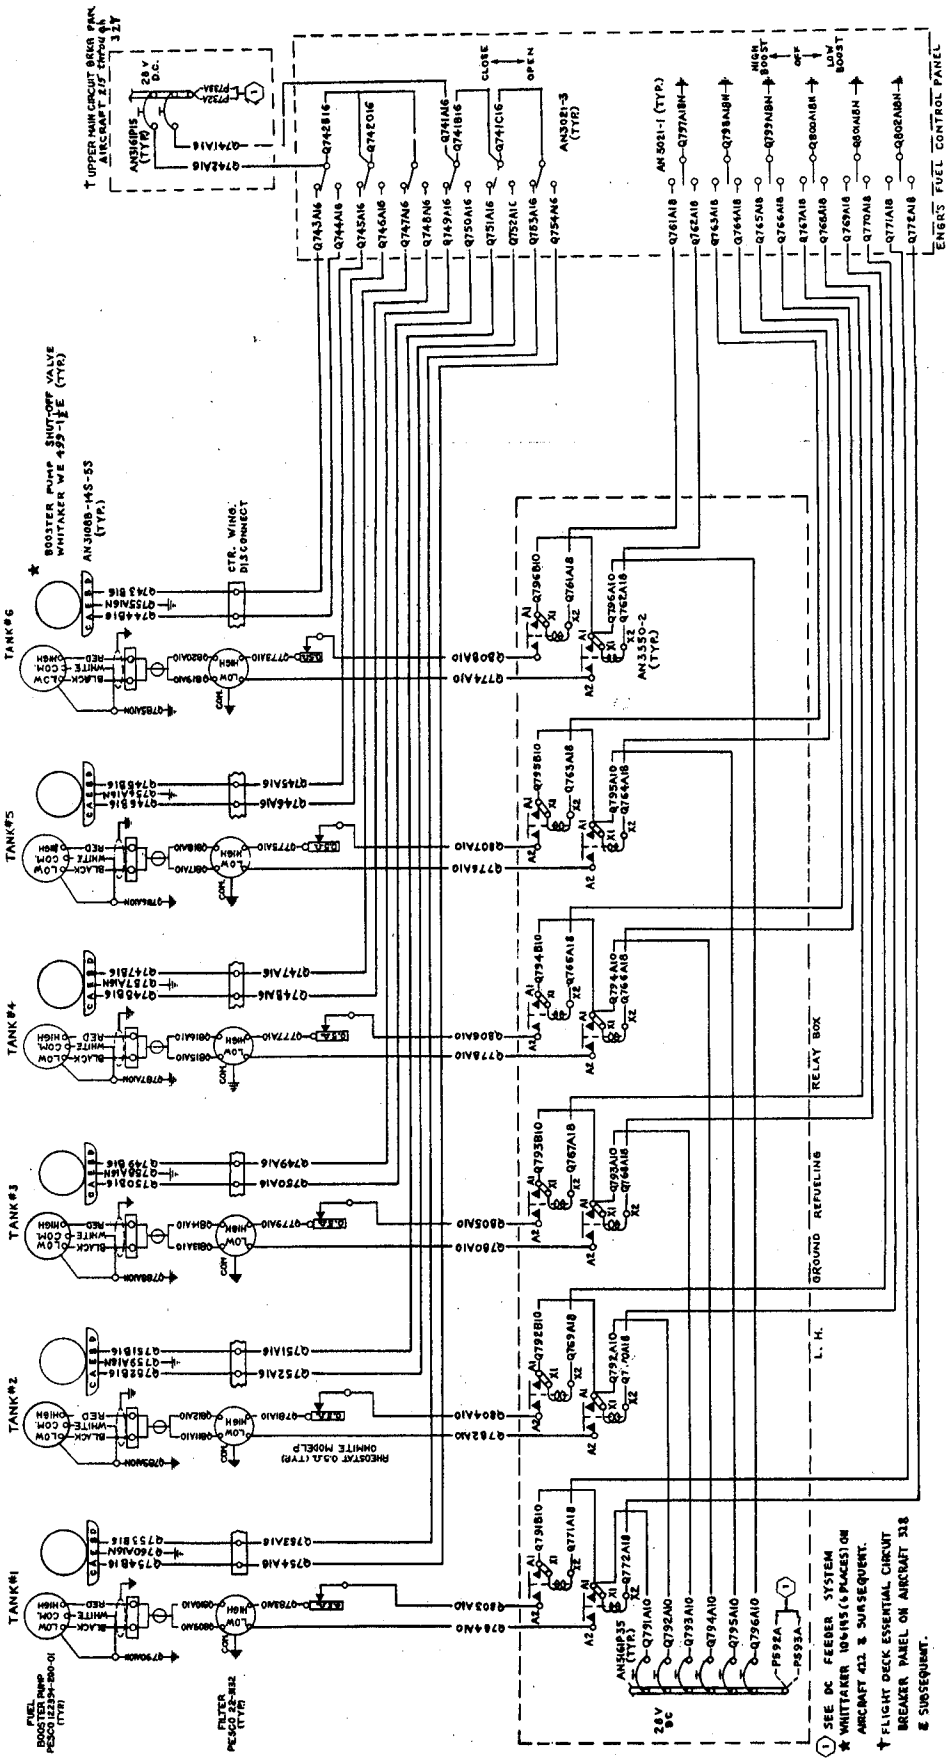


Figure 165. Fuel Booster Pump (Left Wing) (Aircraft 215 and Subsequent)

Figure 166 Deleted.

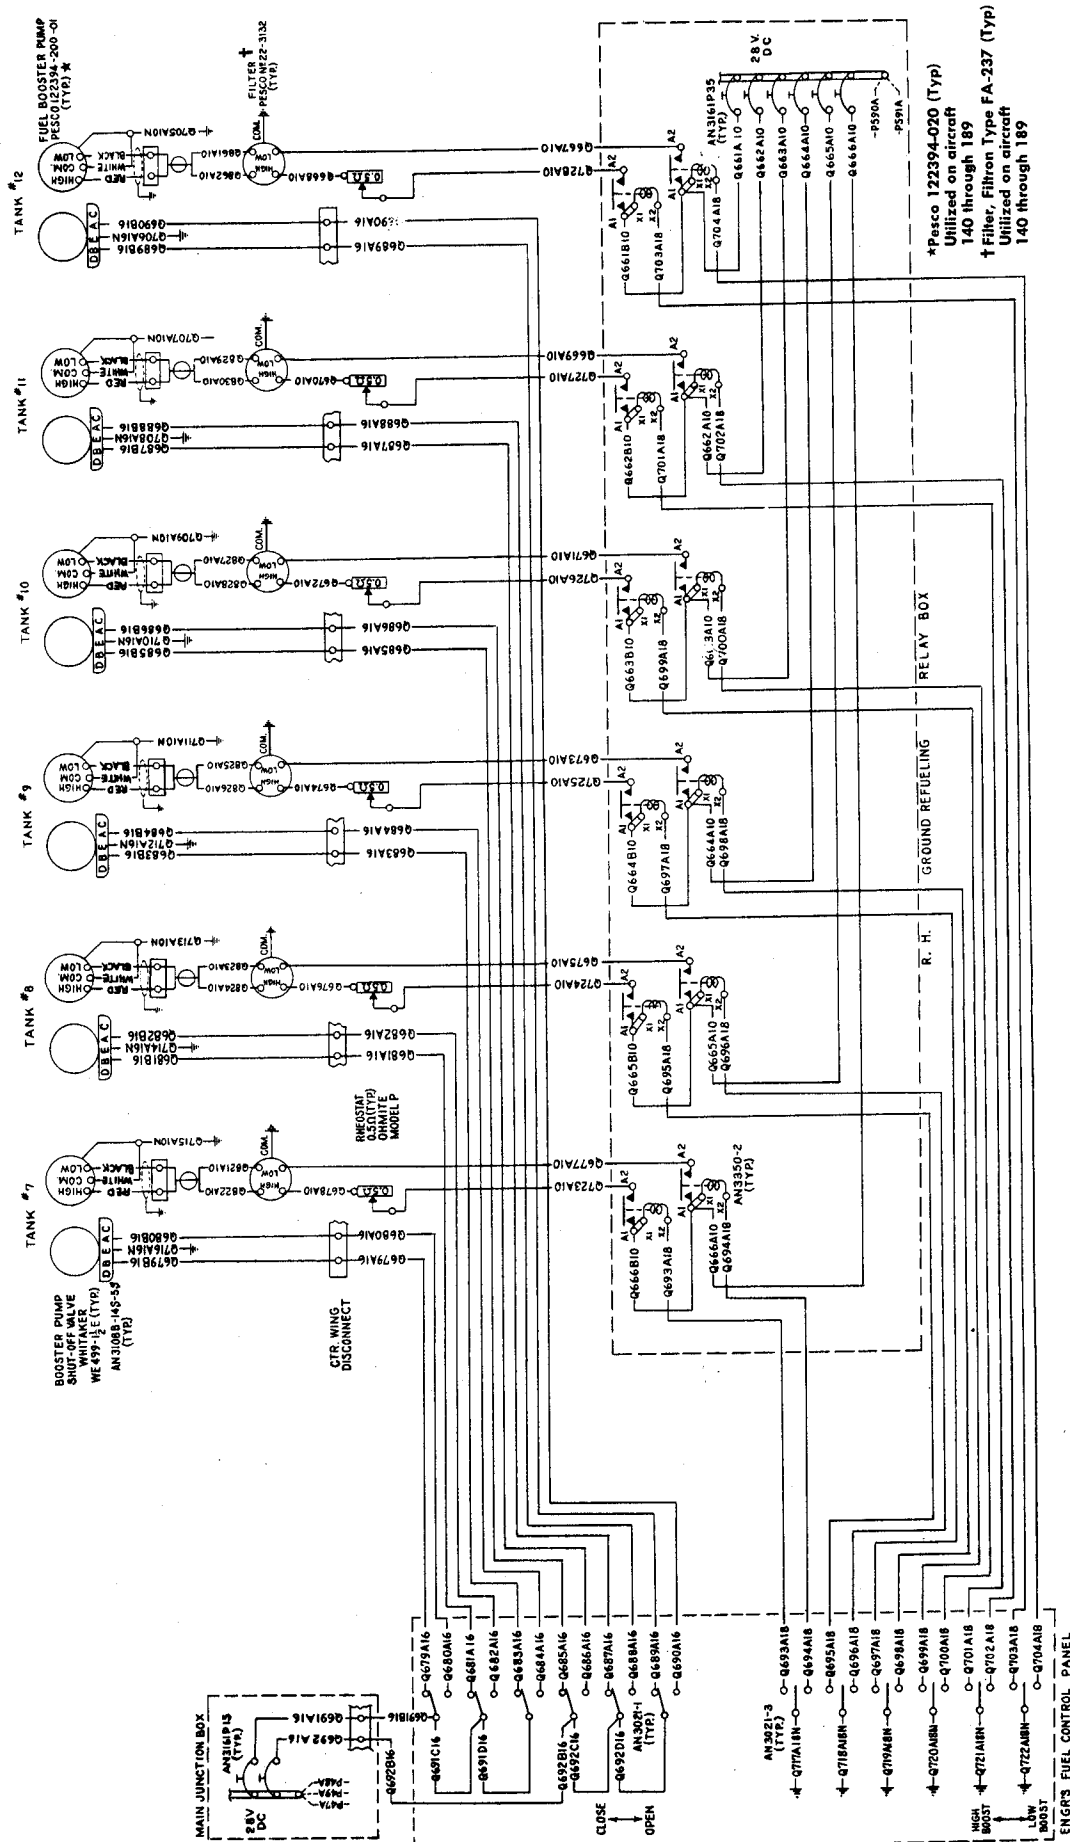


Figure 167. Fuel Booster Pump (Right Wing) (Aircraft 140 through 214)

Revised 1 July 1954

★Whitaker 106145 (typ) on aircraft 422 and subsequent

328 and subsequent



Figure 168. Fuel Booster Pump (Right Wing) (Aircraft 215 and Subsequent)

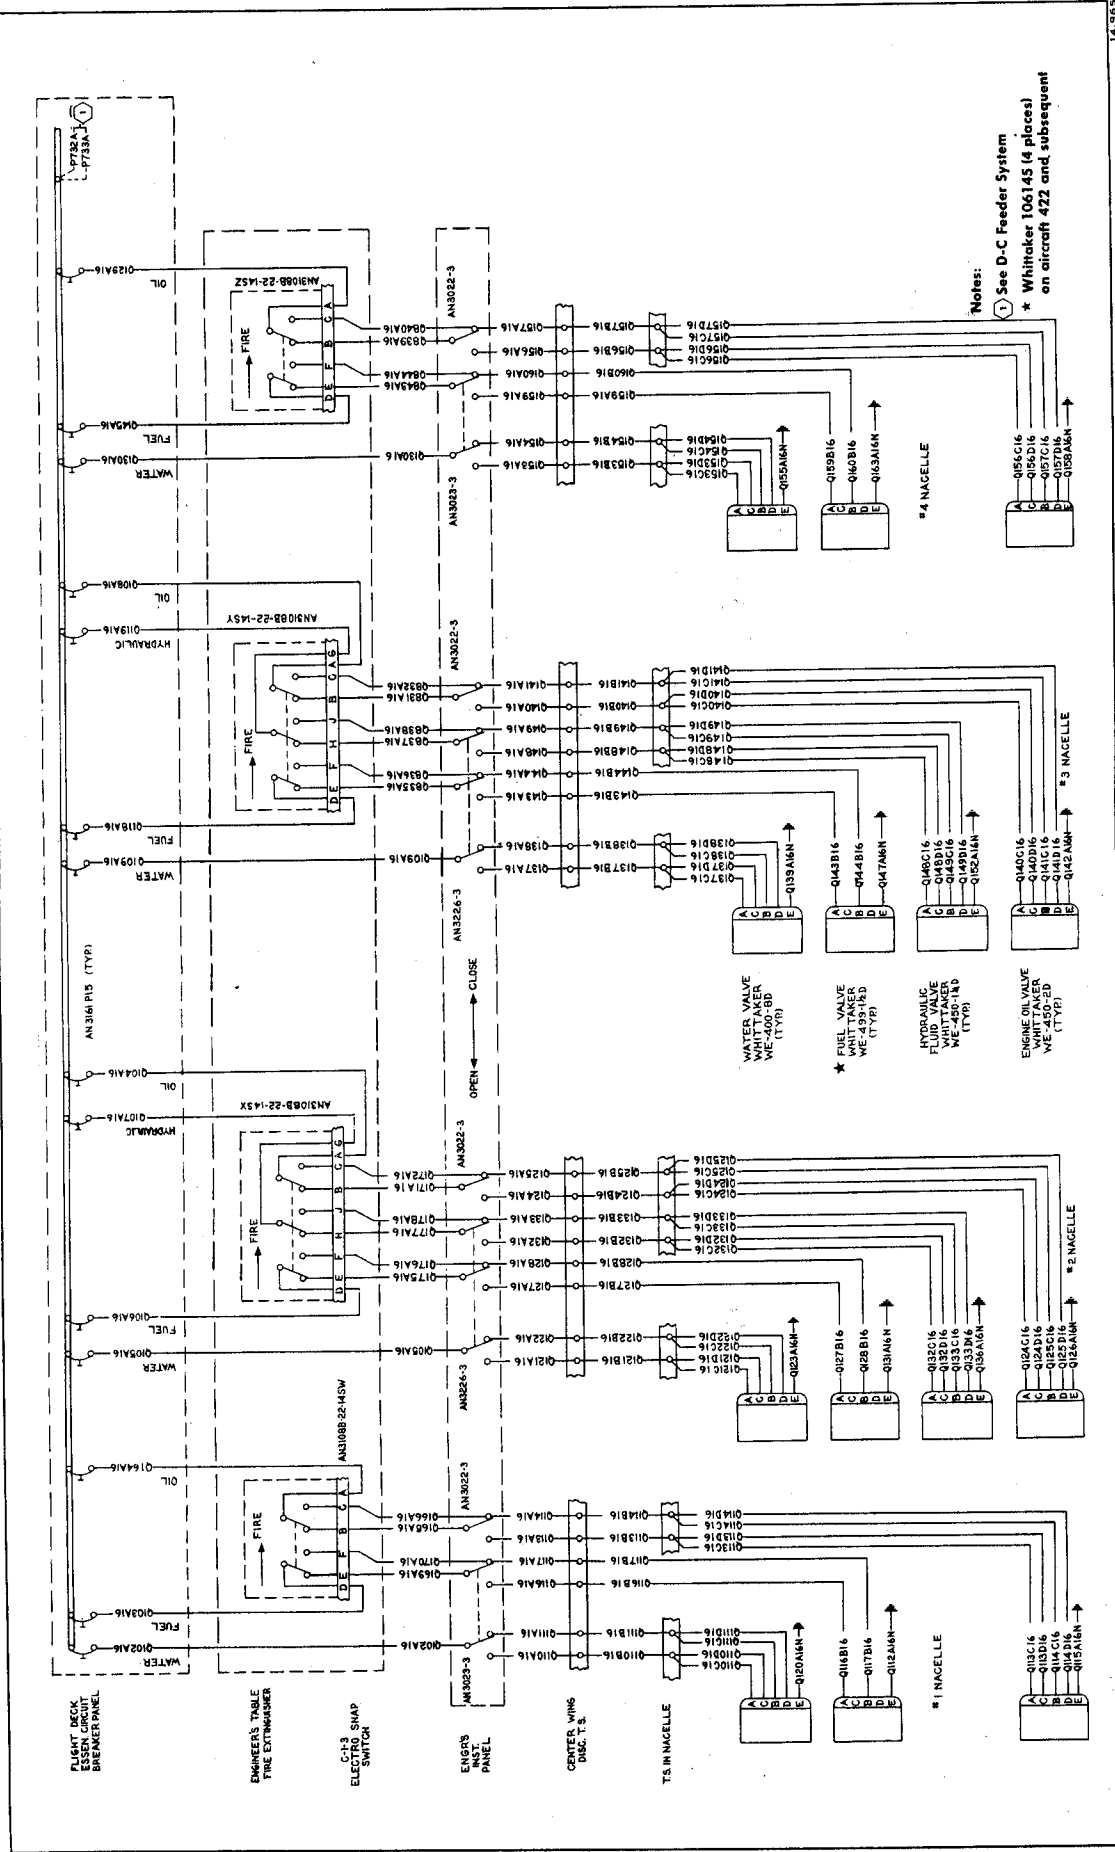


Figure 179A. Firewall Shutoff Valves (Aircraft 360 and Subsequent)


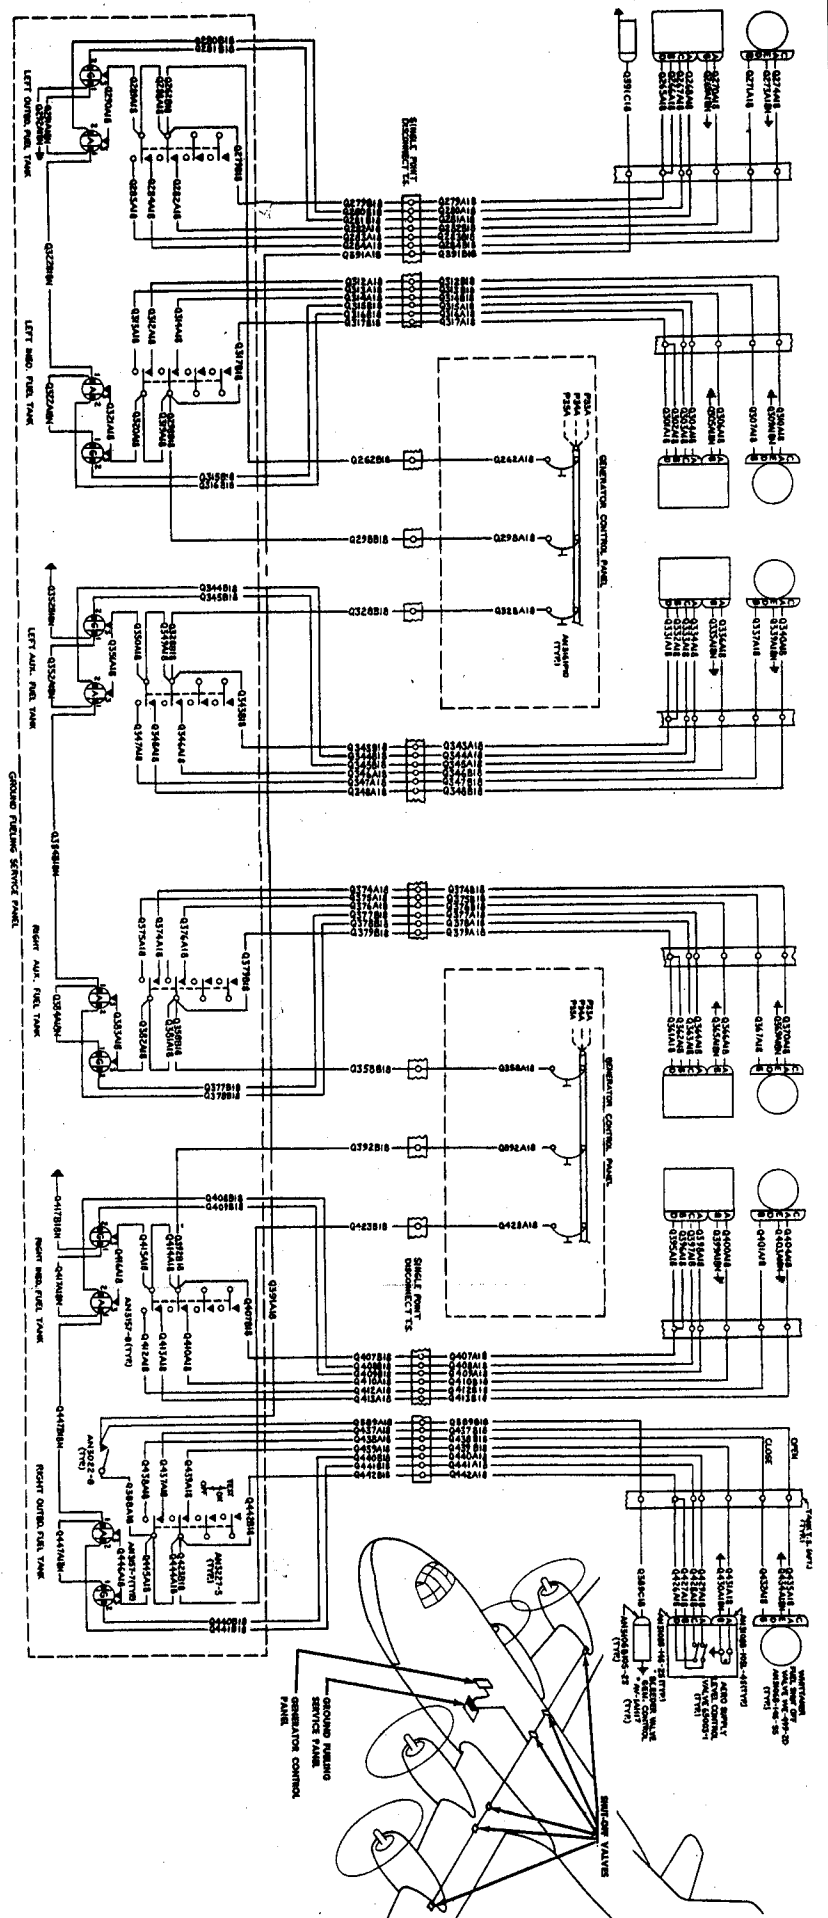


Figure 180. Fuel System - Single Point (Aircraft 80 through 139)

 

Revised 1 July 1954

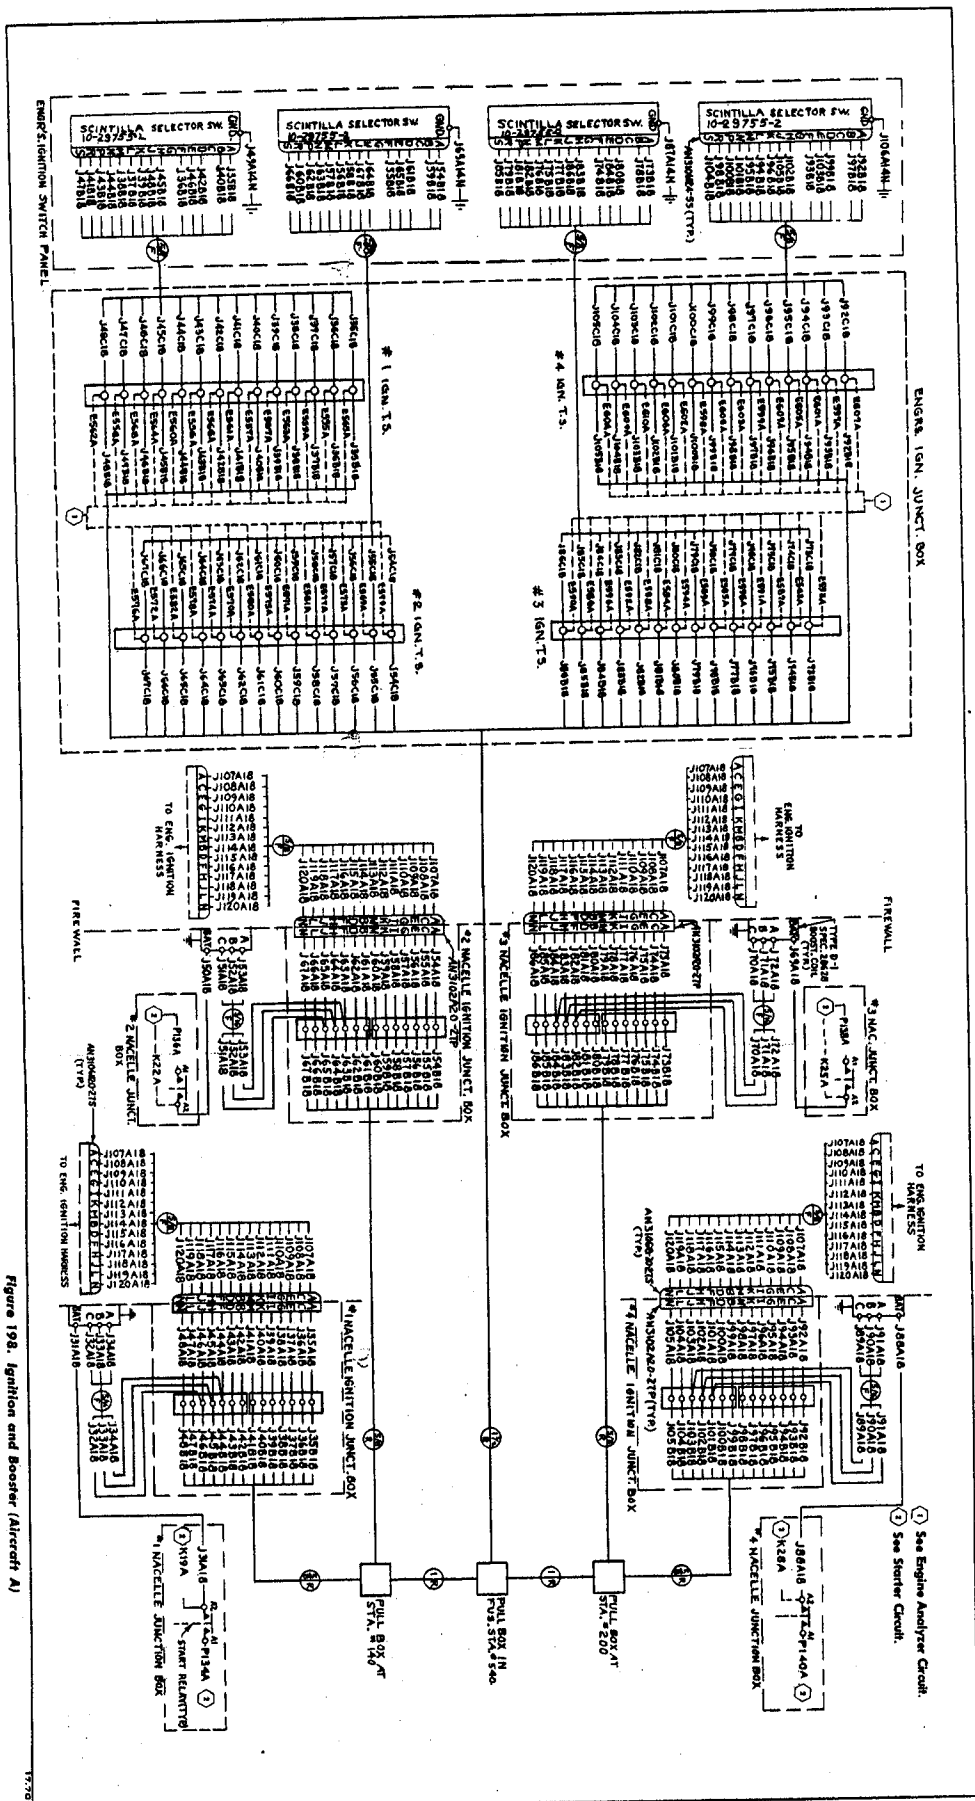


Figure 198. Ignition and Booster (Aircraft A)




Revised 15 January 1955

22

Figure 205. Propeller Control (Aircraft 1 through 29)

IO. IC-124A-2A

Wiring Data Supplement

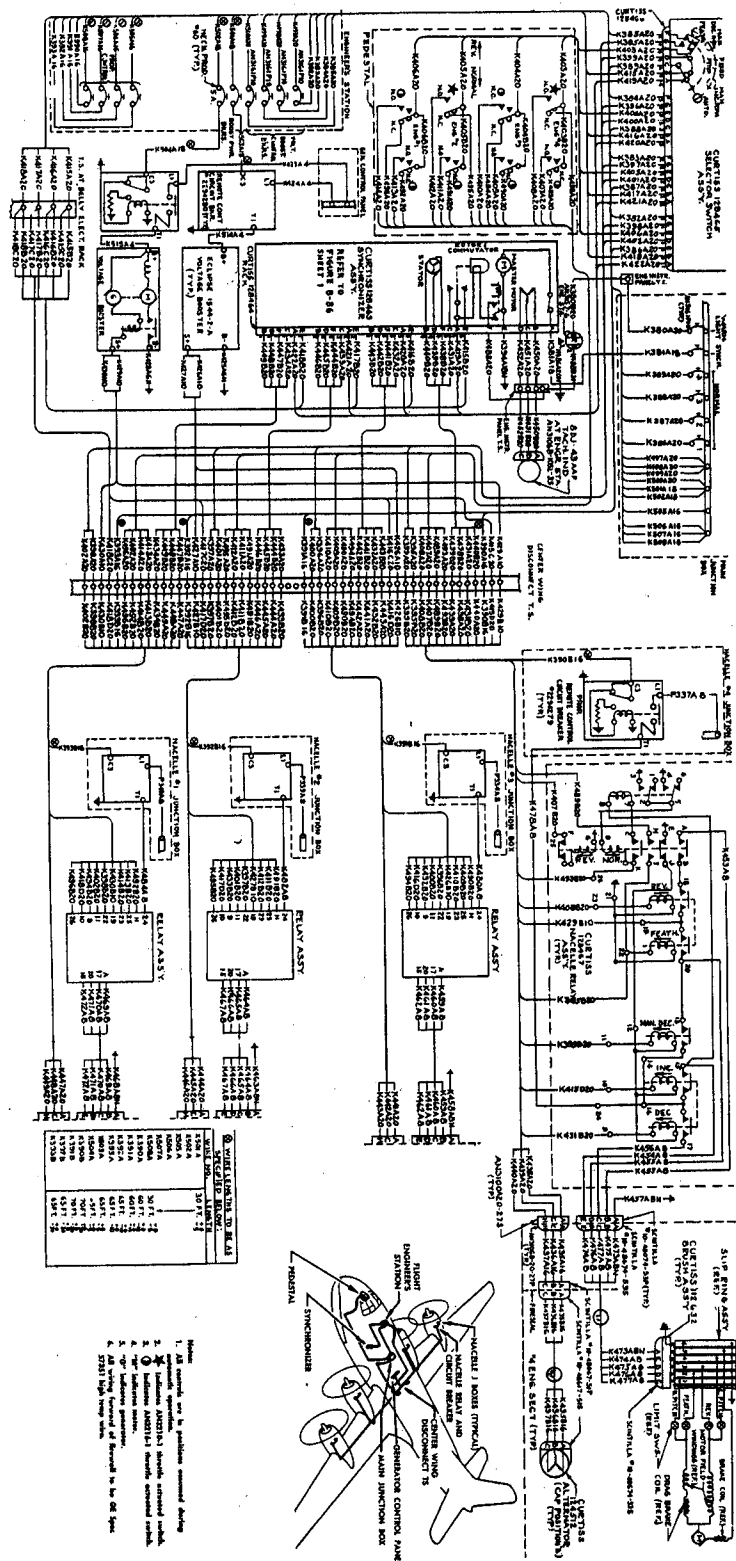



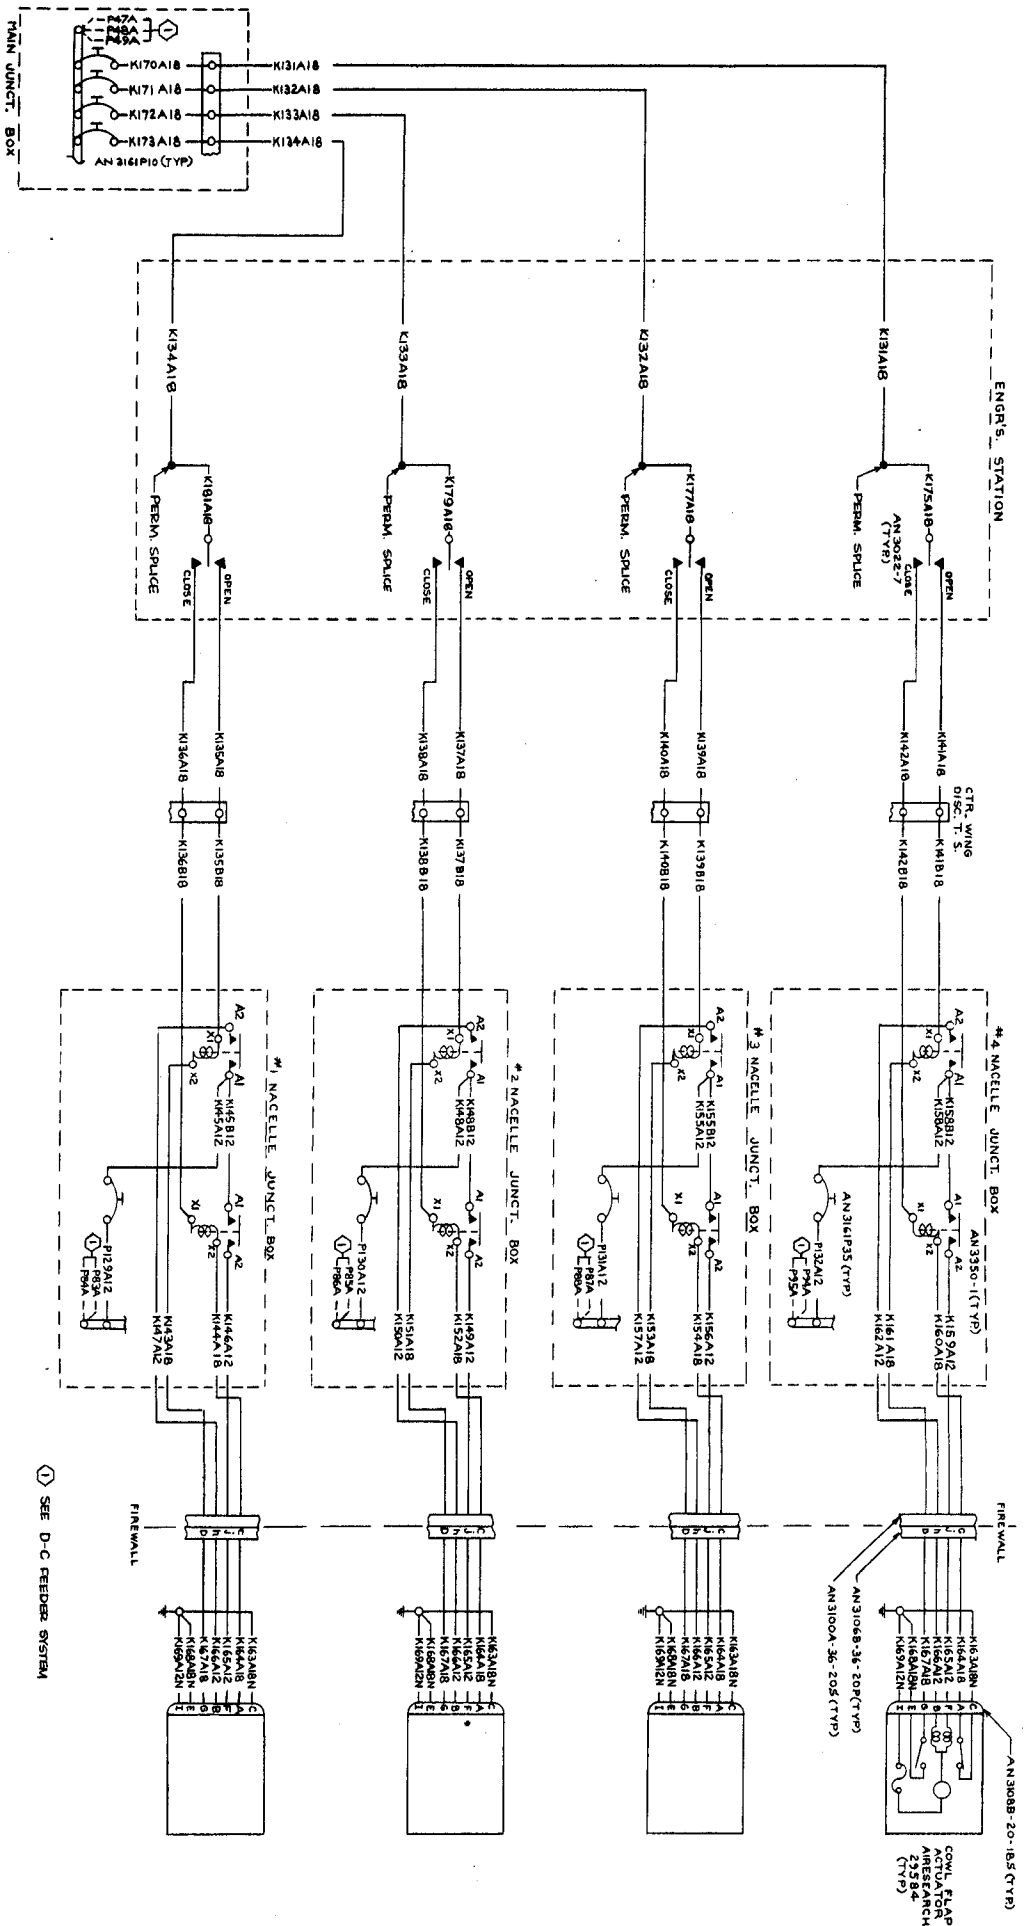


Figure 213. Cowl Flap Control (Aircraft 165 through 183)

revised 15 January 1955

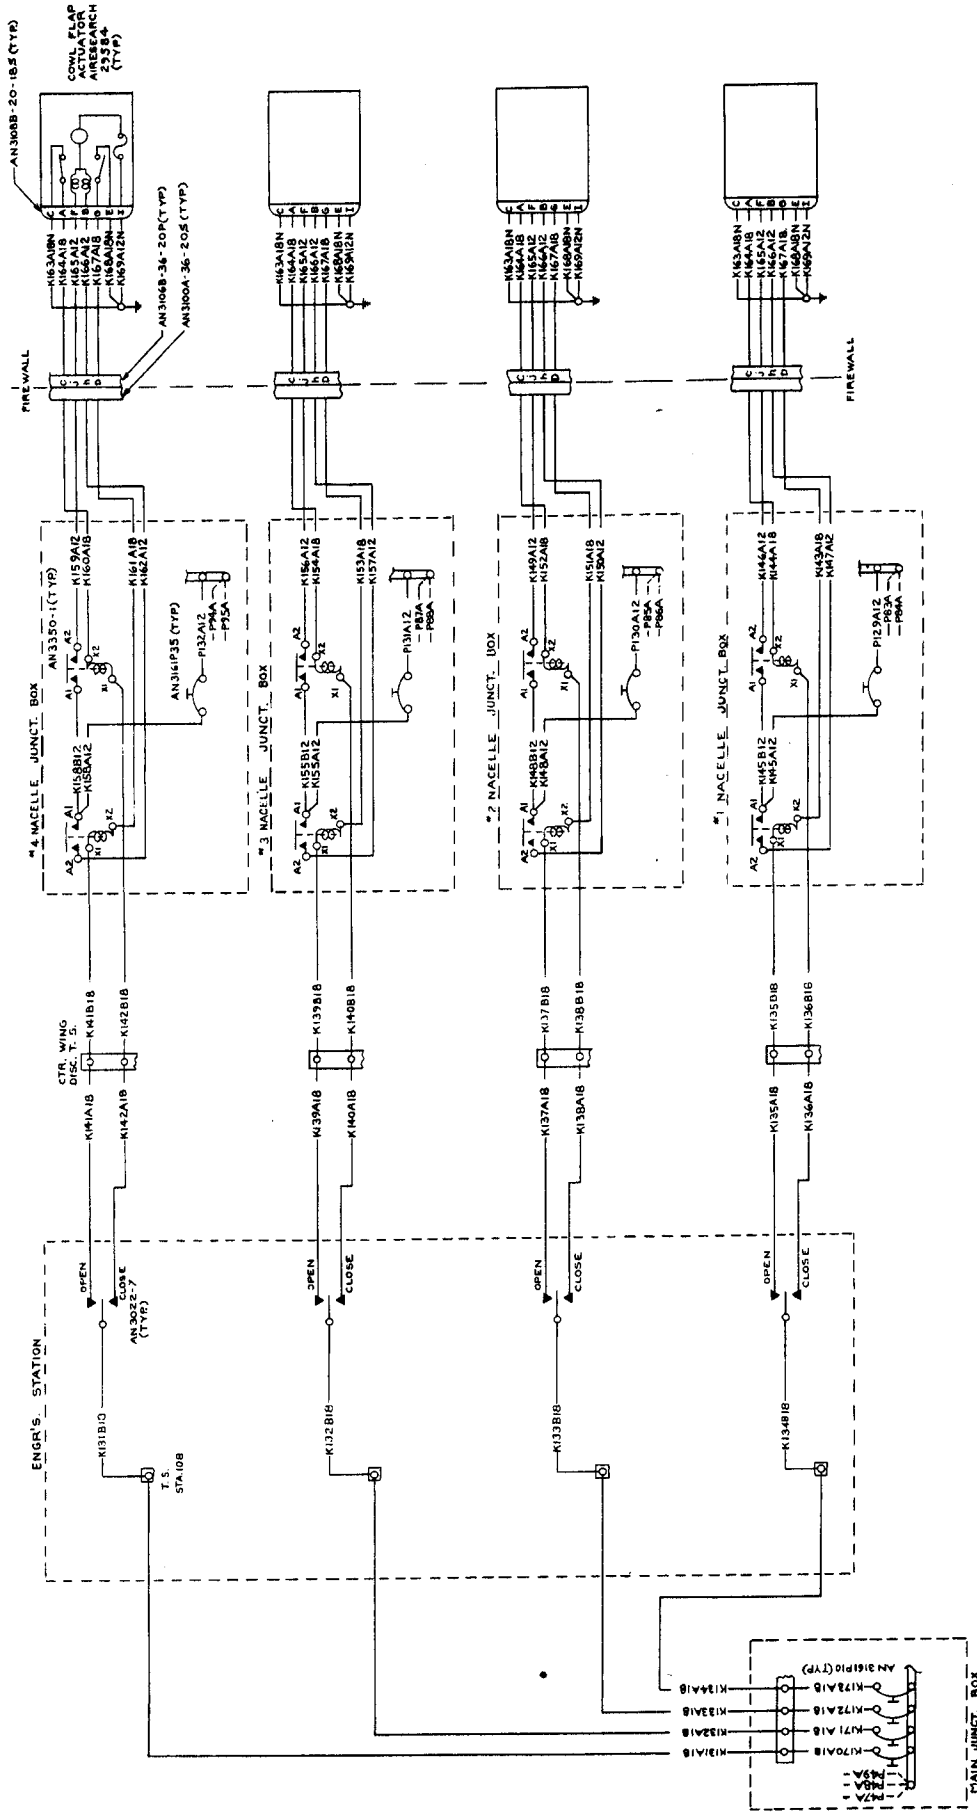


Figure 214. Cowl Flap Control (Aircraft 184 through 214)

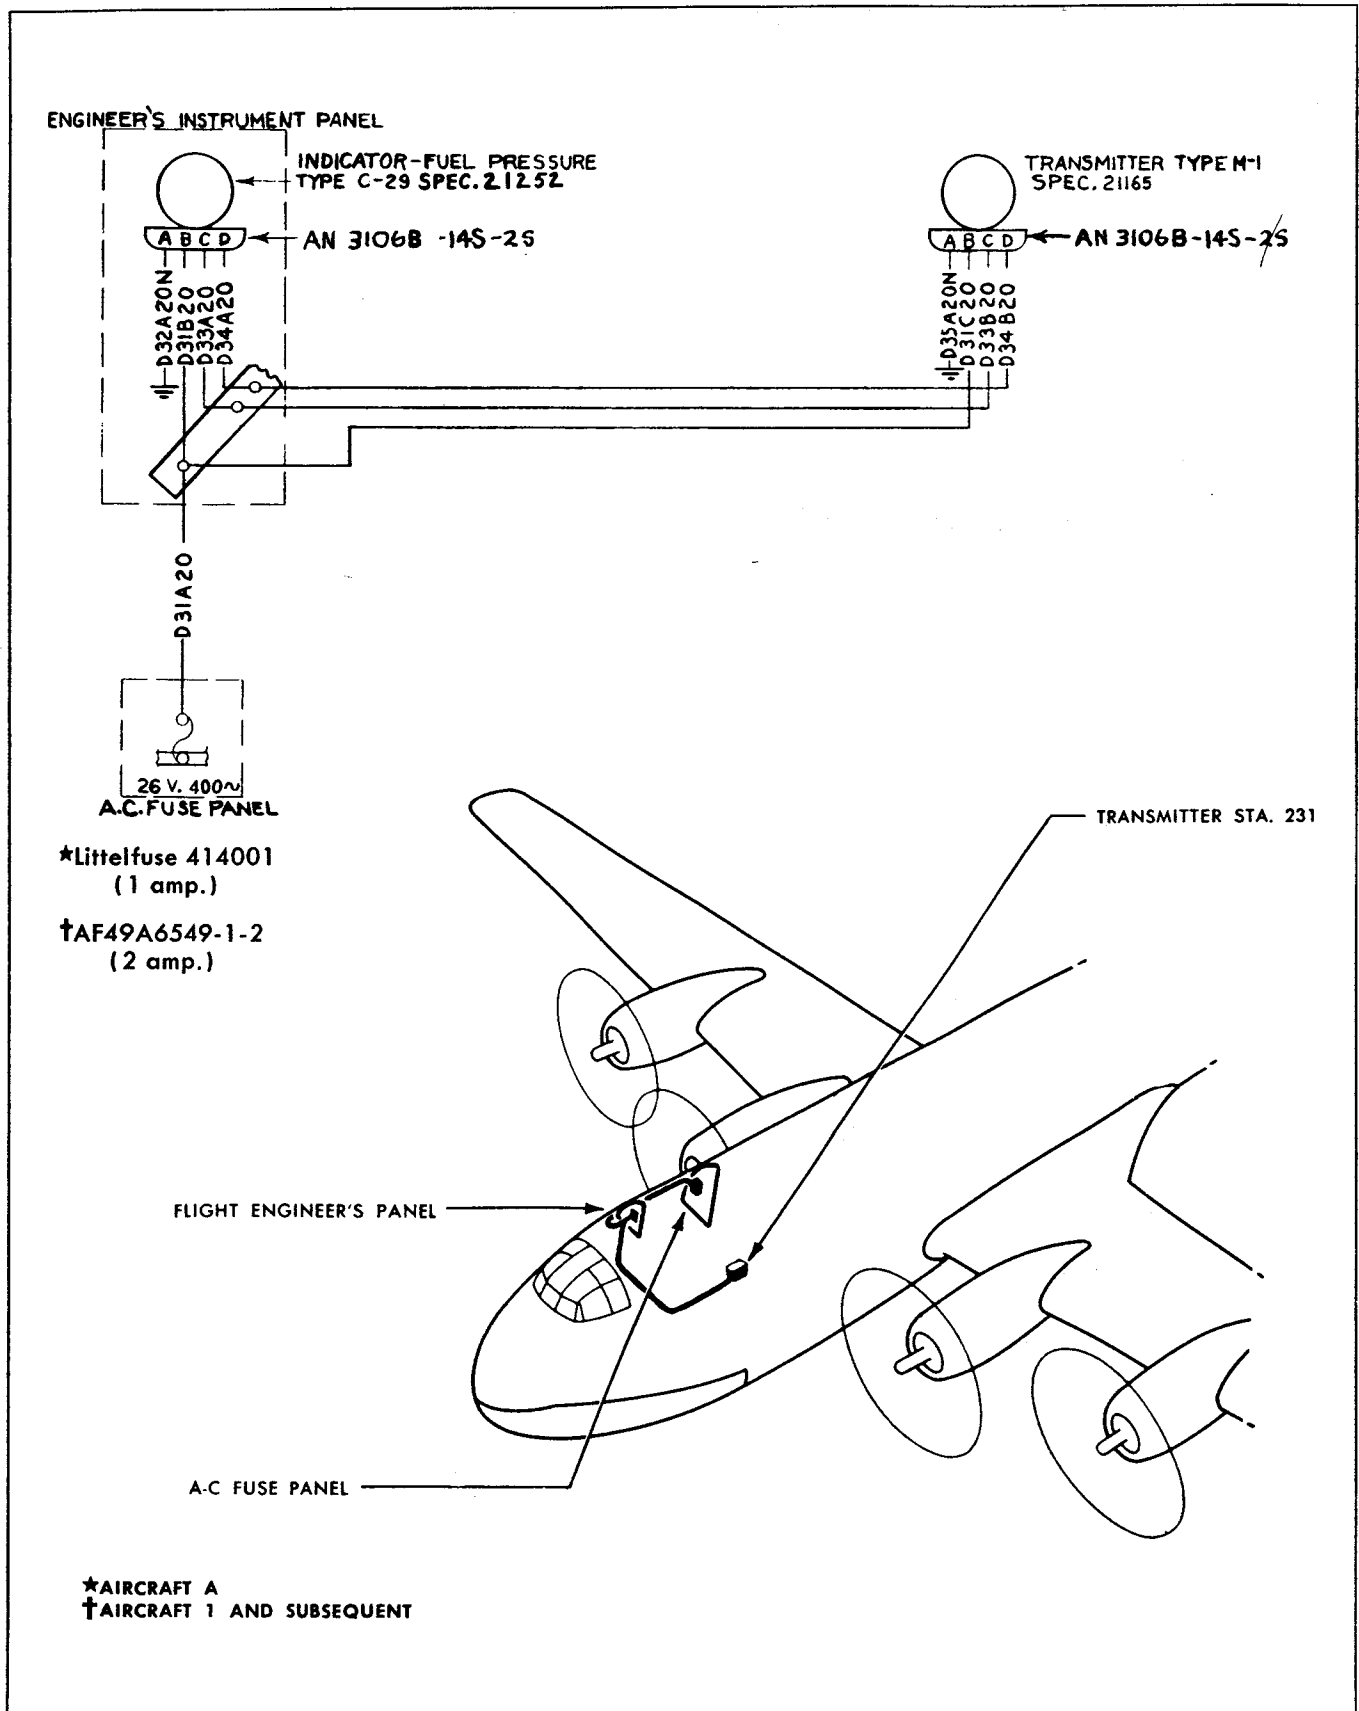


Figure 221. Fuel Pressure - Combustion Heater (Aircraft A through 139 and 205 through 214)

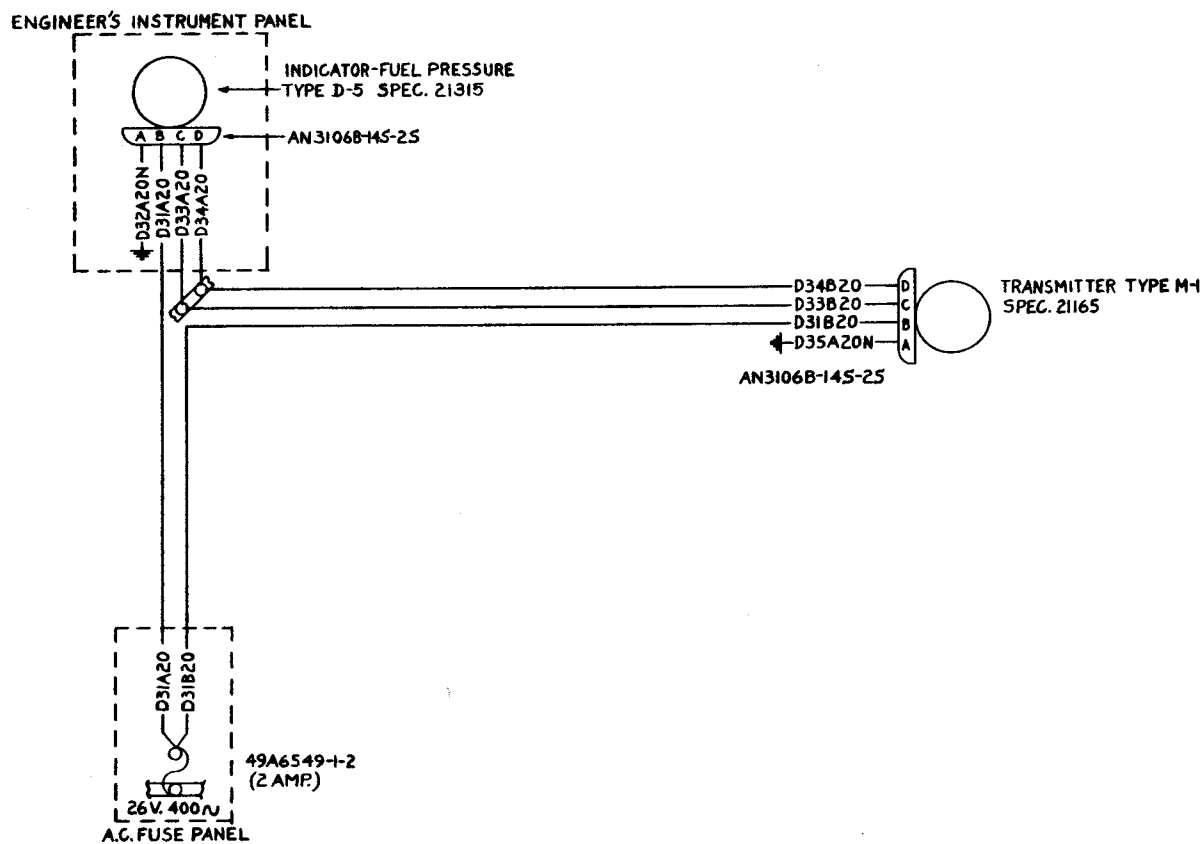


Figure 222. Fuel Pressure — Combustion Heater (Aircraft 215 and Subsequent)

11.458

Wiring Data Supplement

I.O. 1C-124A-2A

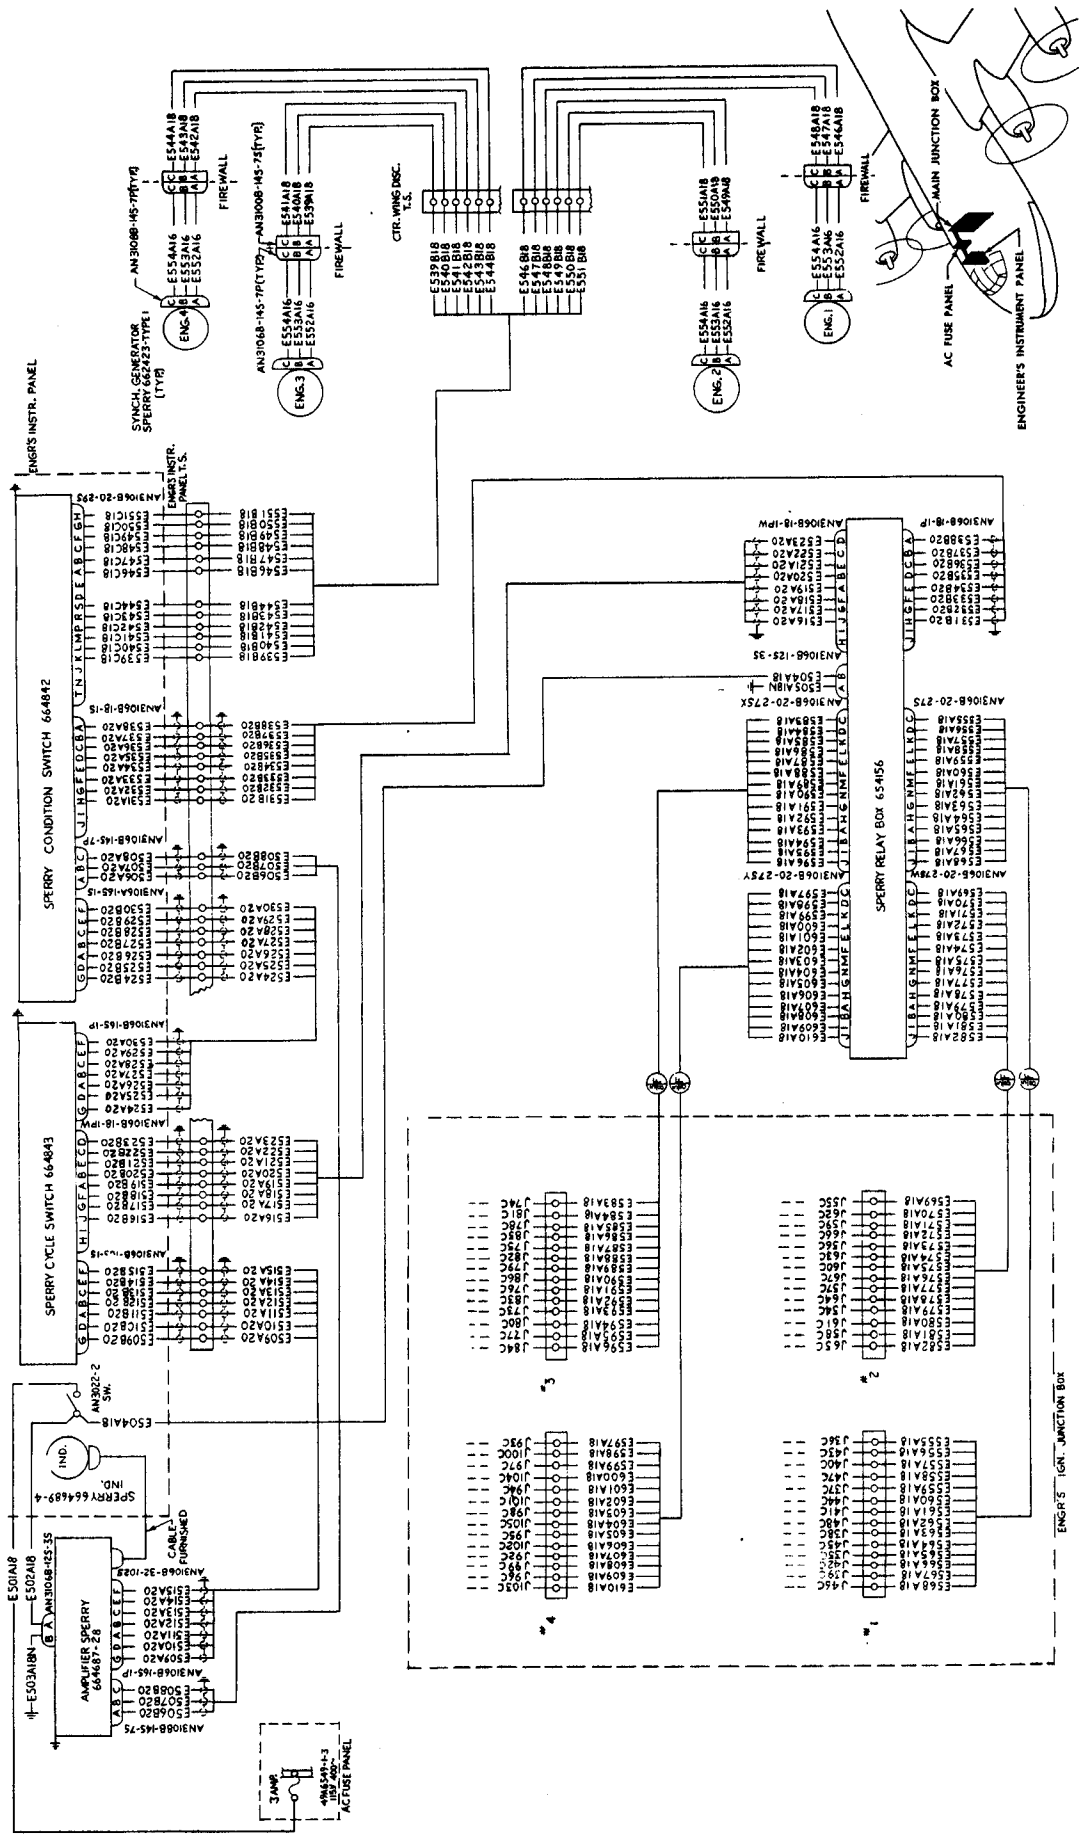


Figure 271. Engine Analyzer (Aircraft A through 204)

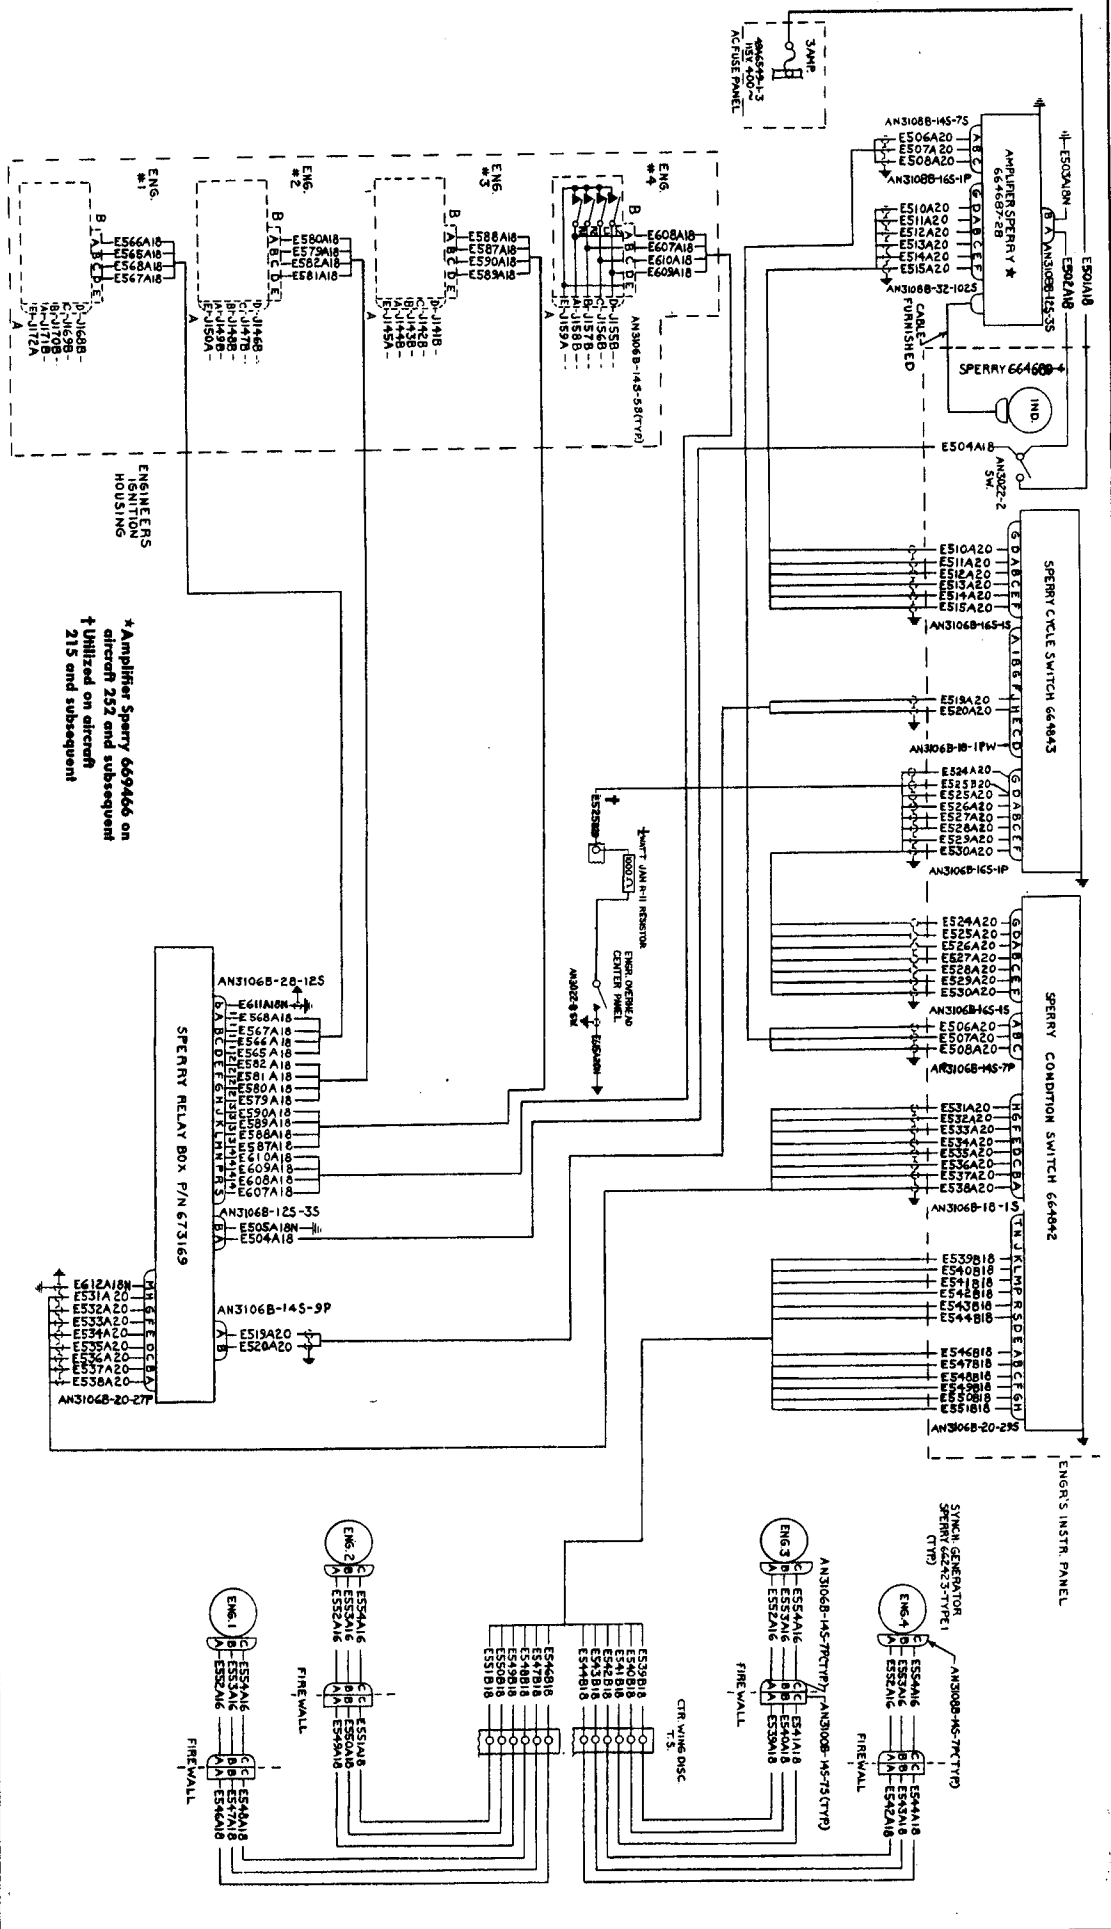


Figure 274. Engine Analyzer (Aircraft 205 and Subsequent)

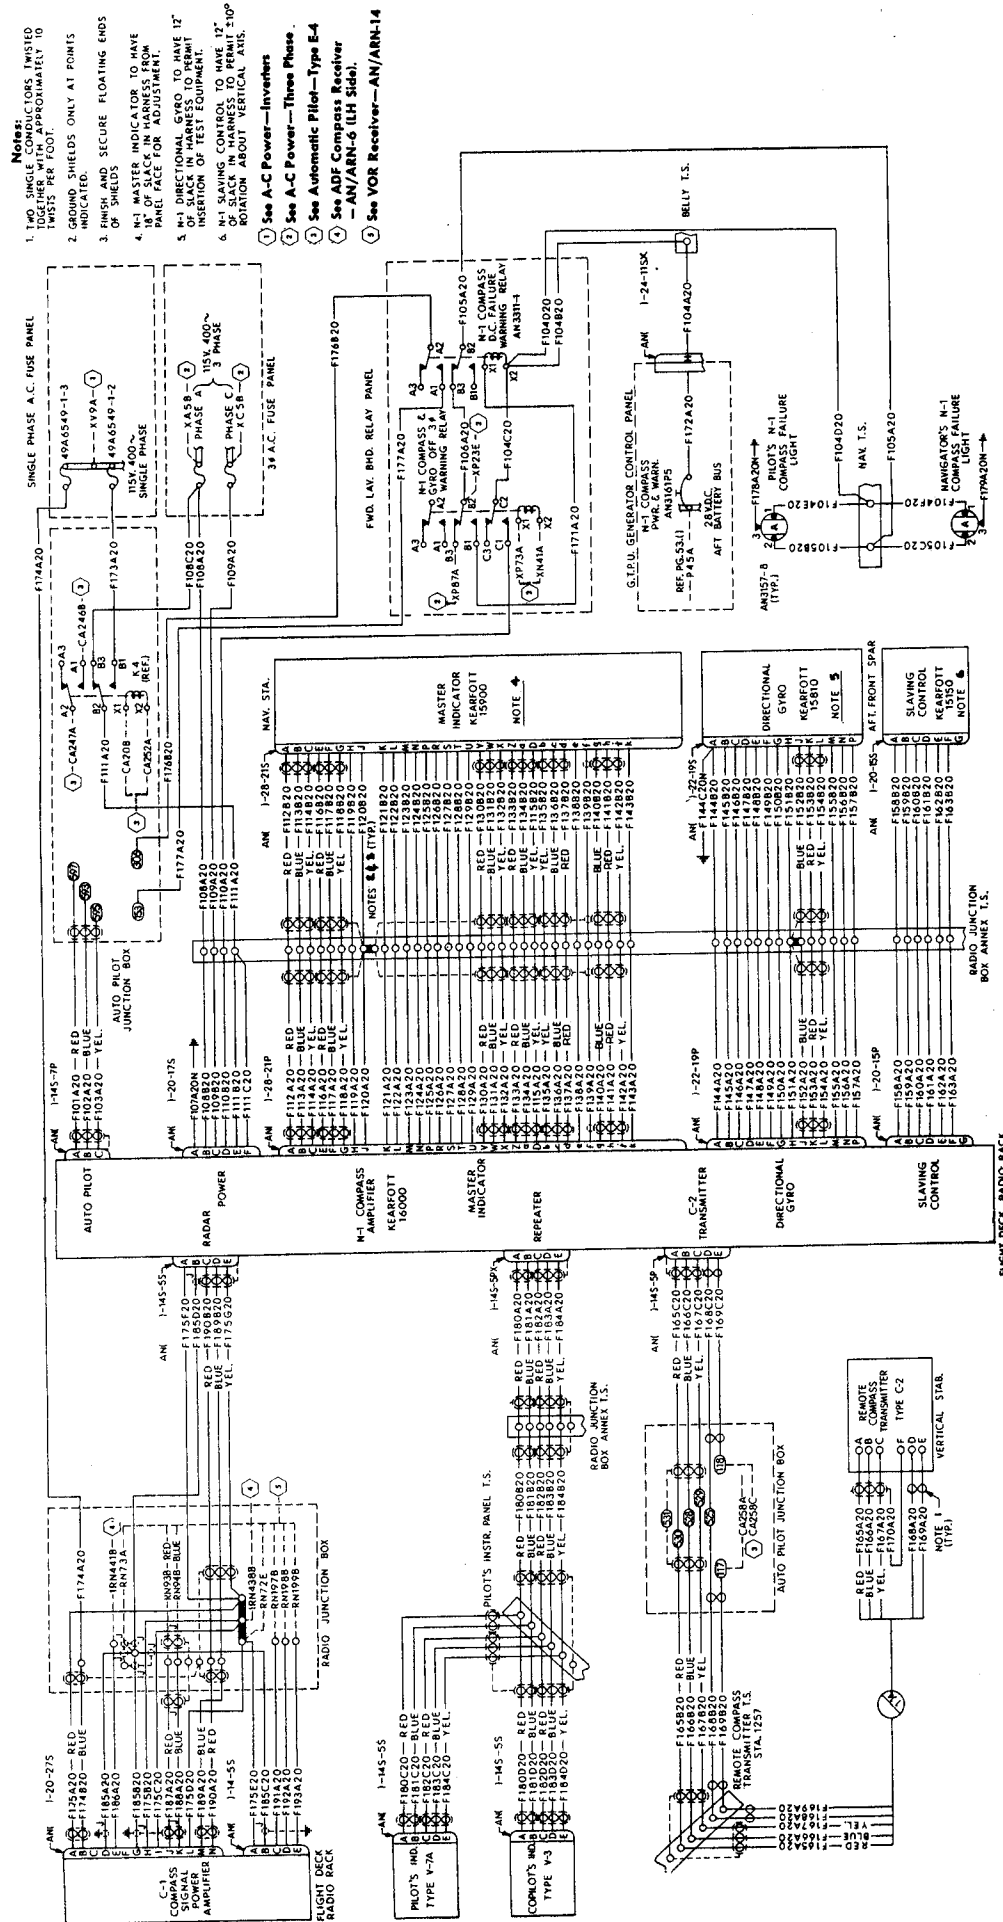


Figure 289F. N-1 Compass System (Aircraft 422 and Subsequent)

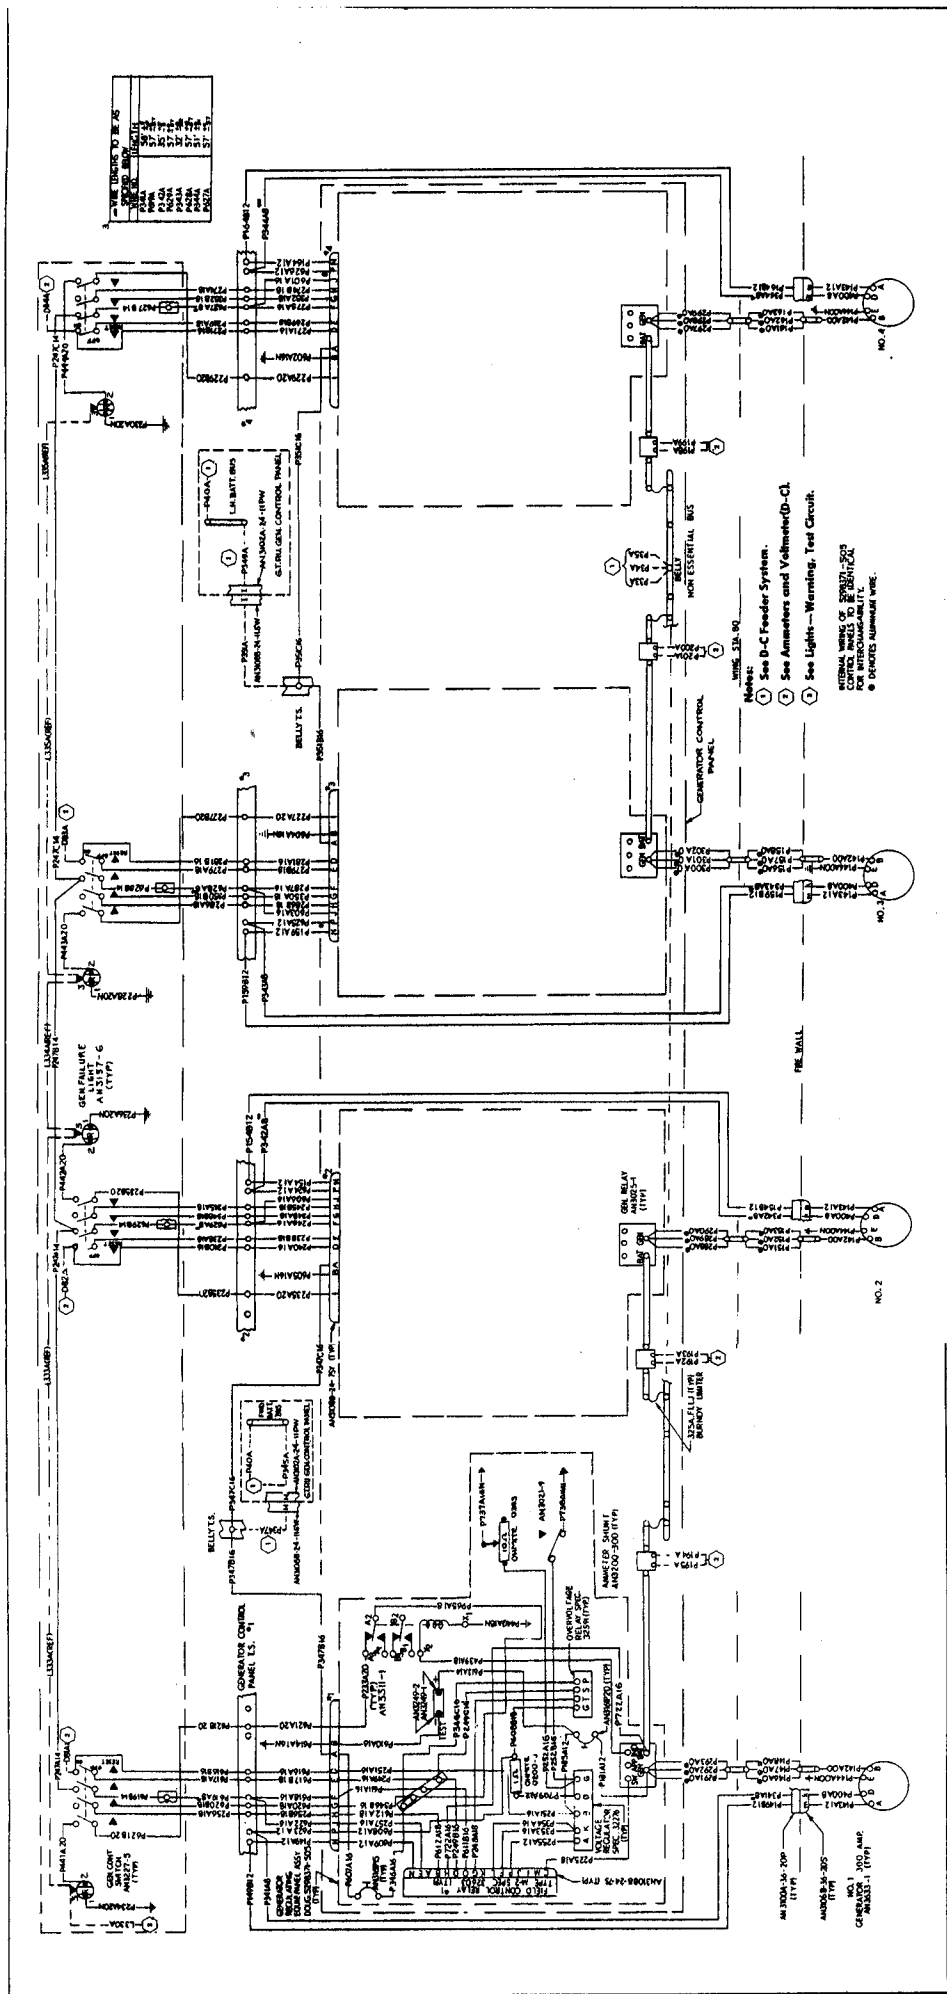


Figure 302A. Generators (Aircraft 392 and Subsequent)

Revised 15 January 1955

308A

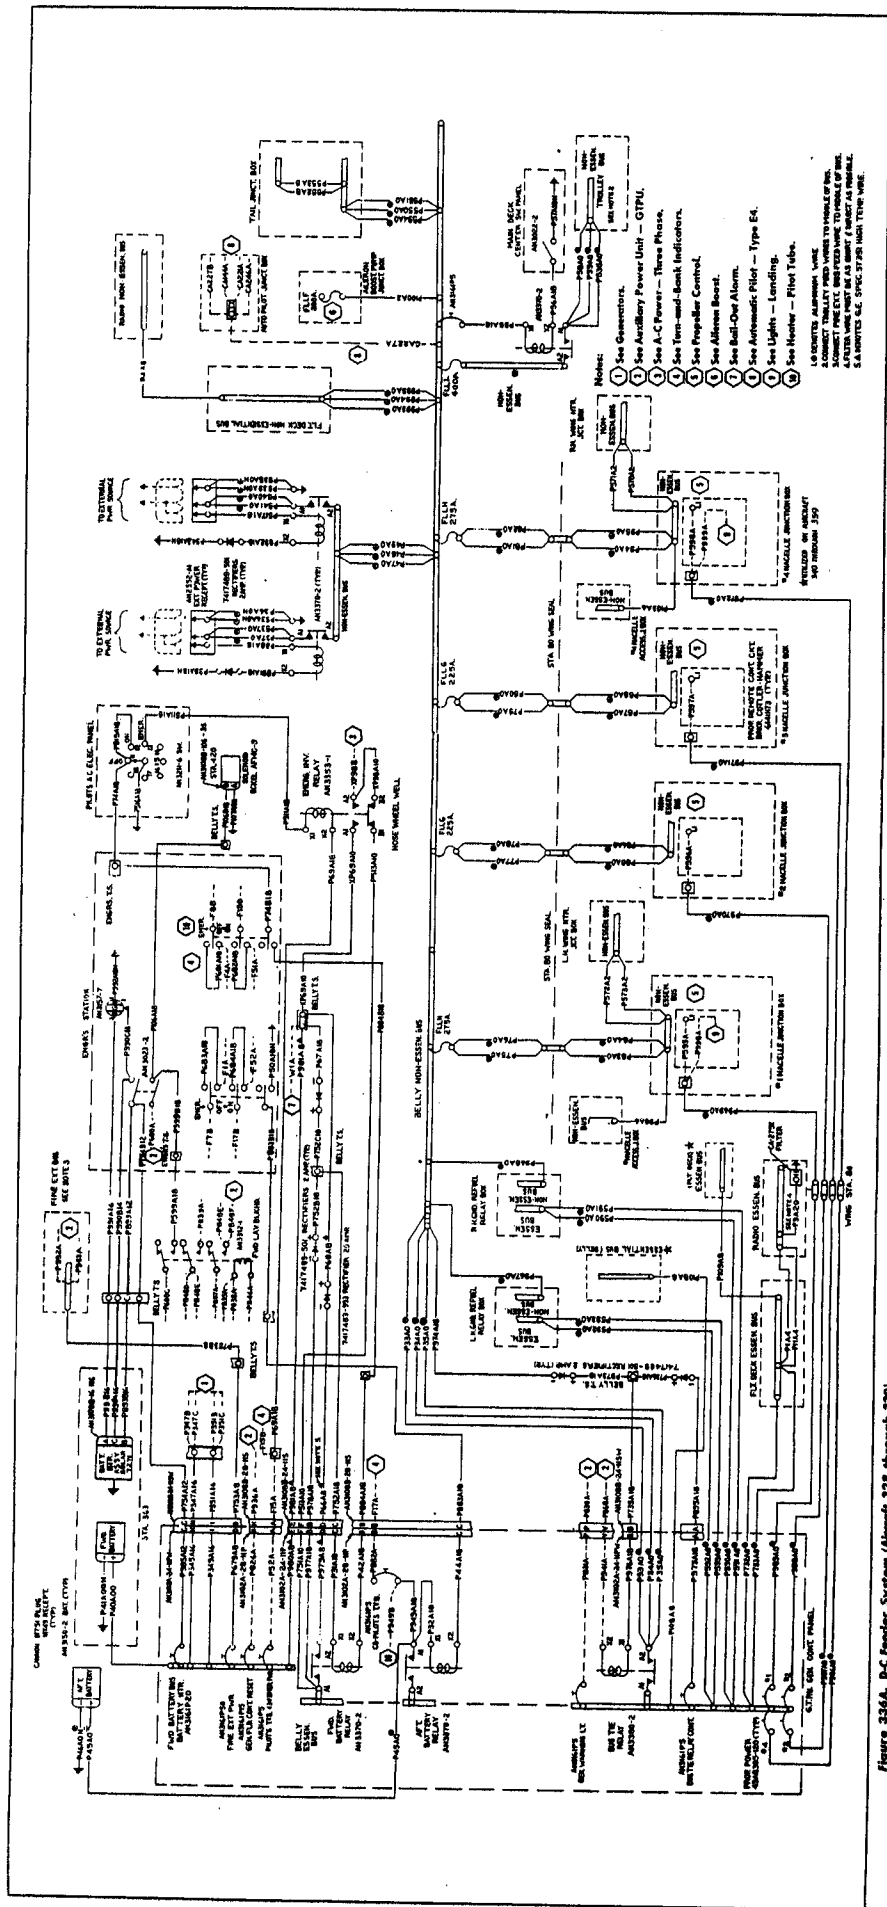


Figure 336A. B-C Feeder System (Aircraft 328 through 339)

Revised 15 January 1955



Figure 3368. D-C Feeder System (Aircraft 340 through 374)



Revised 15 January 1955

Figure 341C. Deleted.


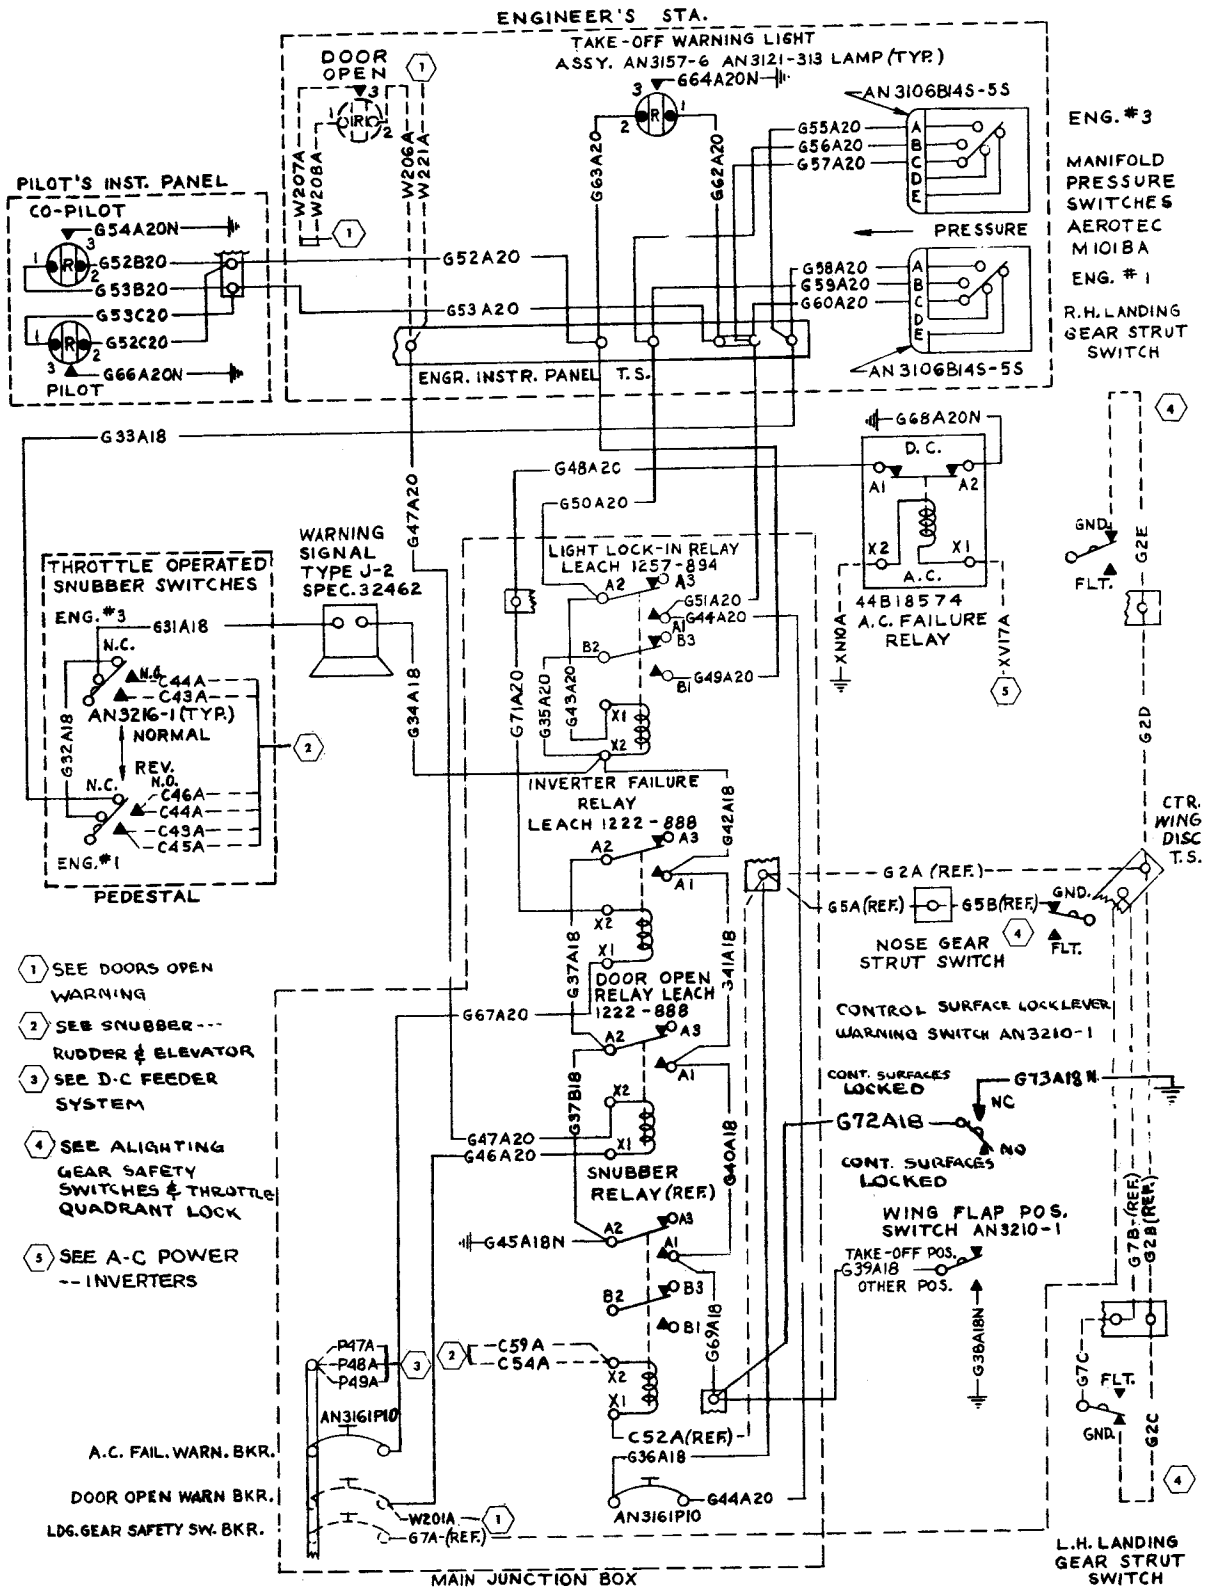


Figure 341D. Take-Off Warning (Aircraft 115 through 164)


14,996

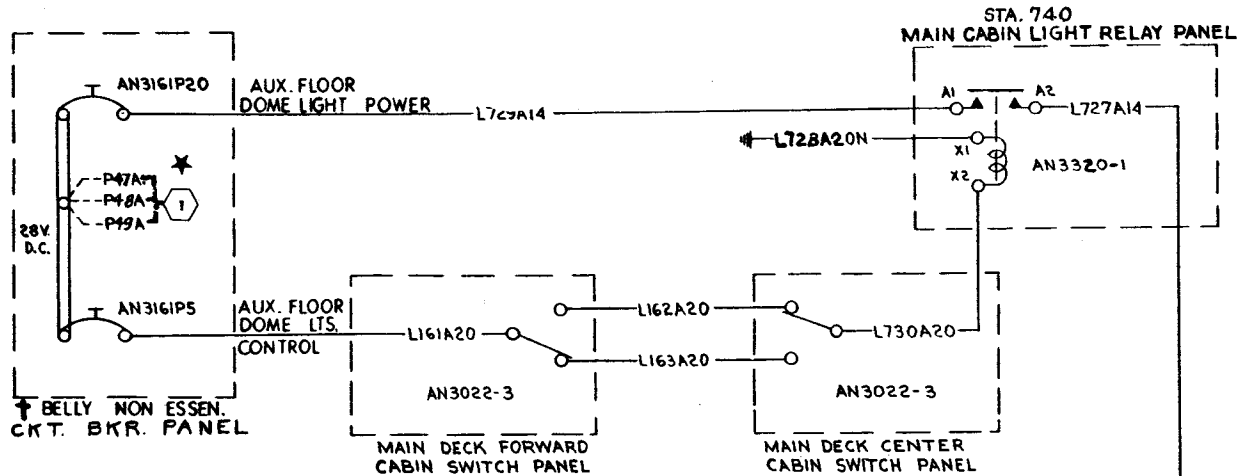

① See D-C Feeder System

*P33A, P34A, and P35A on aircraft 287 through 327

†Generator control panel on aircraft 287 through 327

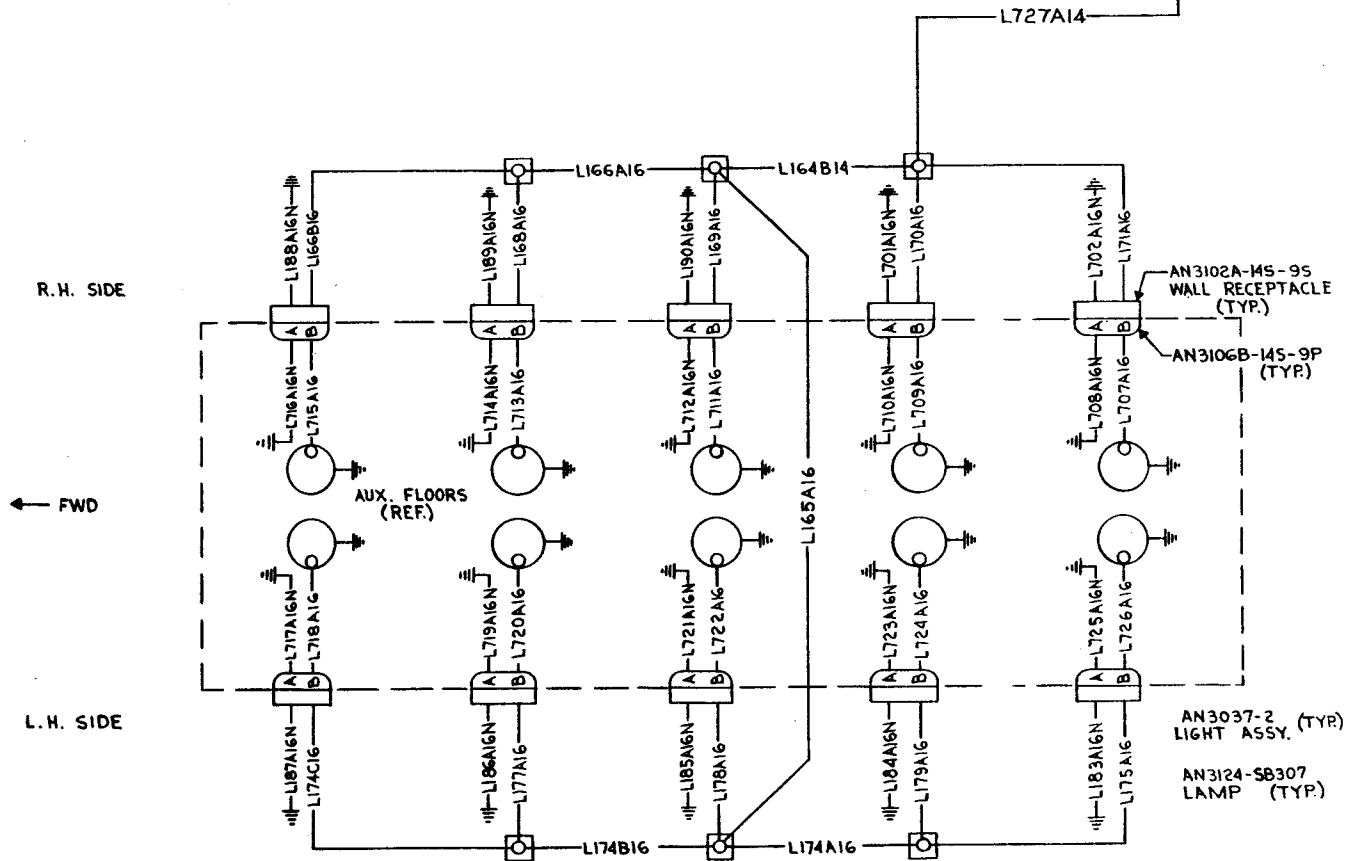

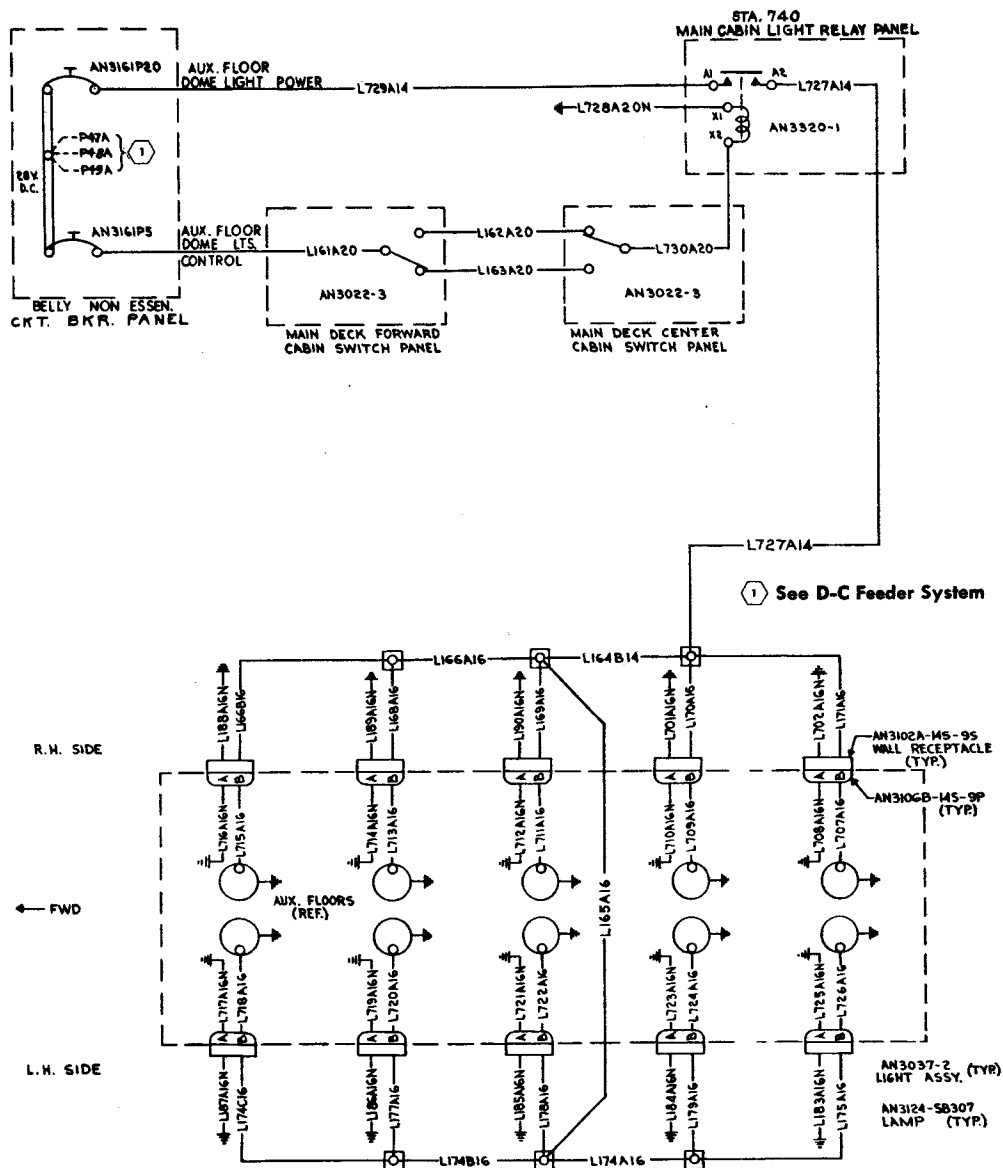


Figure 394B. Lights — Dome, Auxiliary Floor (Aircraft 329 and Subsequent)

17.712

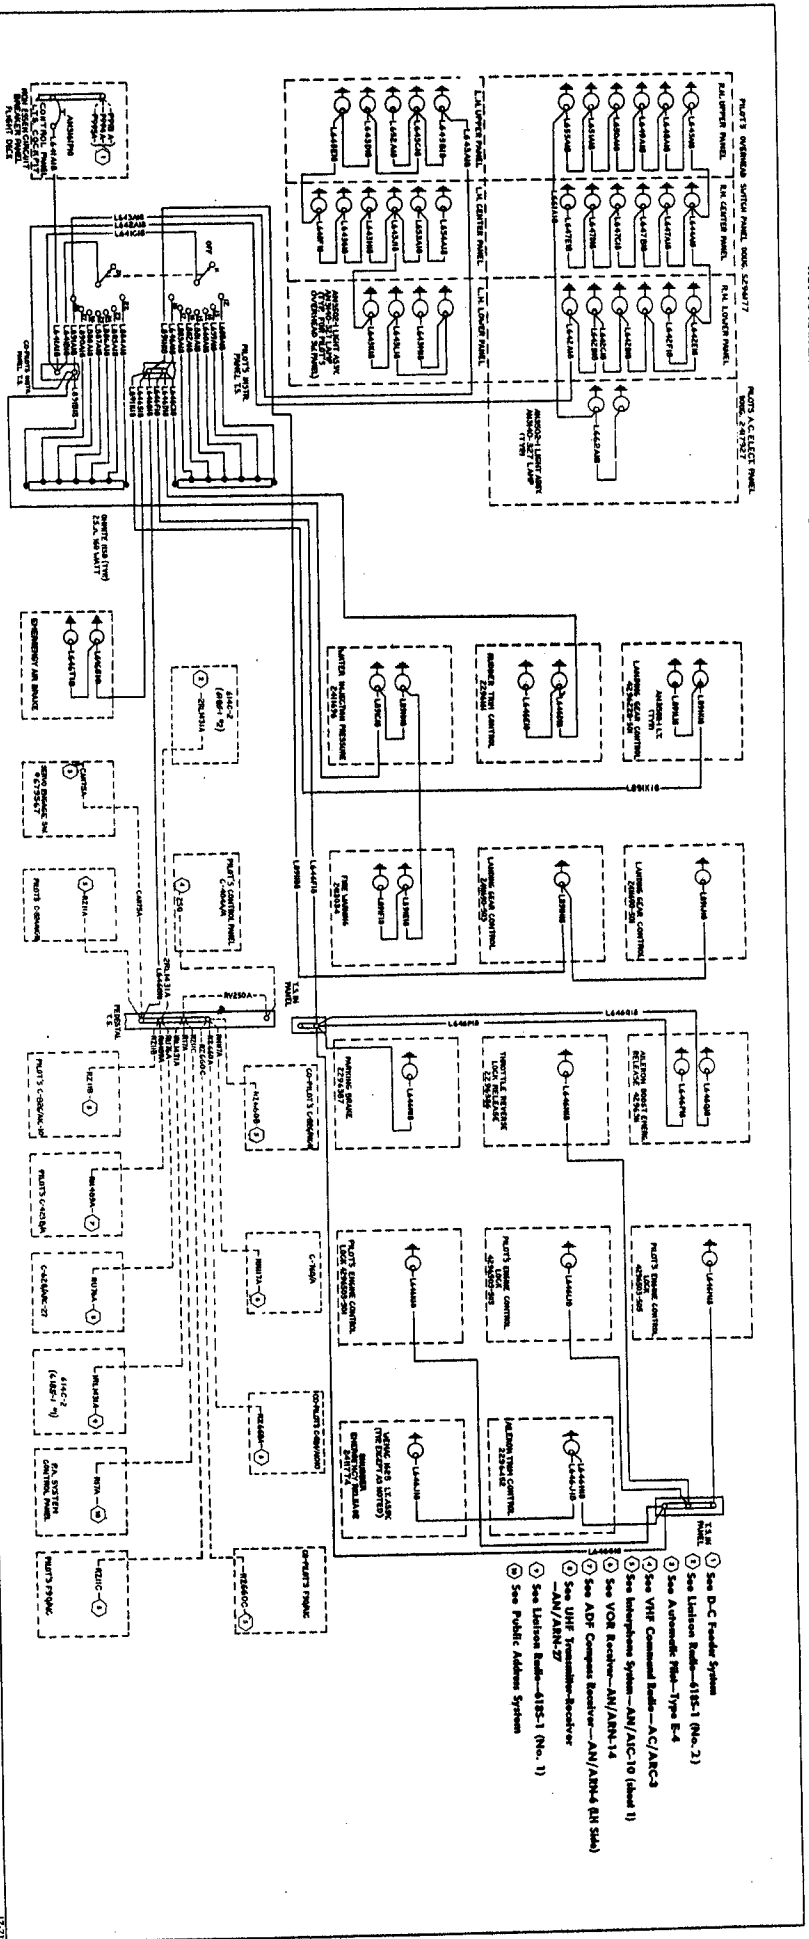


Figure 415. Lights - Panel, Cockpit (Aircrew 328 and Subsequent)



★Refer to D-C Feeder System

Figure 421B. Lights — Panel, Engineer's (Aircraft 328 through 391)


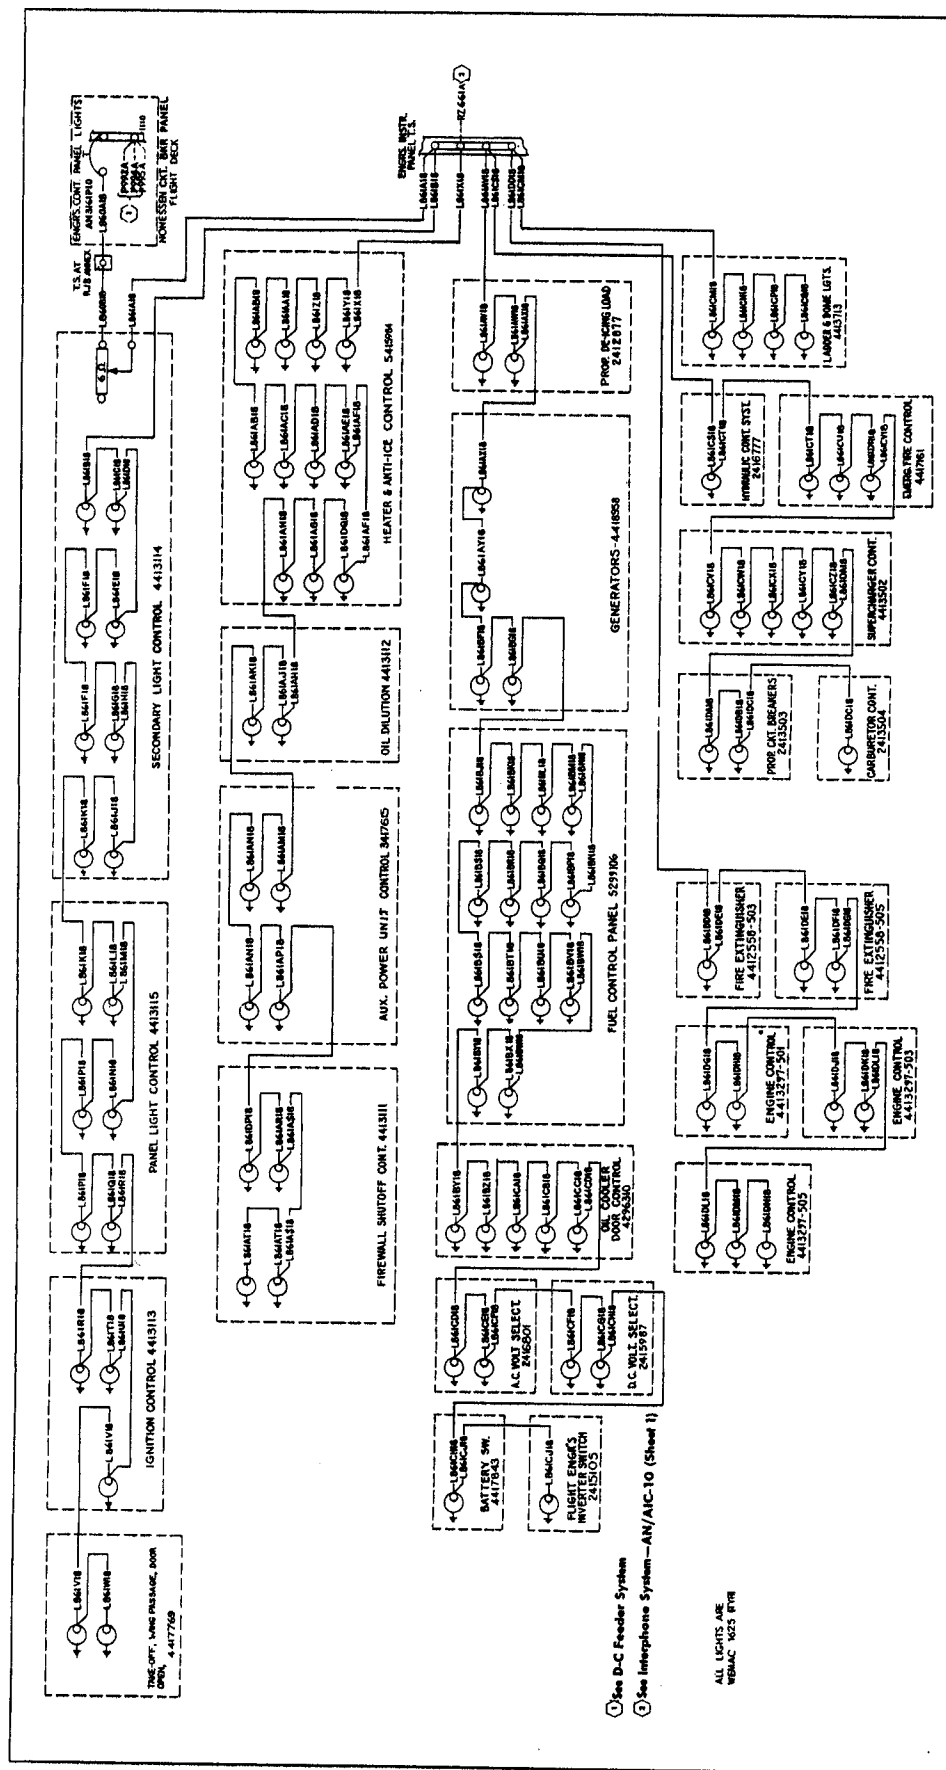


Figure 421C. Lights – Panel, Engineer’s (Aircraft 392 through 421)

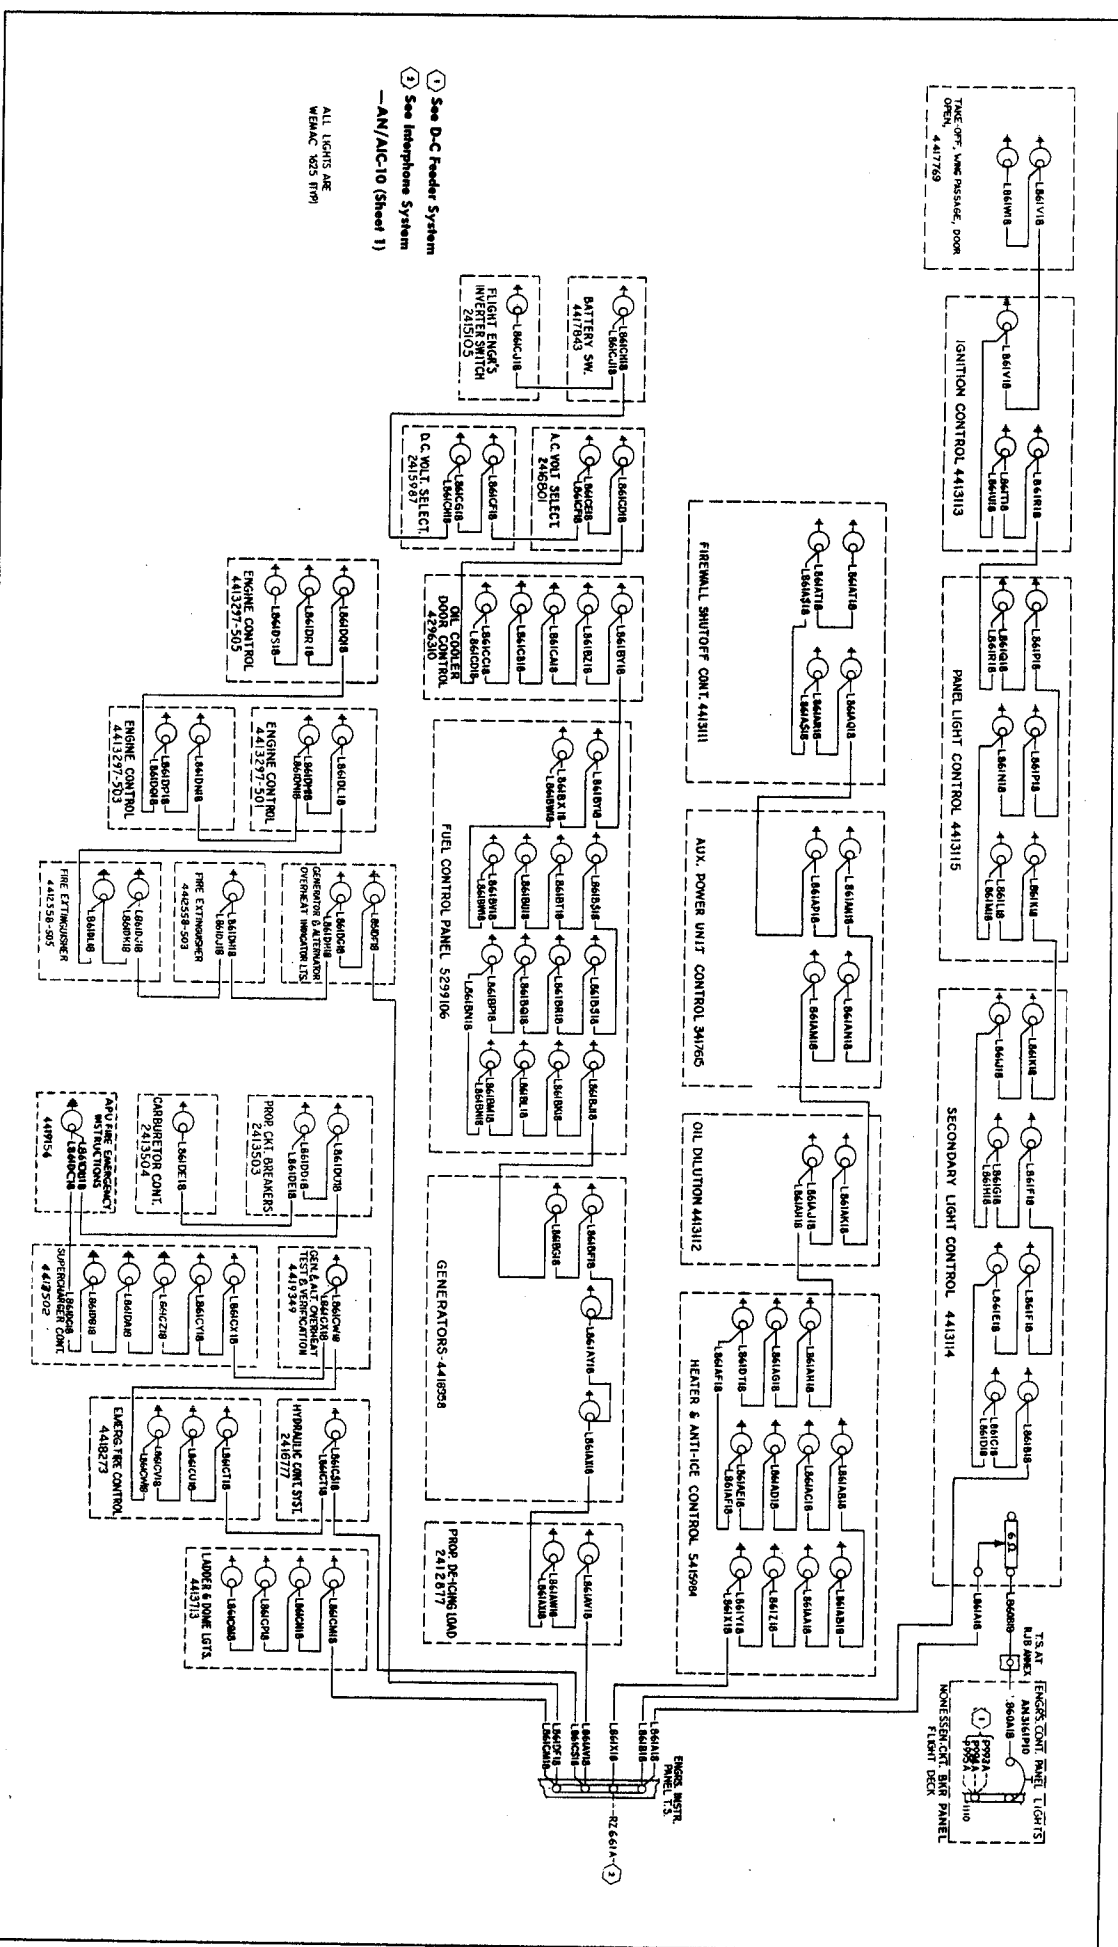

Revised 15 January 1955

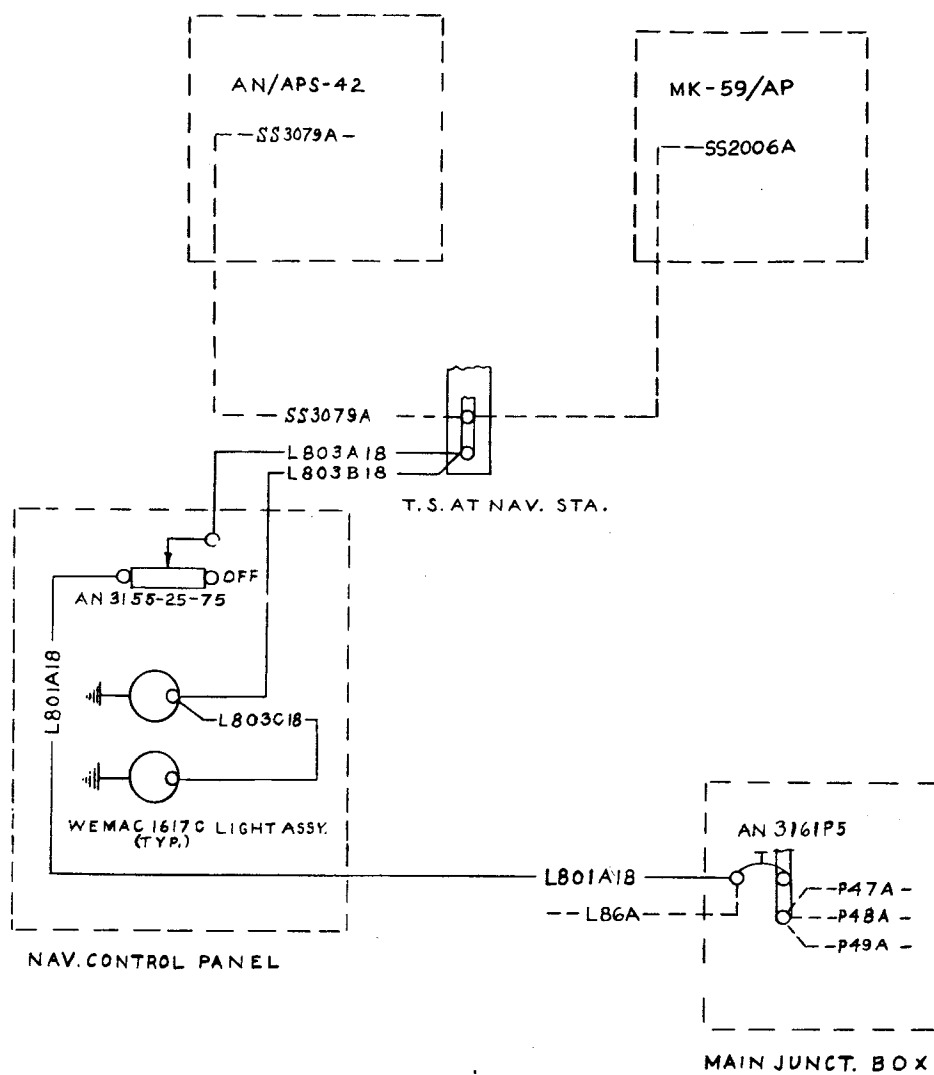


Figure 422. Lights - Panel, Flight Deck, Navigator and Radio Operator (Aircraft A)

11.181

7.715

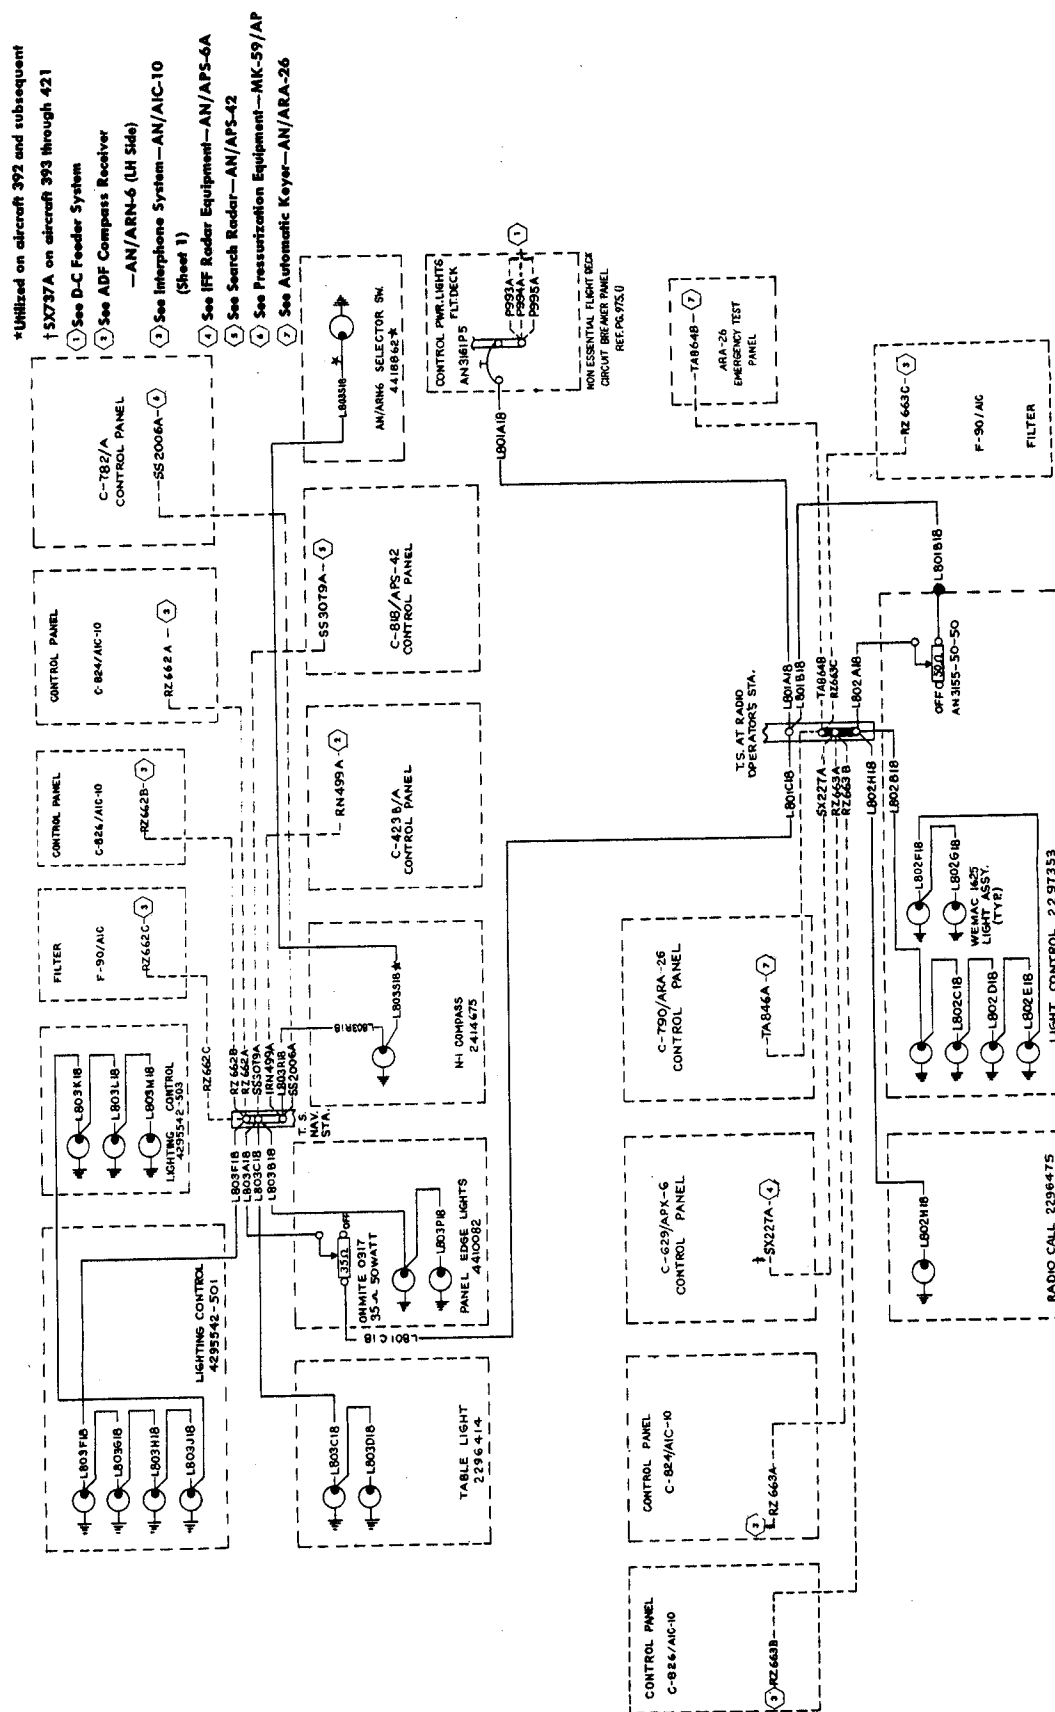


Figure 426A. Lights — Panel, Flight Deck, Navigator and Radio Operator (Aircraft 328 and Subsequent)

Revised 15 January 1955



5.020

439

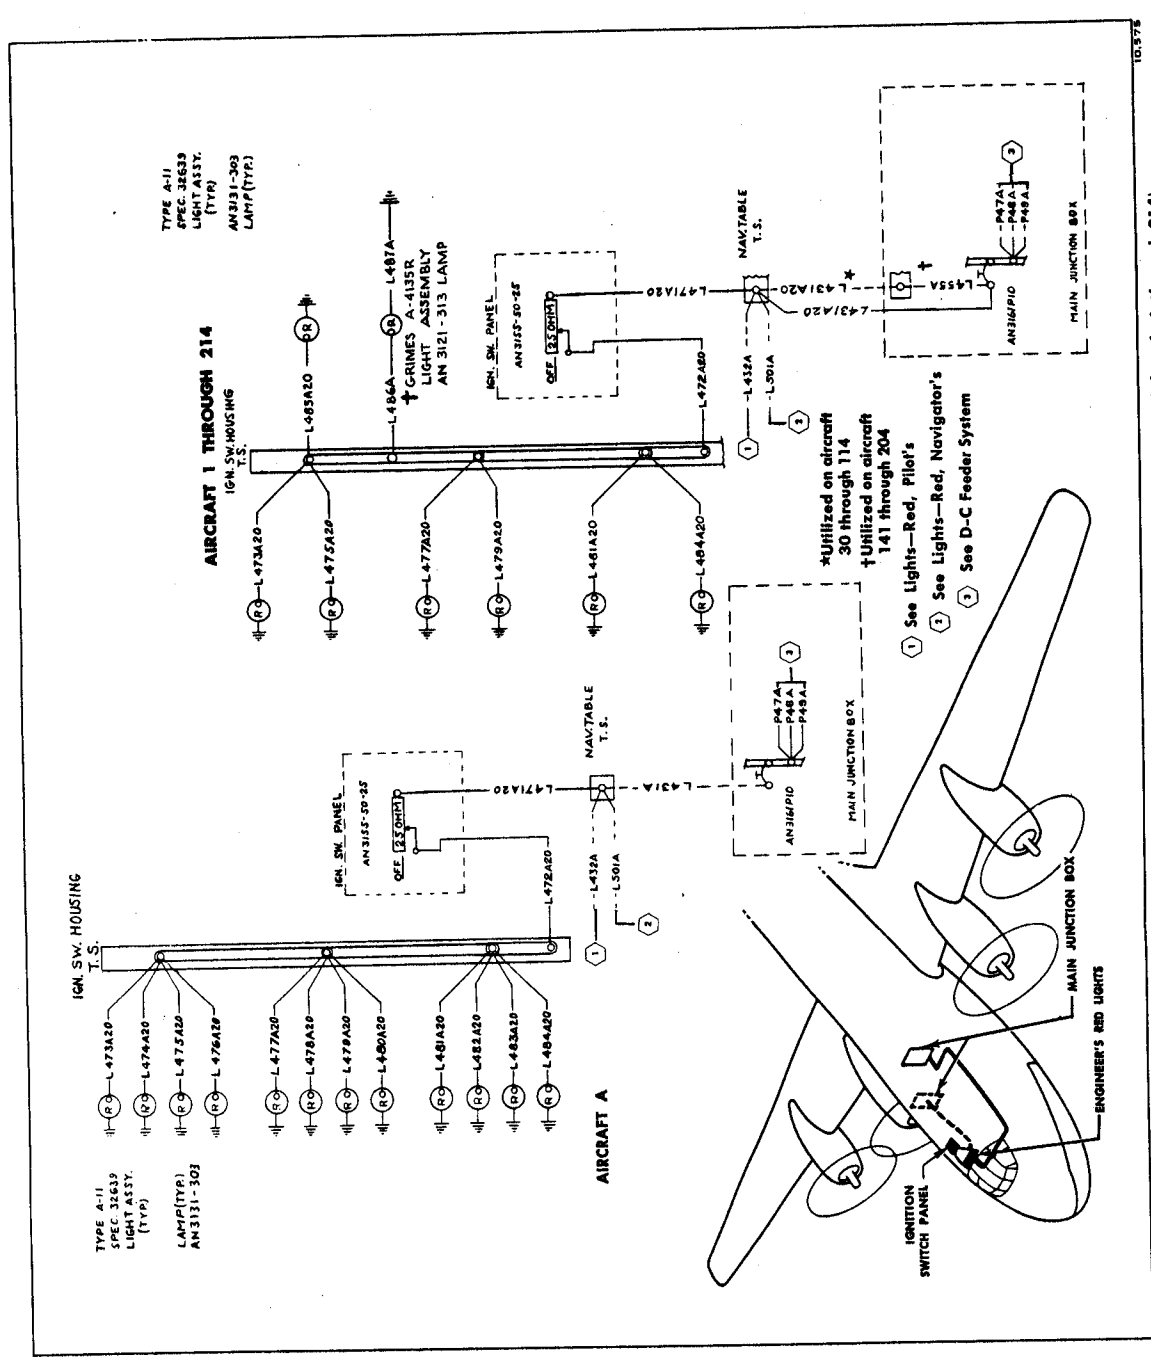
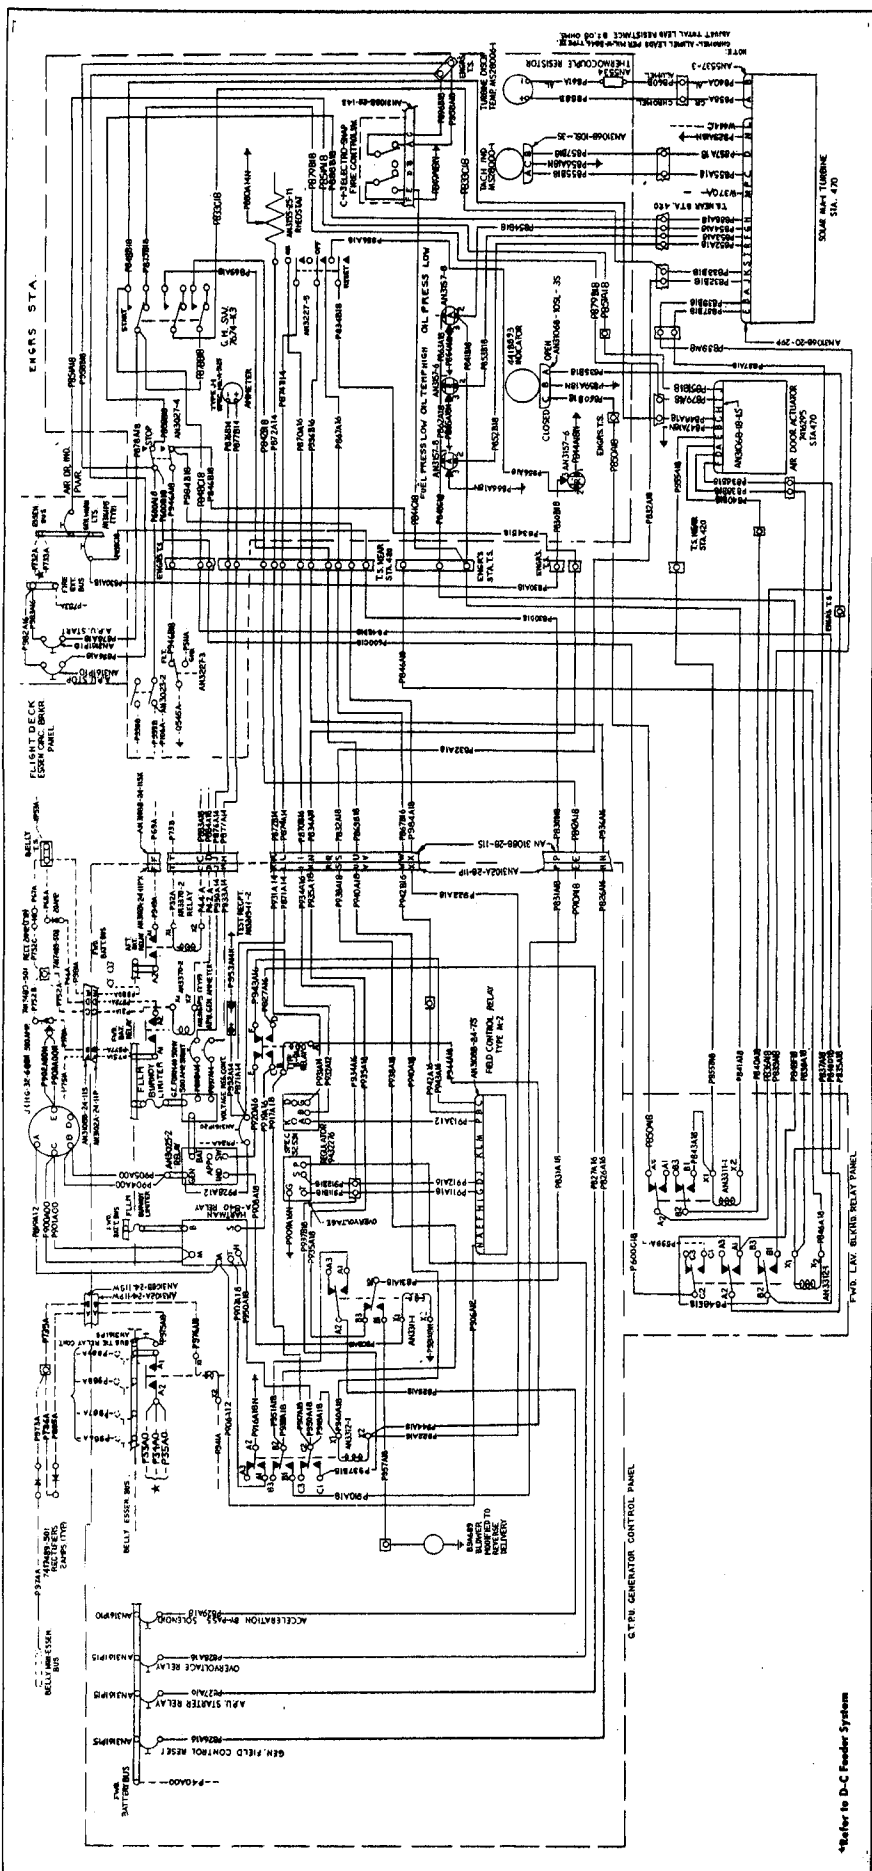


Figure 434. Lights — Red, Engineer's (Aircraft A through 214)

Revised 15 January 1955




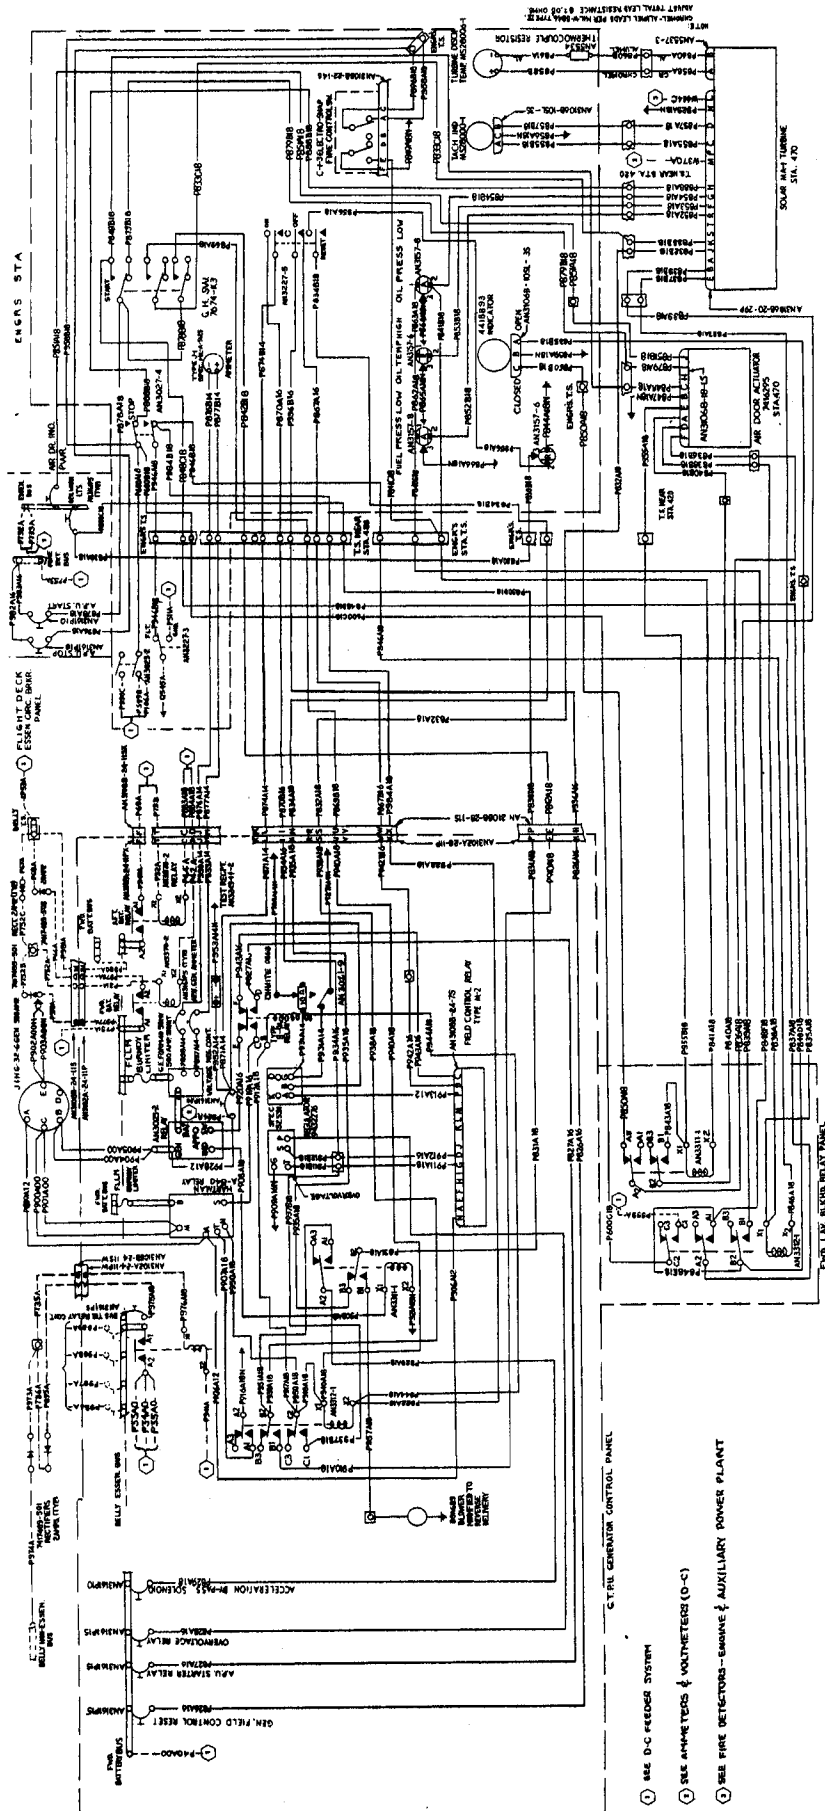



Figure 4.55C. Auxiliary Power Unit — GTPU (Aircraft 392 through 421)

Revised 15 January 1955

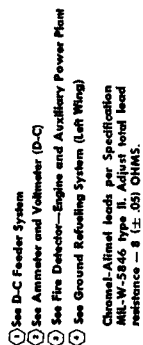

Revised 15 January 1955

Figure 455E. Liaison Radio - AN/ARC-8 (Aircraft A through 41)

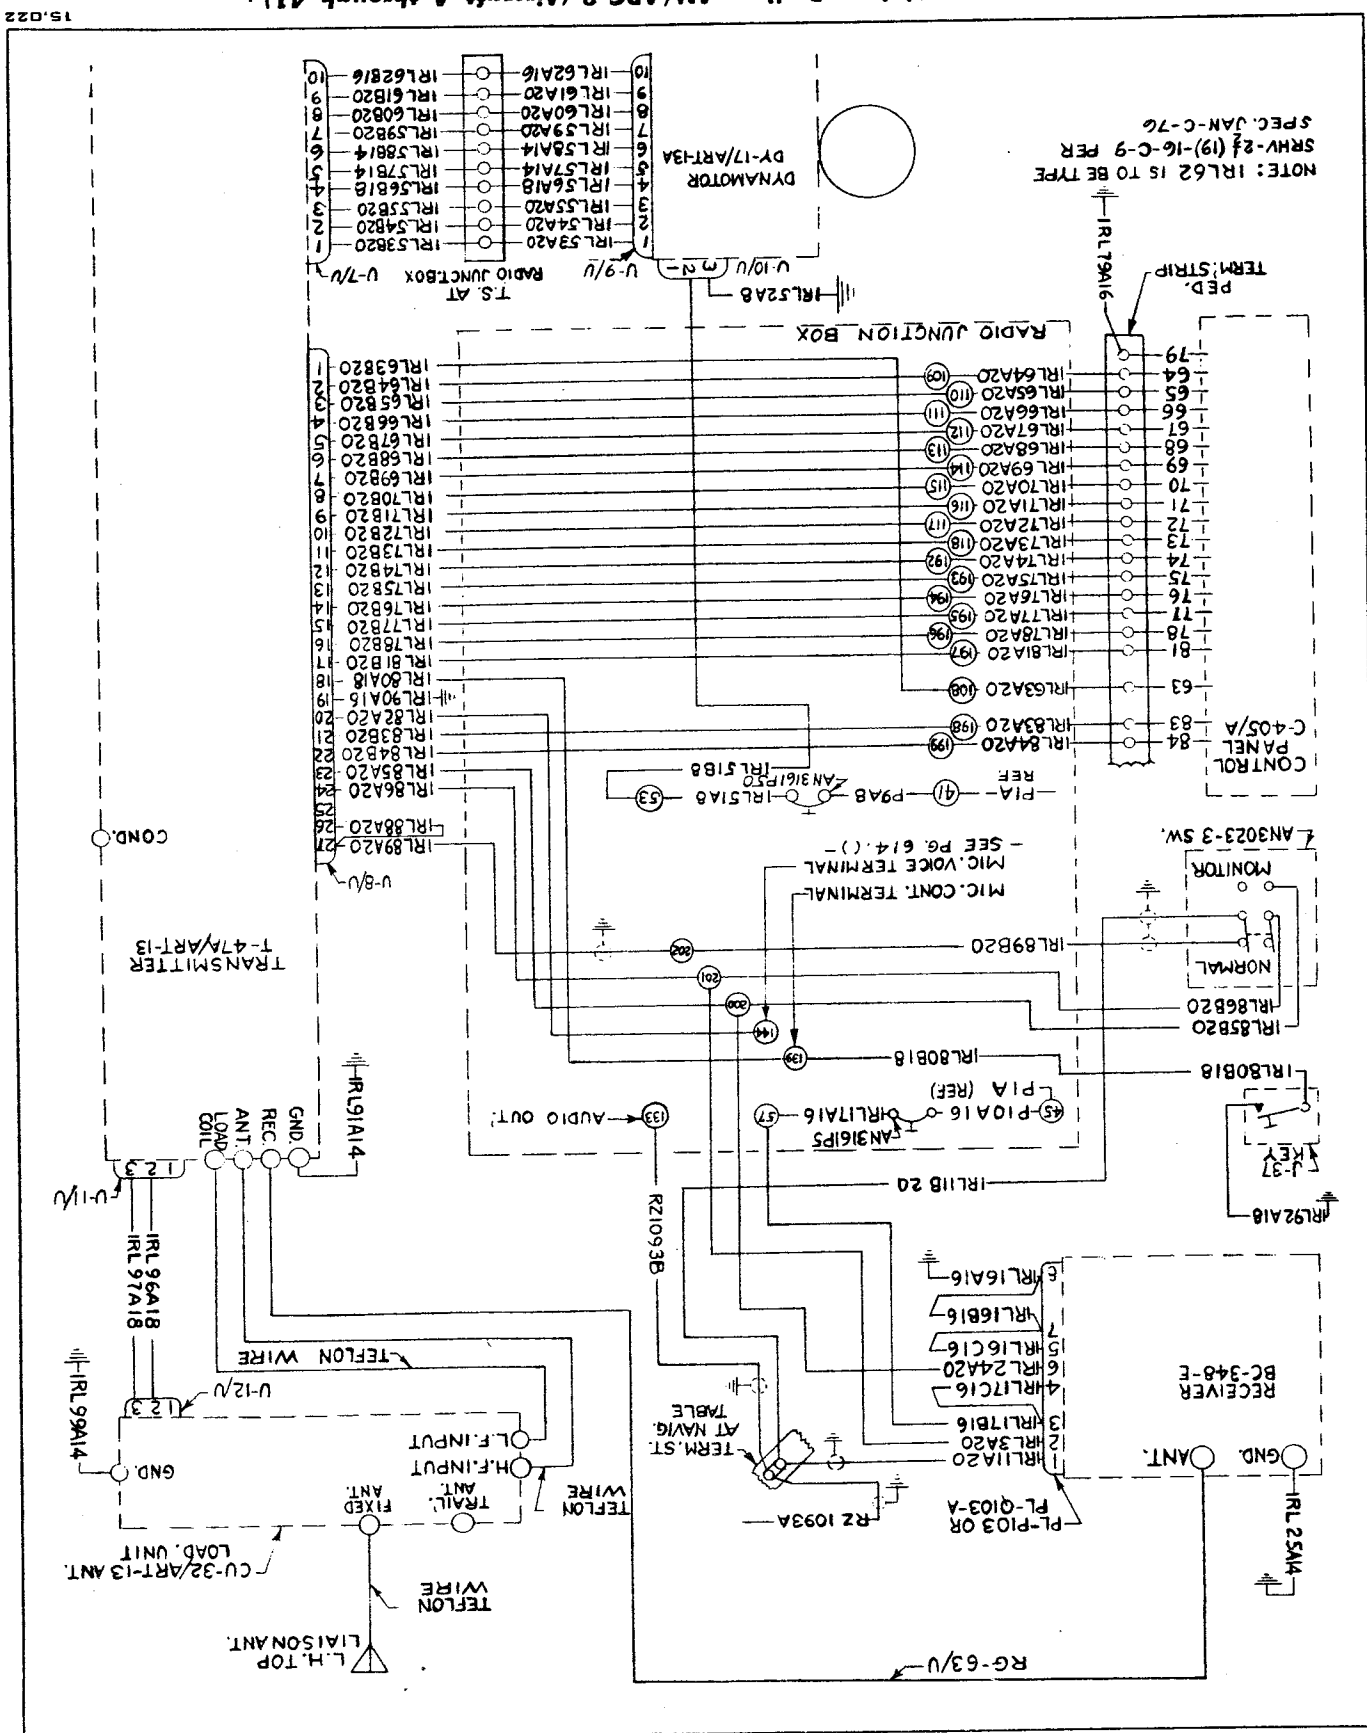

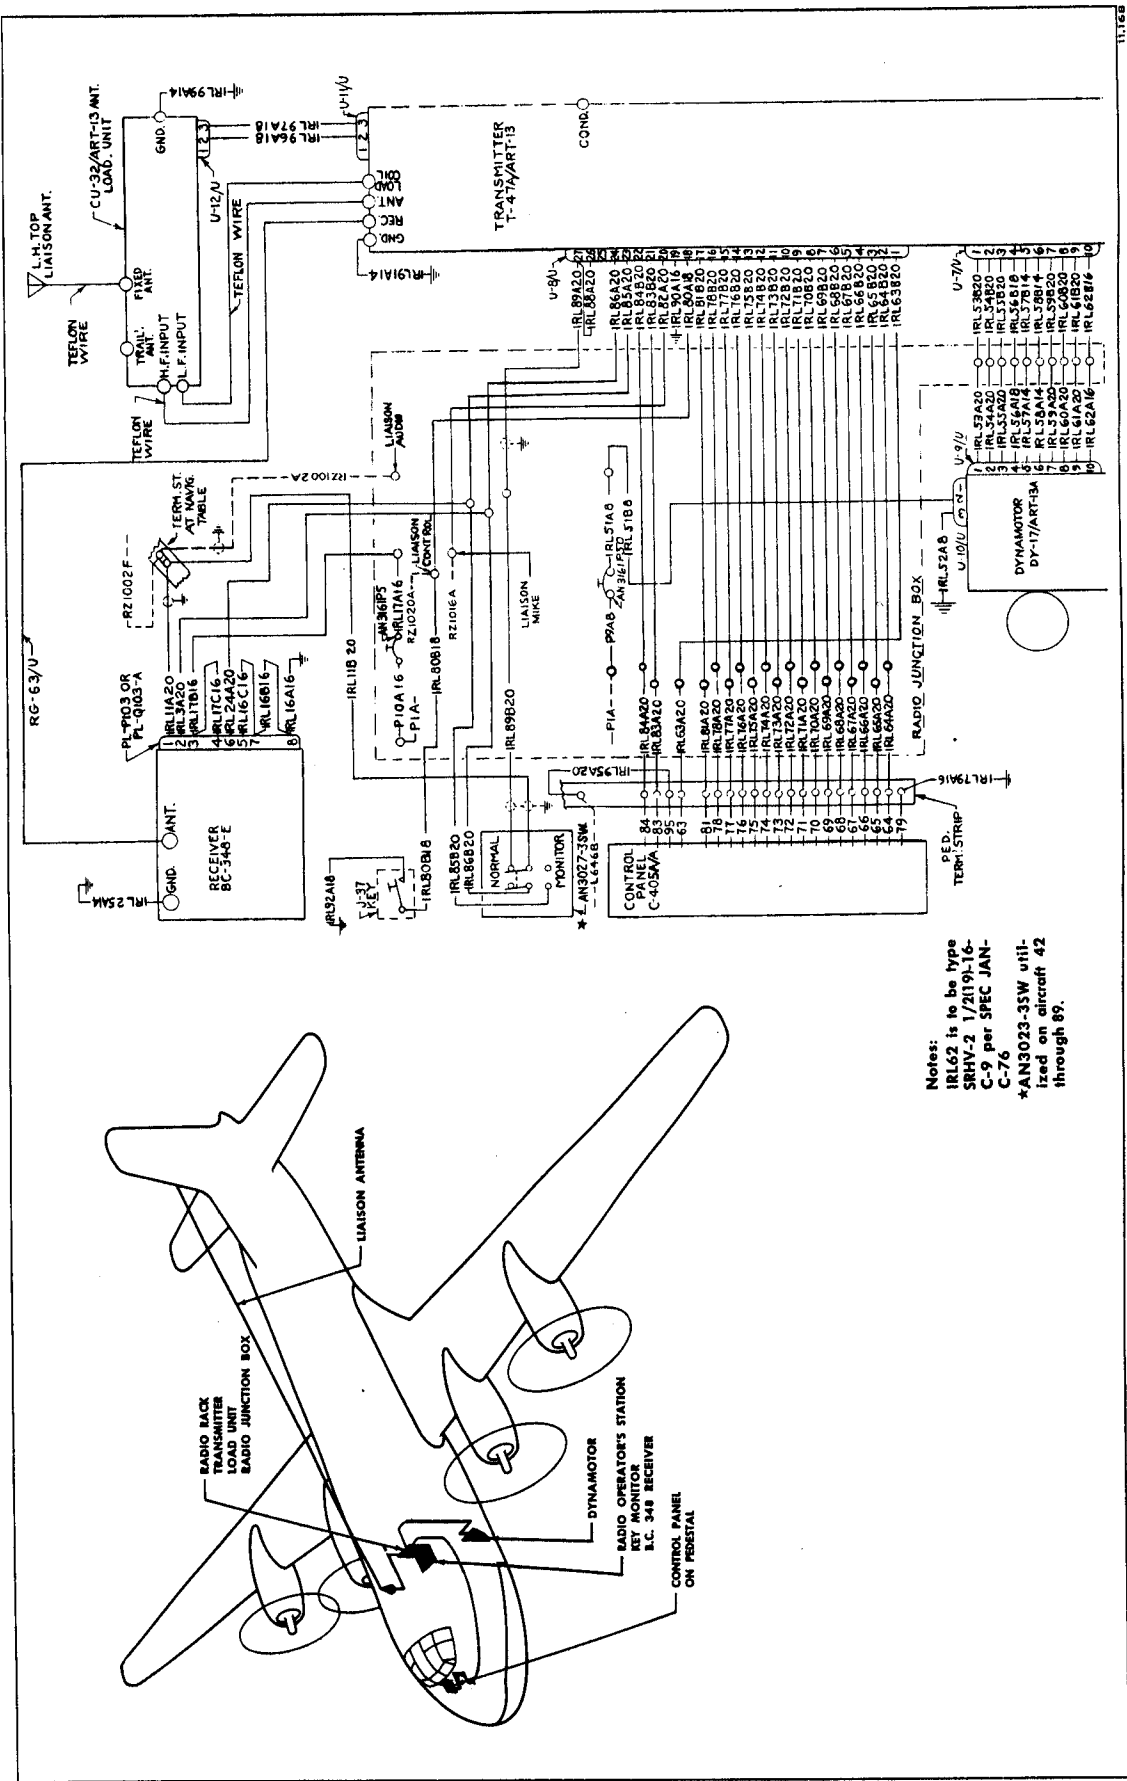


Figure 456. Liaison Radio — AN/ARC-8 (Aircraft 42 through 164)

Revised 15 January 1955

Figure 459 deleted.

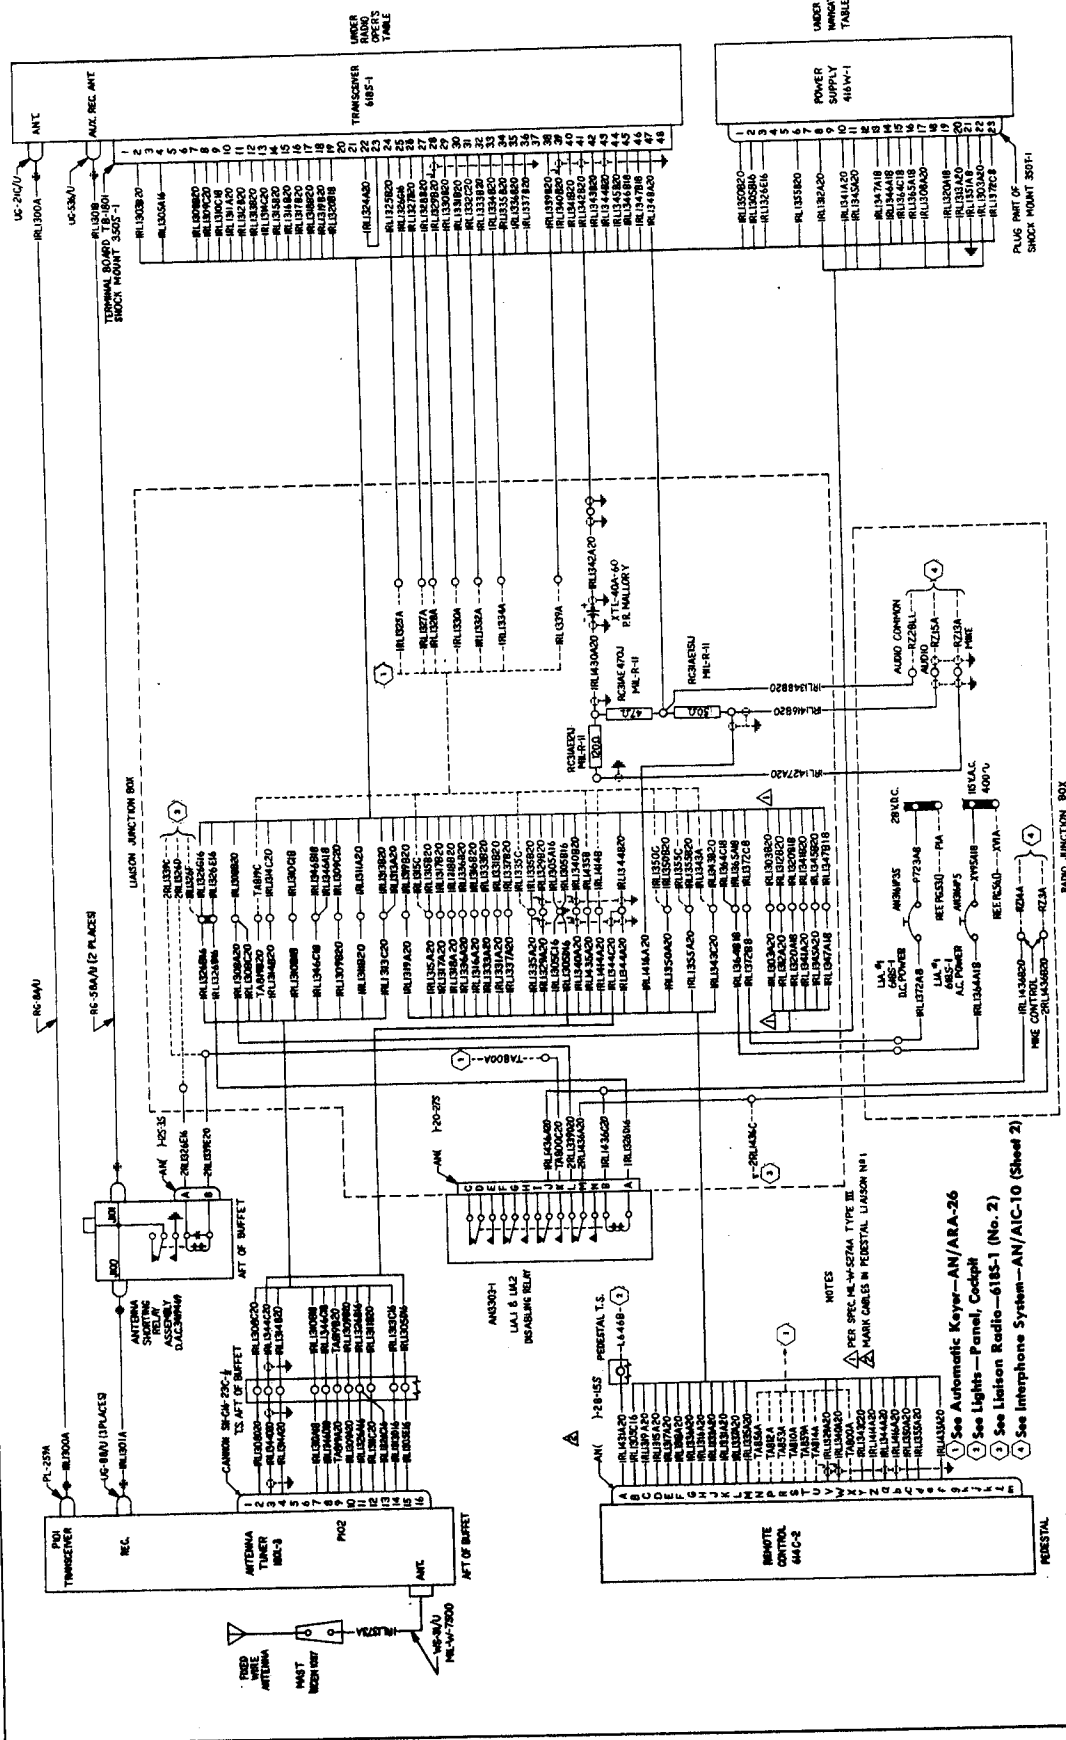


Figure 459A. Liaison Radio - 618S-1 (No. 1) (Aircraft 328 and Subsequent)

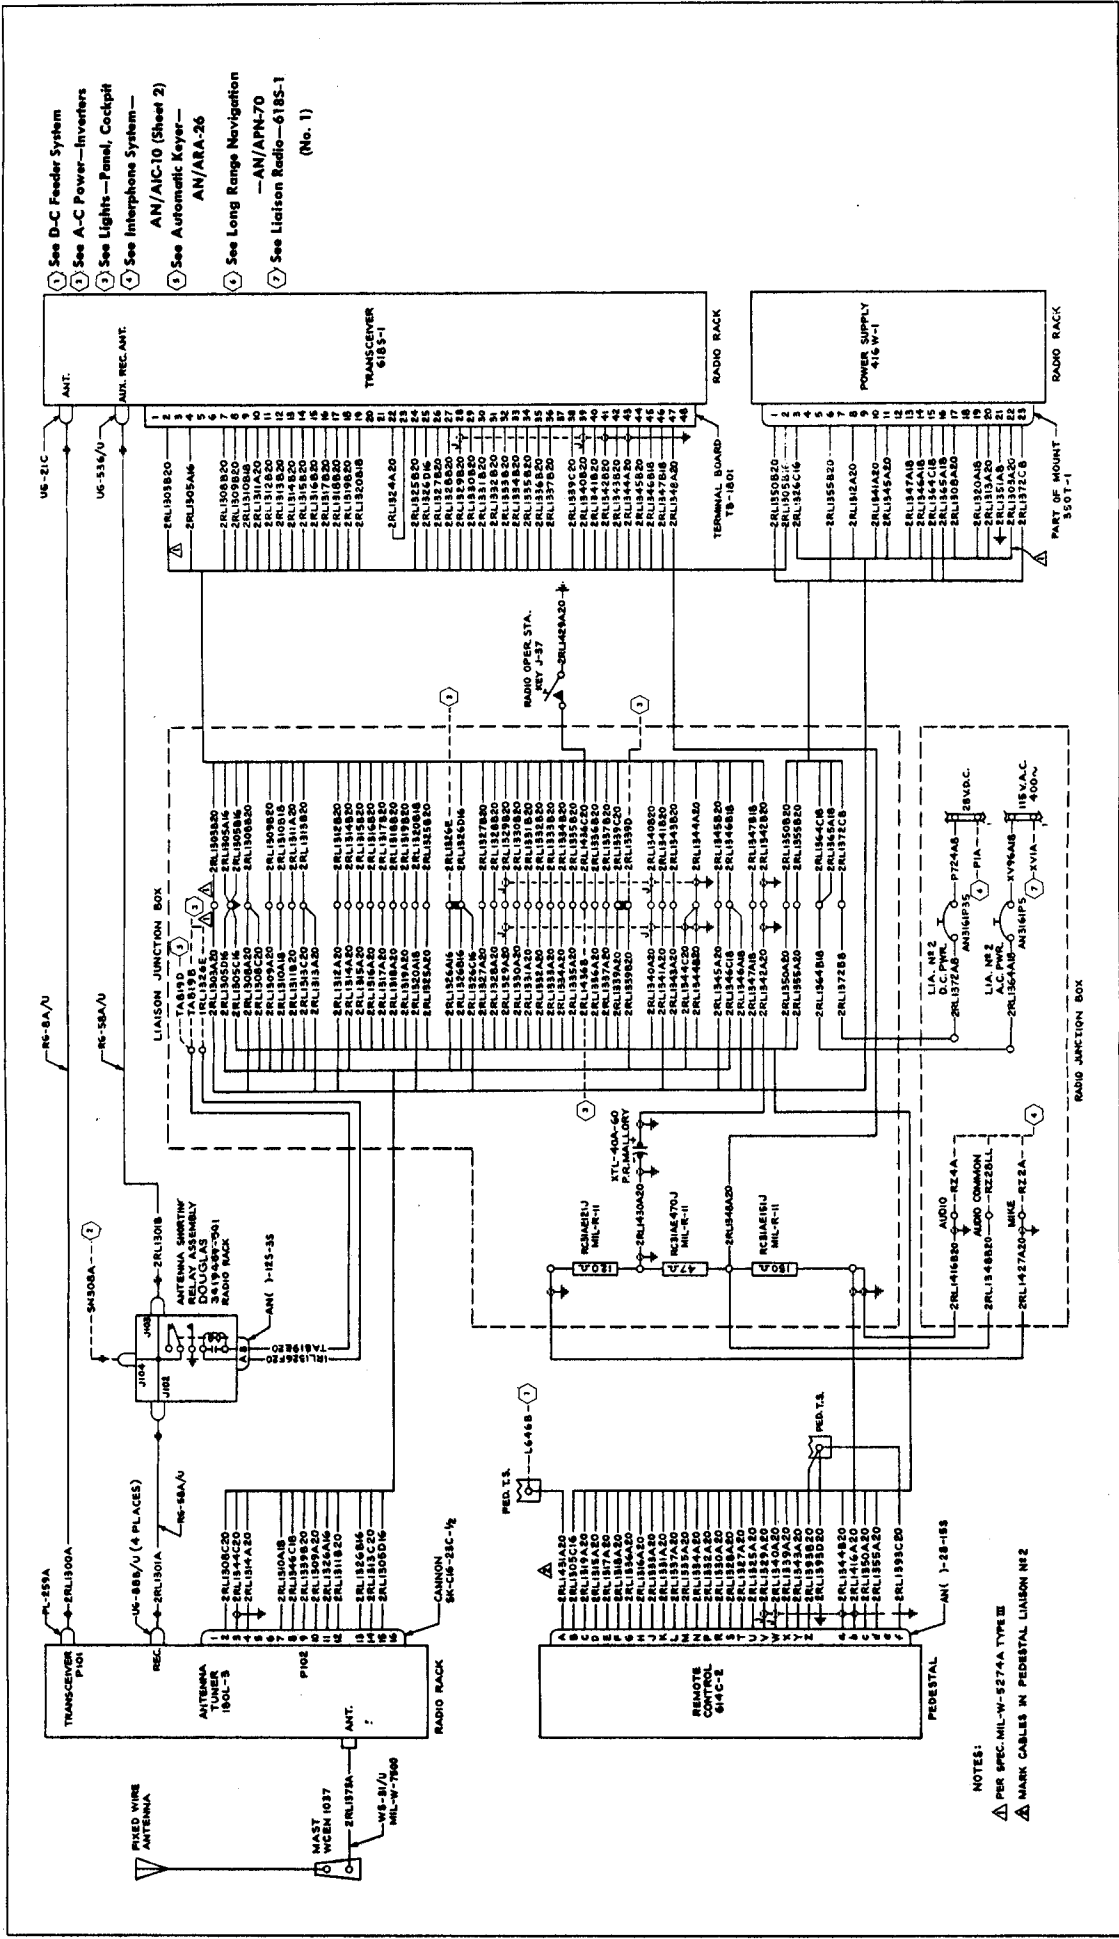


Figure 459B. Liaison Radio — 618S-1 (No. 2) (Aircraft 328 and Subsequent)

Revised 15 January 1955

Figure 460 deleted.


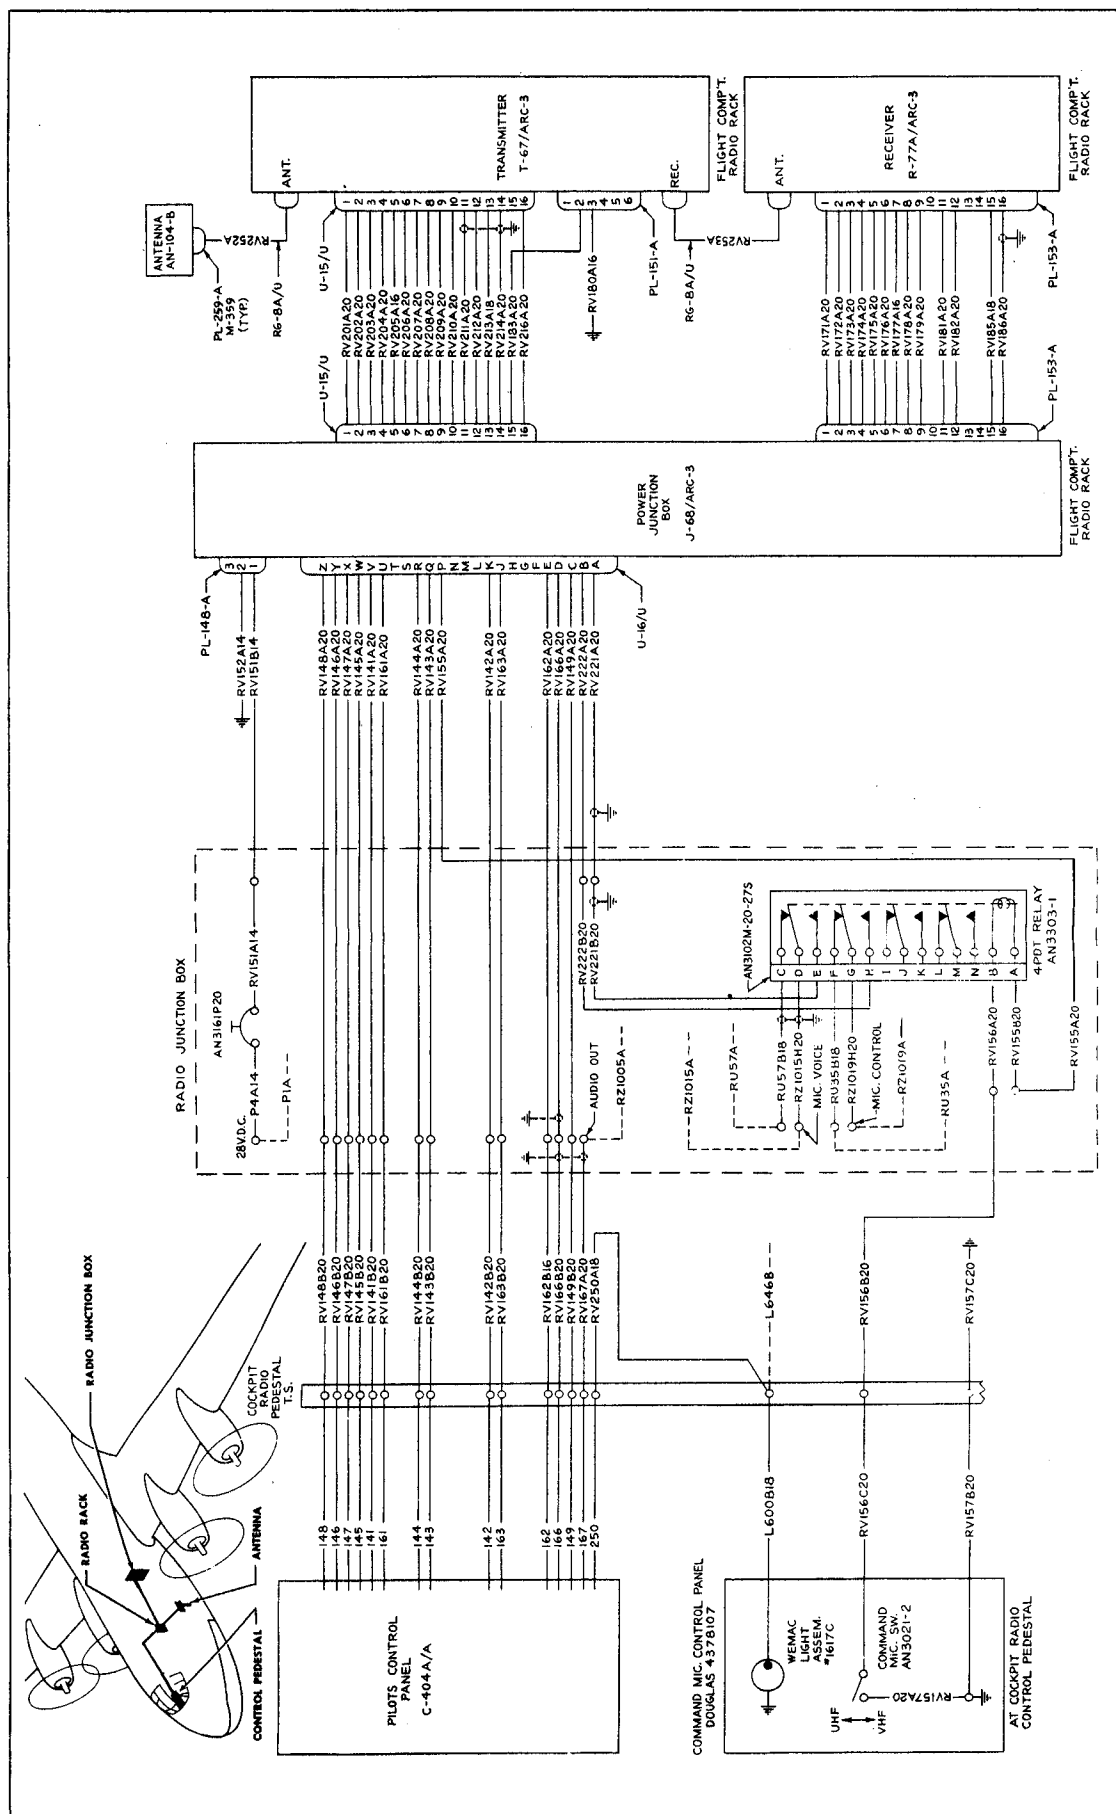


Figure 460C. VHF Command Radio - AN/ARC-3 (Aircraft 115 through 244)

Revised 1 October 1954

466E

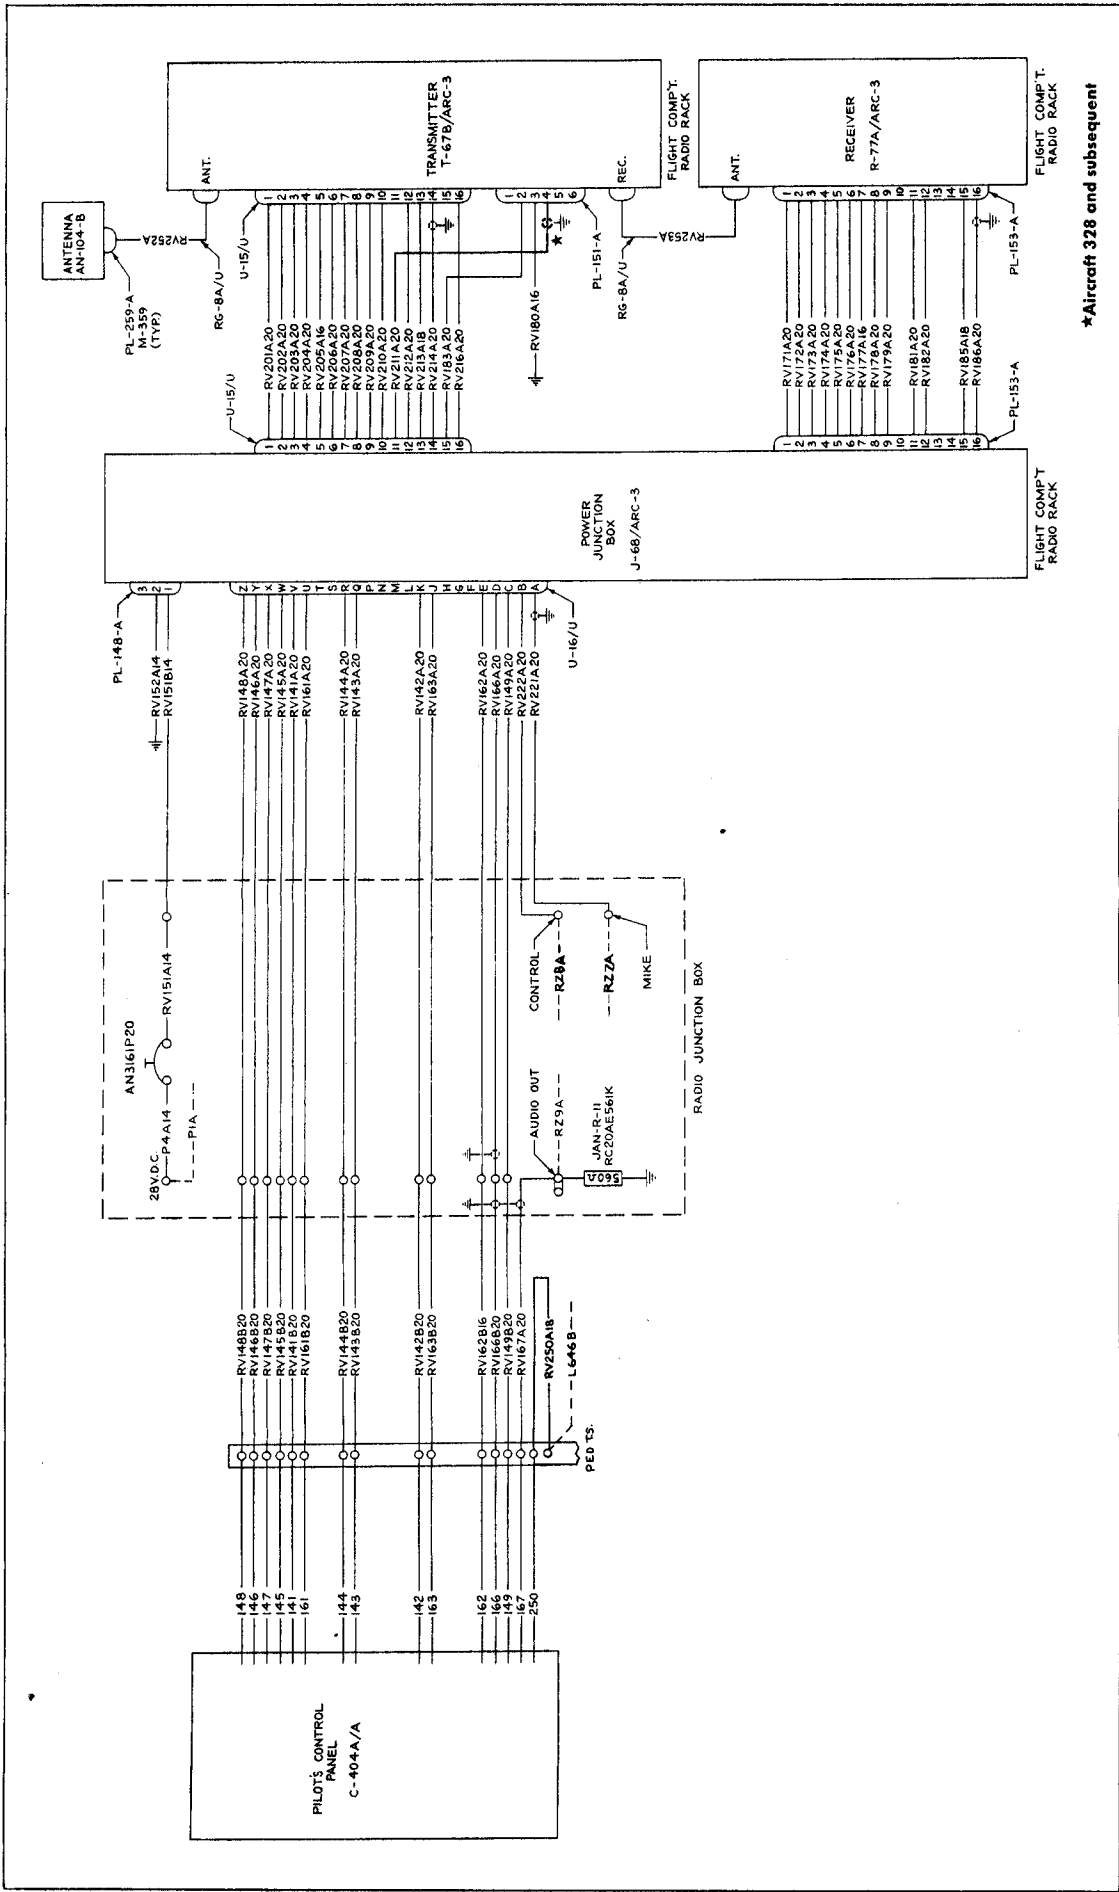

11.13

Figure 461. VHF Command Radio - AN/ARC-3 (Aircraft 245 and Subsequent)

466F

Revised 15 January 1955

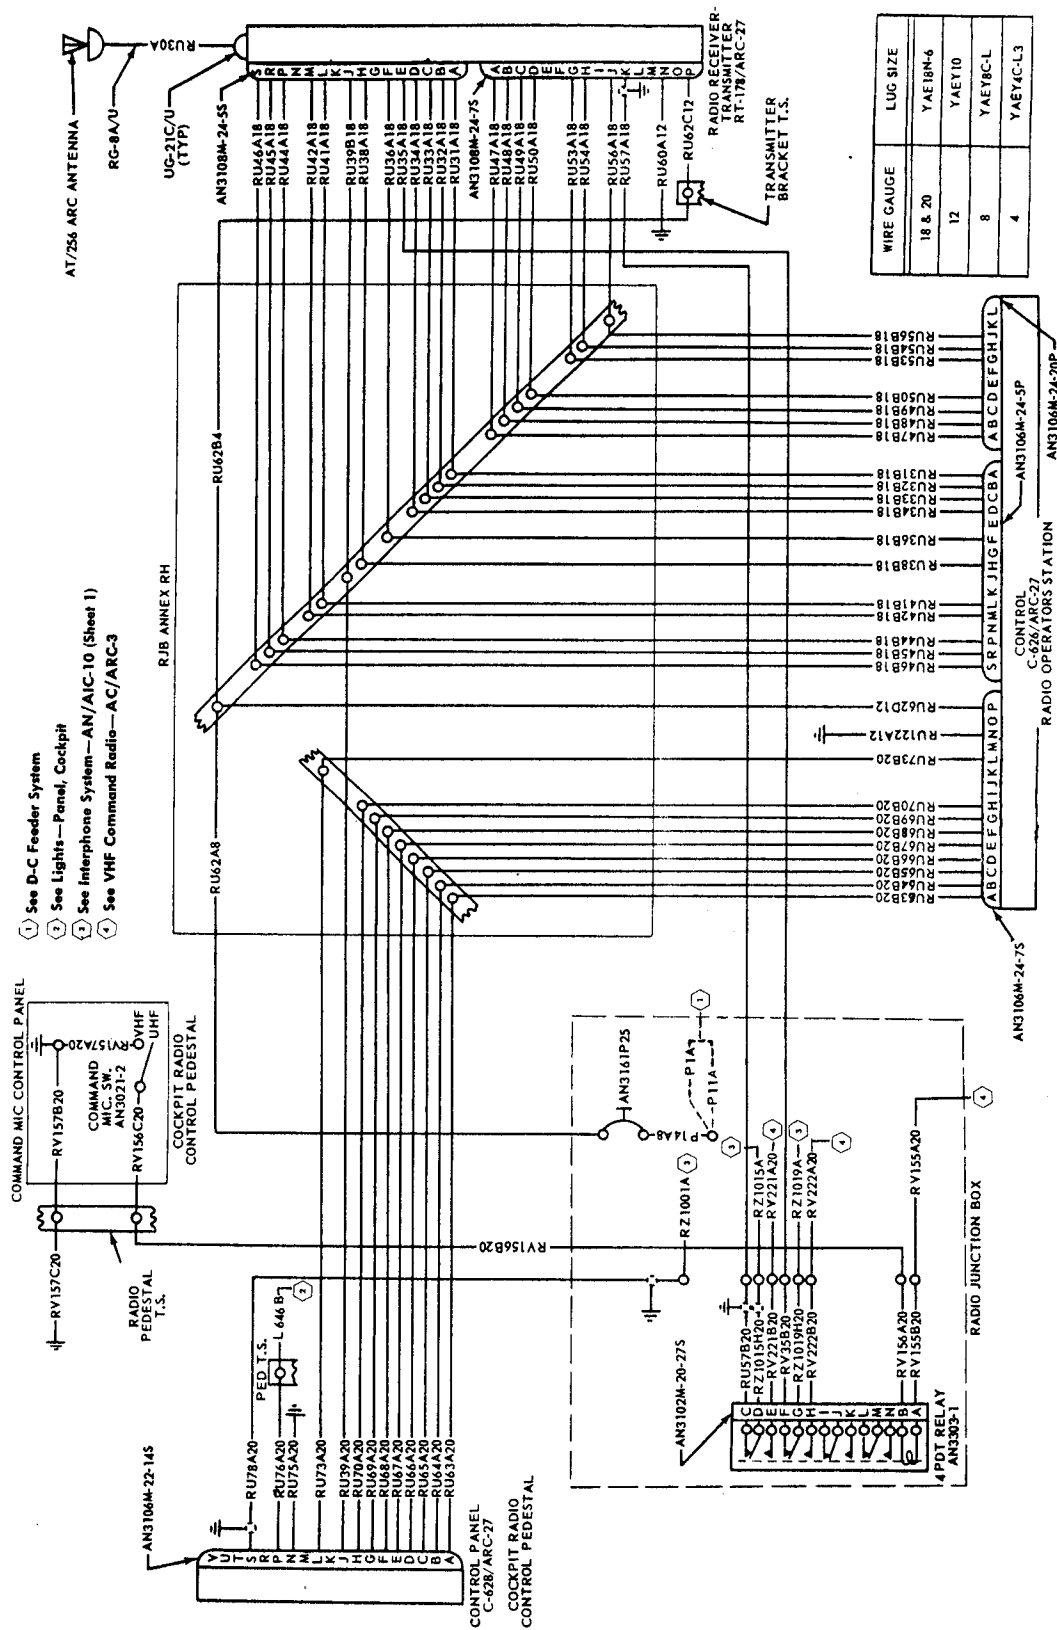



Figure 461A. UHF Transmitter-Receiver - AN/ARC-27 (Aircraft A through 65)

Revised 15 January 1955

 

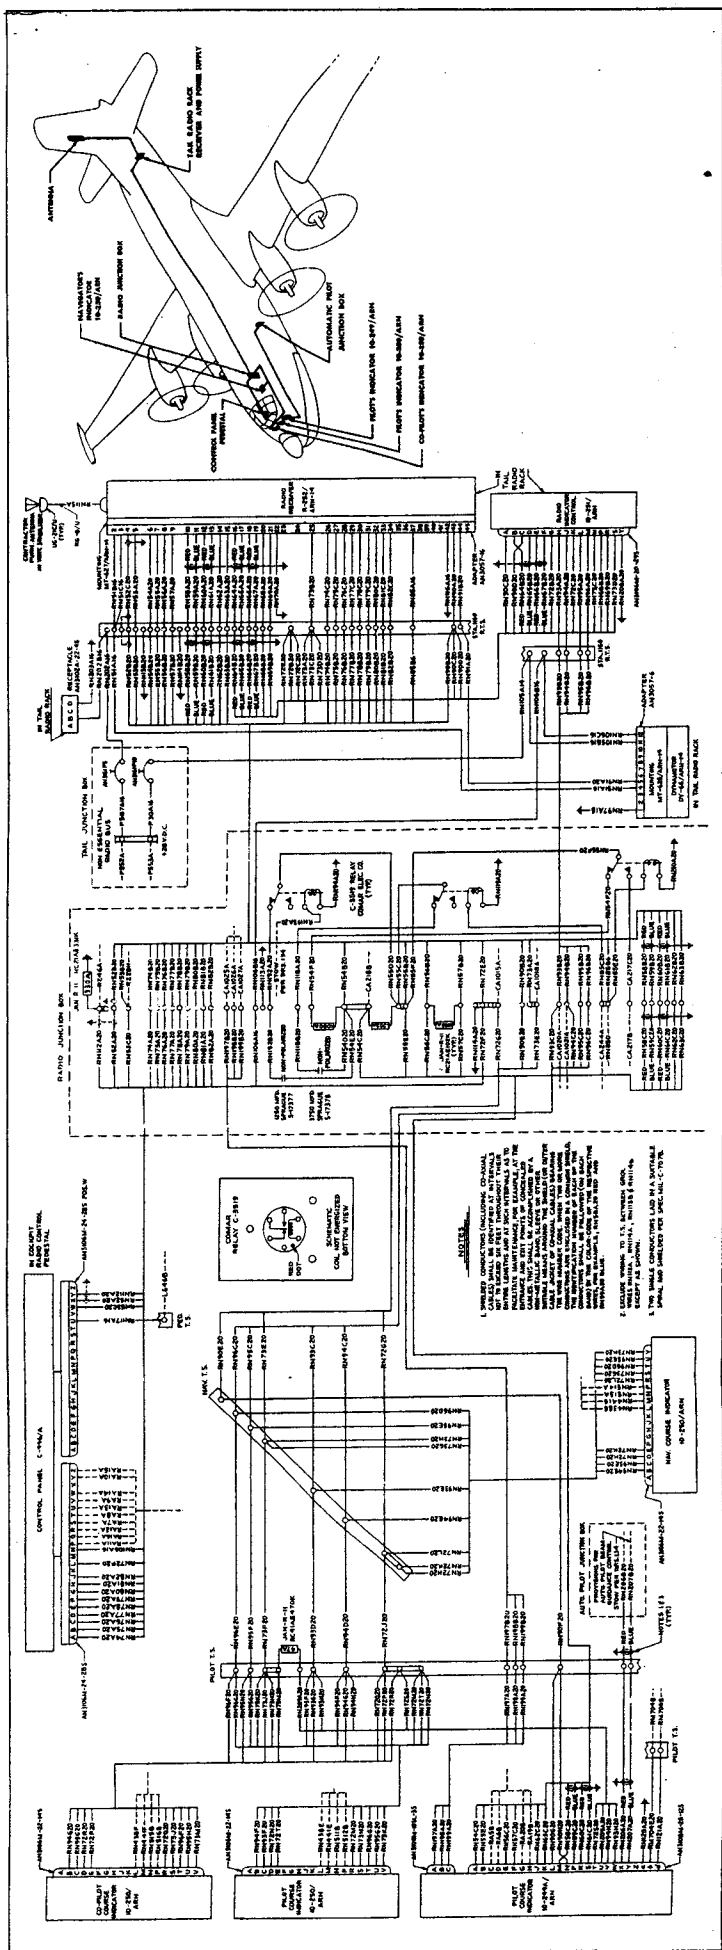


Figure 472. VOR Receiver - AN/ARN-14 (Aircraft 328 through 339)

Revised 1 April 1954





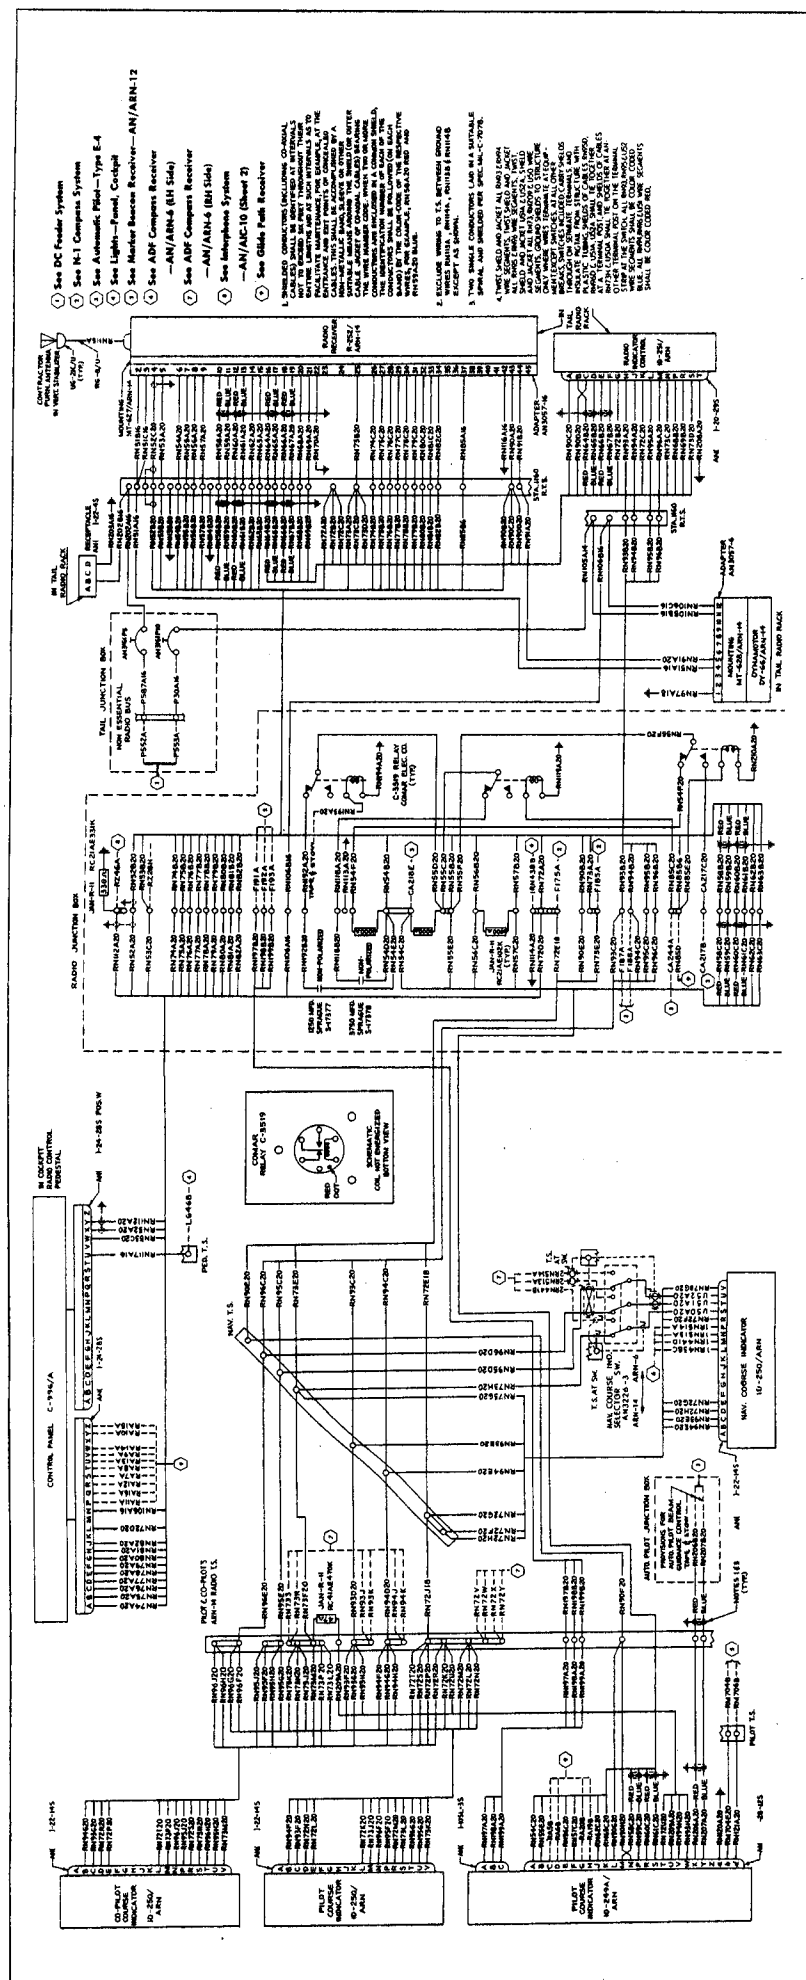


Figure 472C. VOR Receiver - AN/ARN-14 (Aircraft 422 and Subsequent)

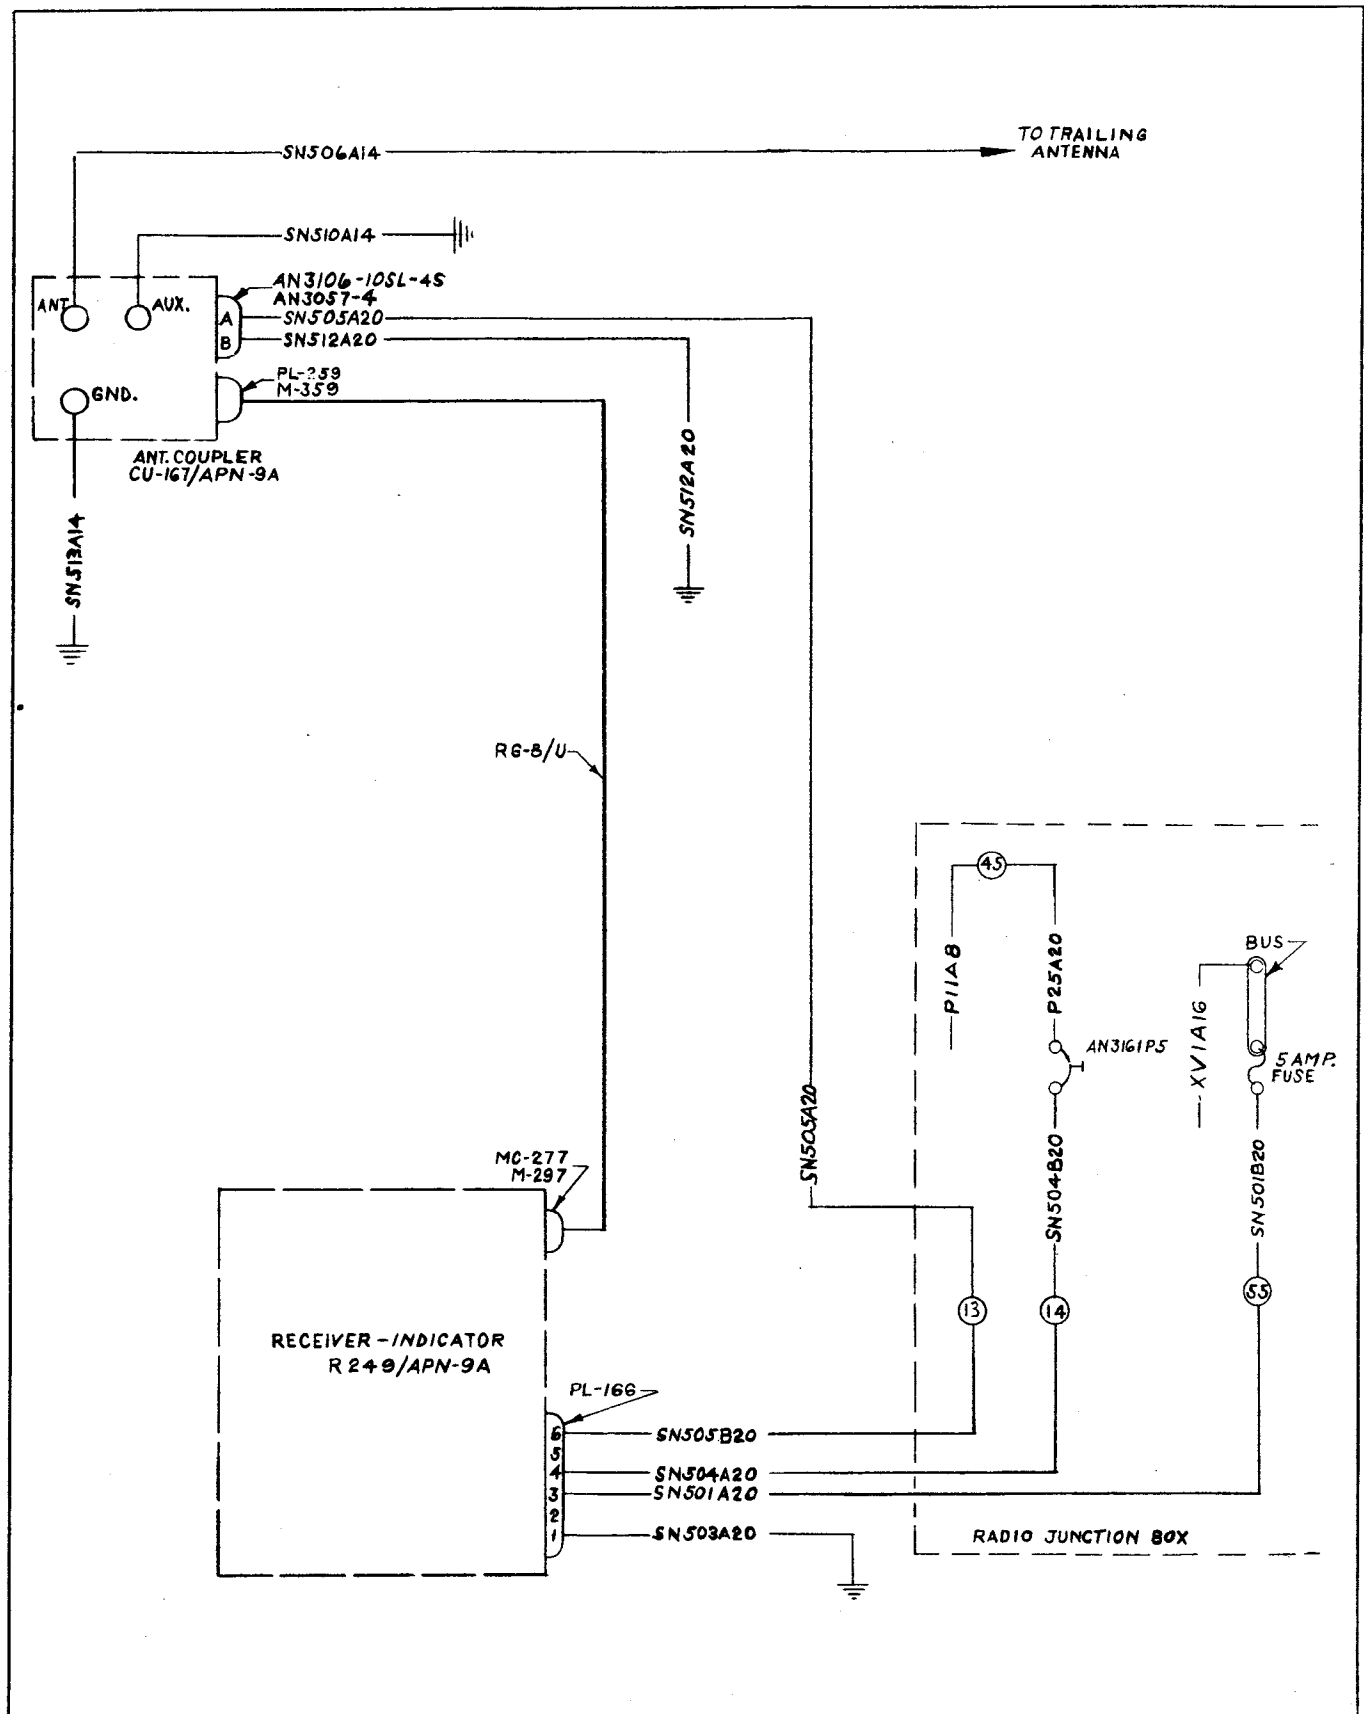


Figure 472D. Long Range Navigation - AN/APN-9A (Aircraft A through 29)

15.032

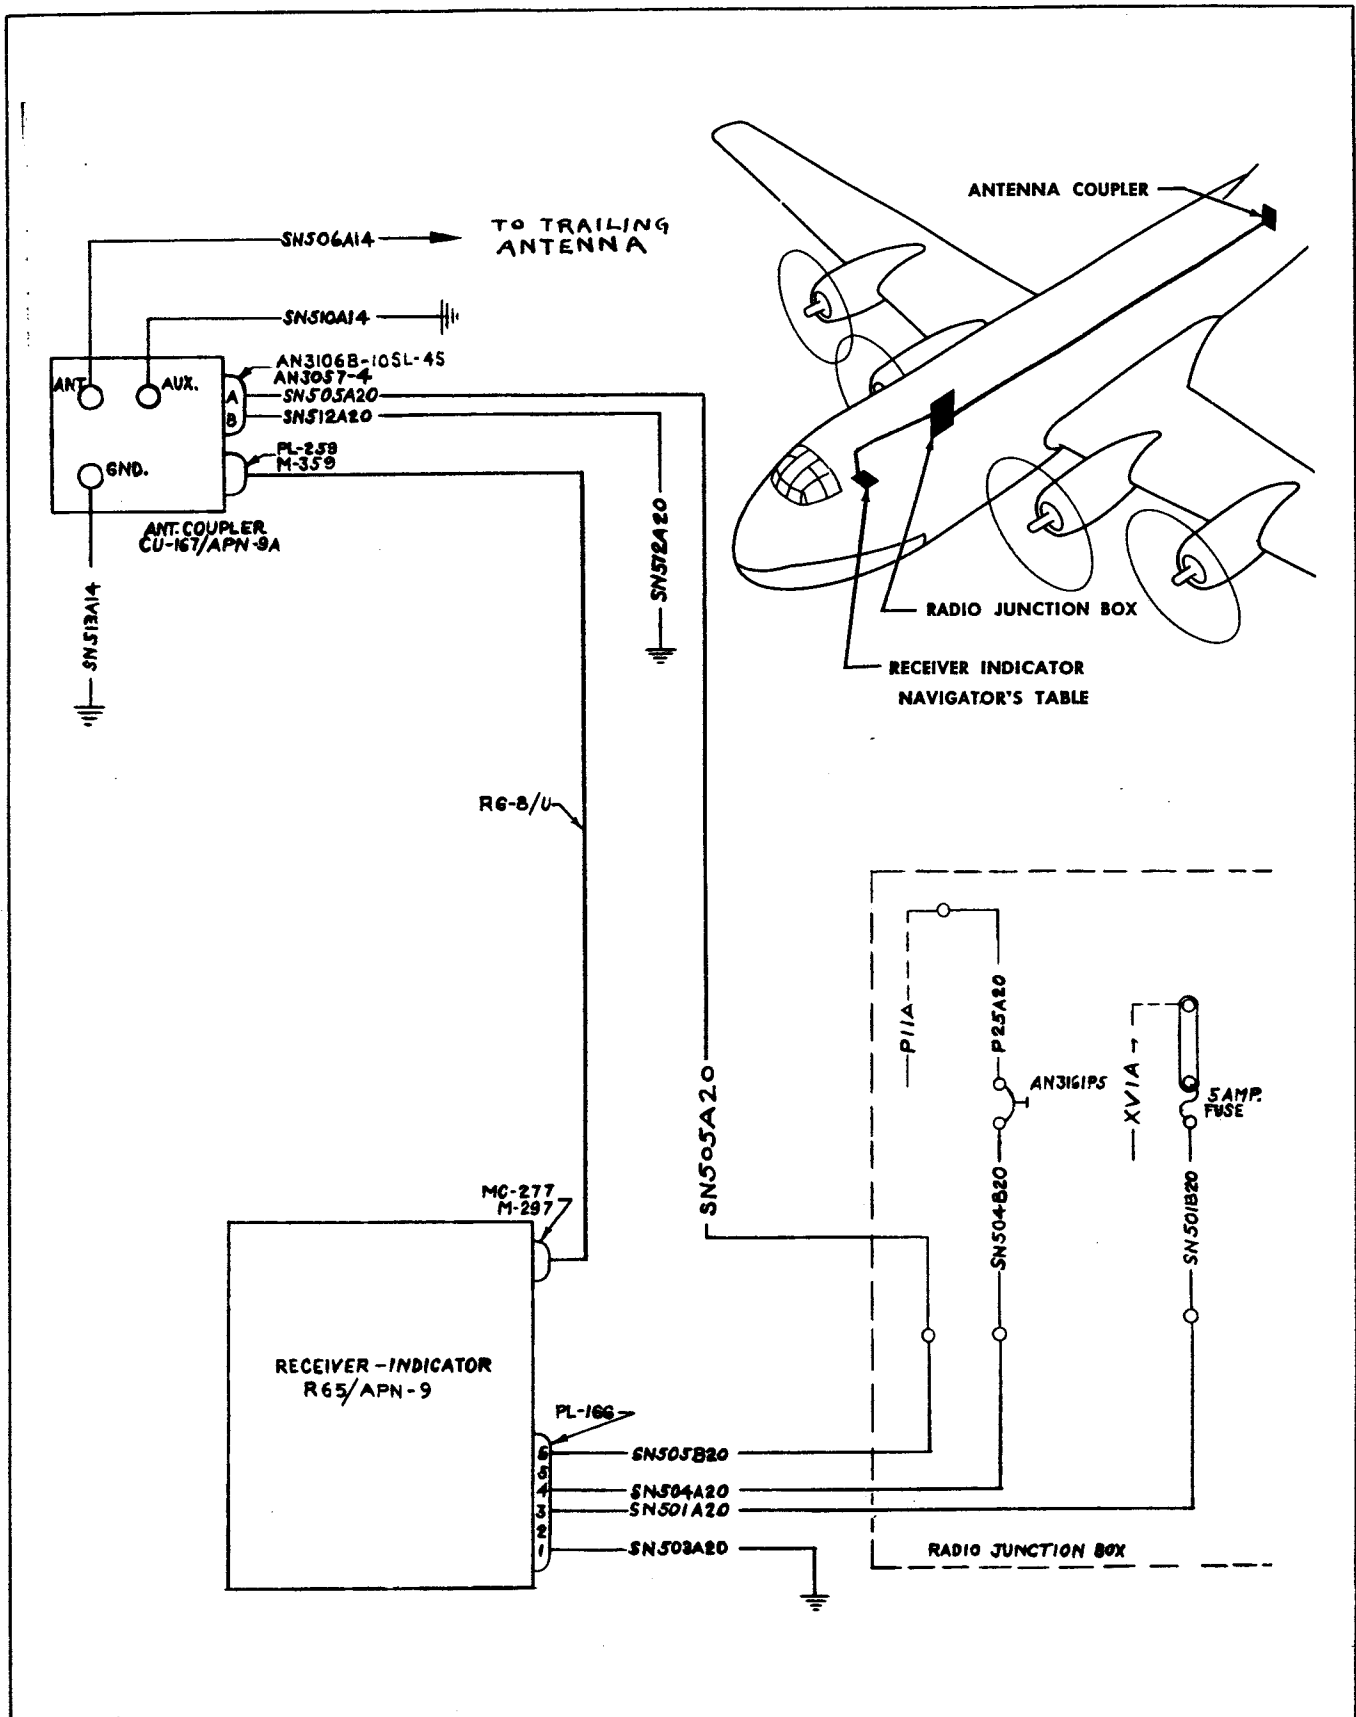


Figure 473. Long Range Navigation - AN/APN-9 (Aircraft 30 through 327)

11.497



Figure 485 deleted.

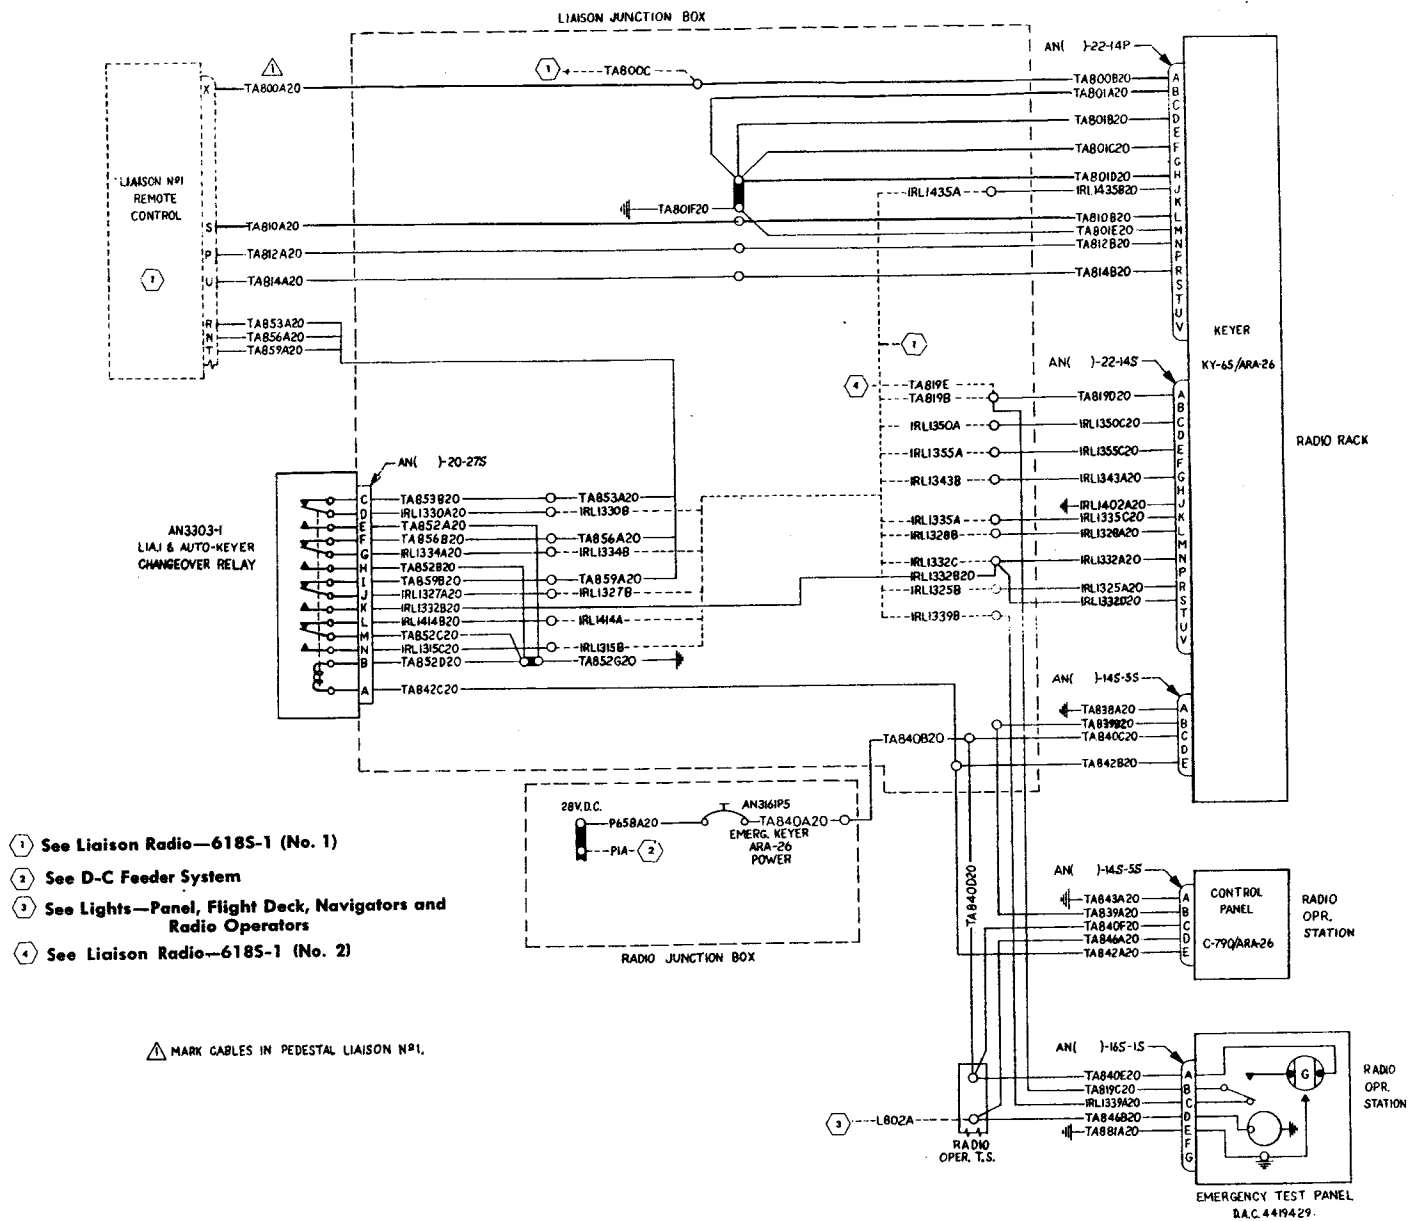


Figure 485A. Automatic Keyer - AN/ARA-26 (Aircraft 328 and Subsequent)

17.723

Figure 491 Deleted.


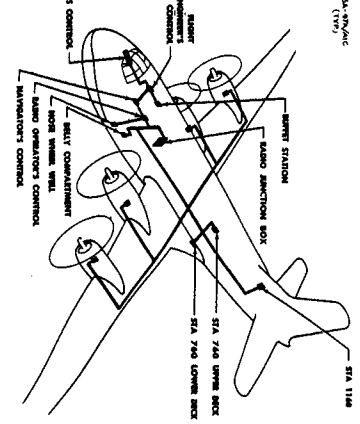


Figure 492 (Sheet 1 of 2). Interphone System -- AN/ALC-10 (Aircraft 245 through 299

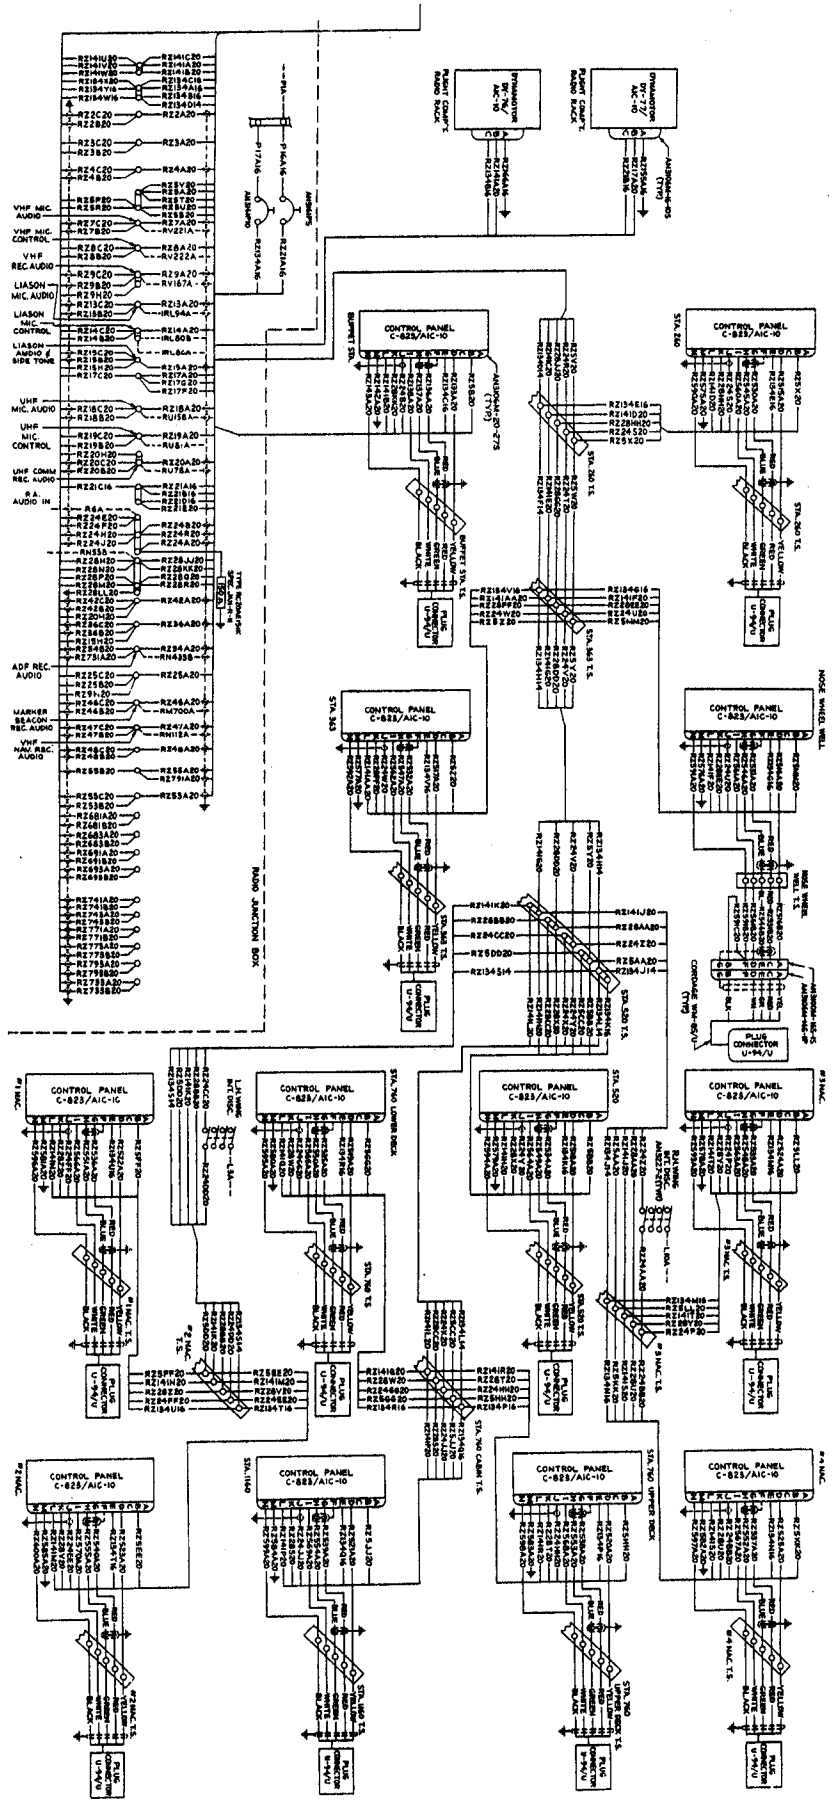

498A

 


Figure 492A (Sheet 1 of 2). Interphone System --- AN/AIC-10 (Aircraft 300 through 327)

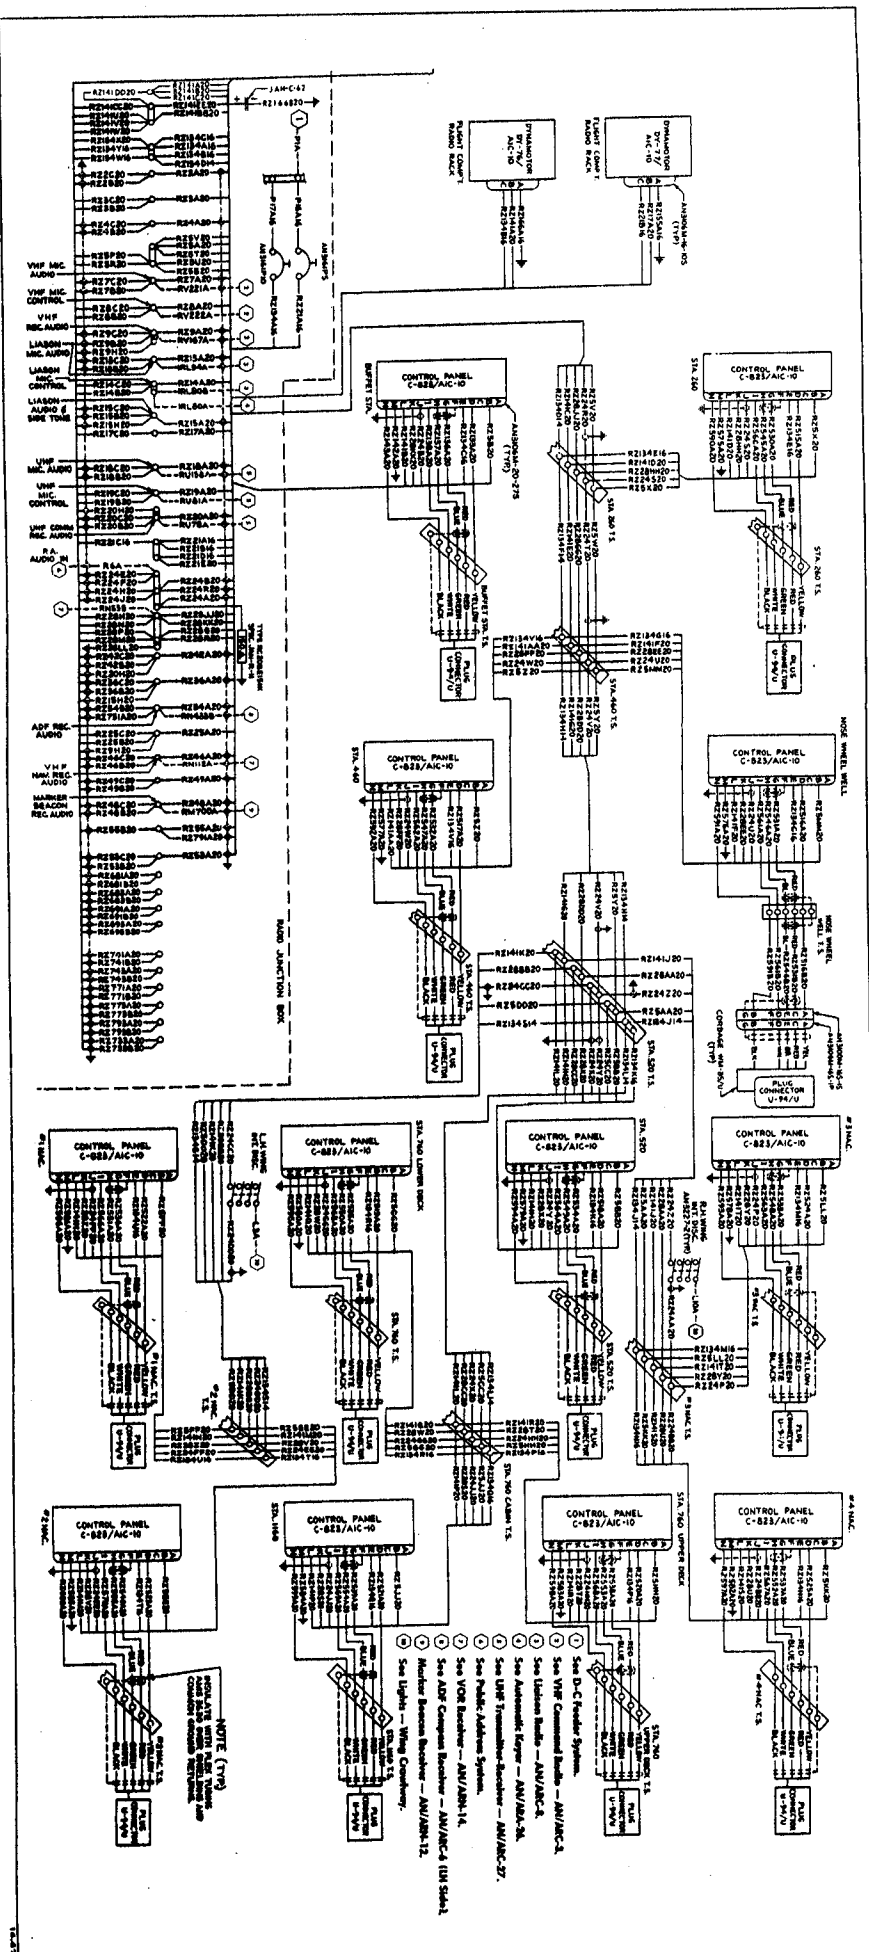



Figure 492A (Sheet 2 of 2). Interphone System - AN/ALC-10 (Aircraft 300 through 327)
Revised 15 January 1955

 

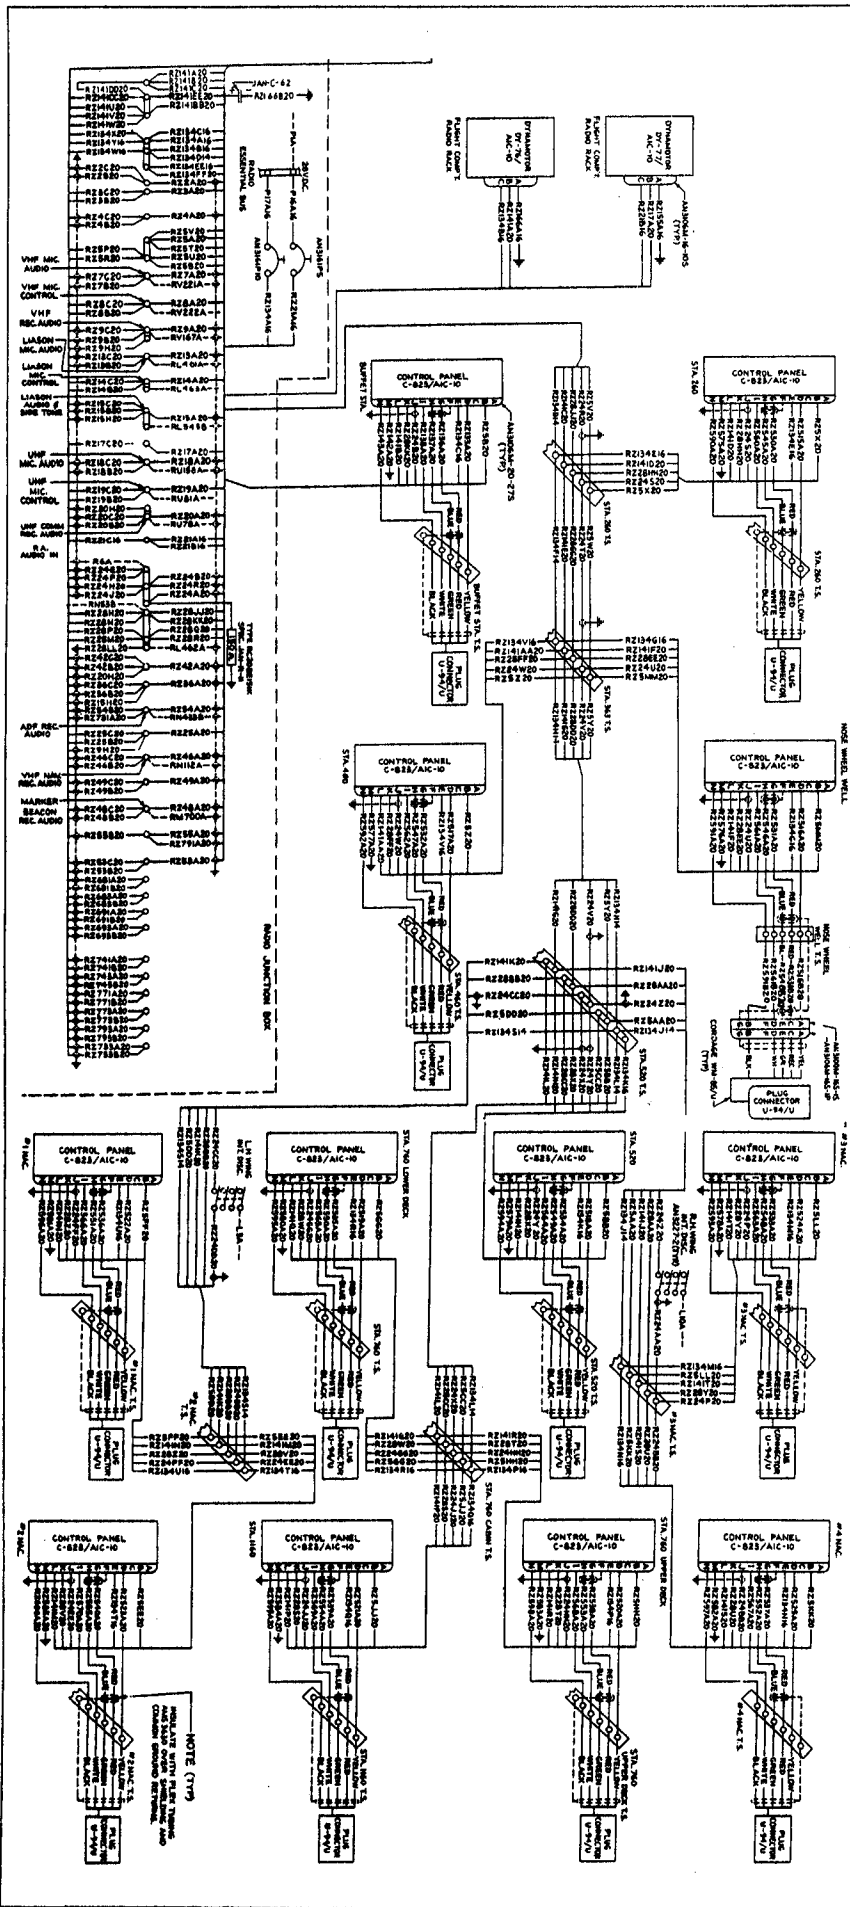


Figure 4928 (Sheet 2 of 3), Interphone System - AN/AIC-10 (Aircraft 328)

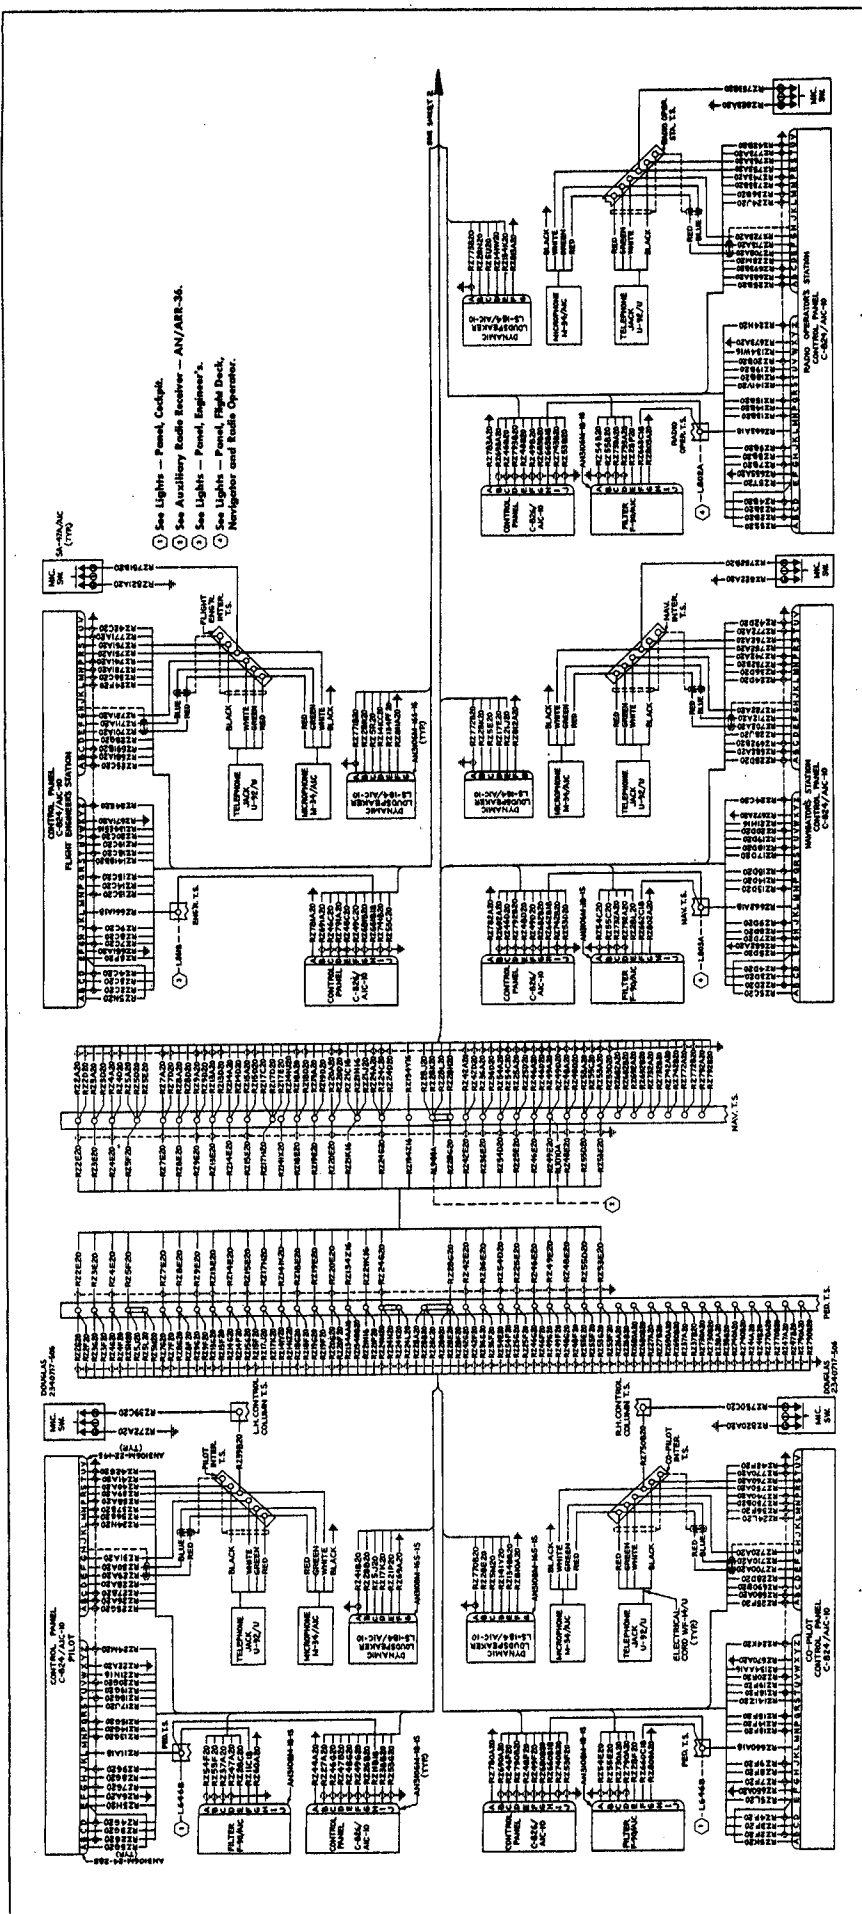


Figure 492C (Sheet 1 of 2). Interphone System - AN/AC-10 (Aircraft 329 Through 359)

Wiring Data Supplement

I.O. 1C-134A-2A

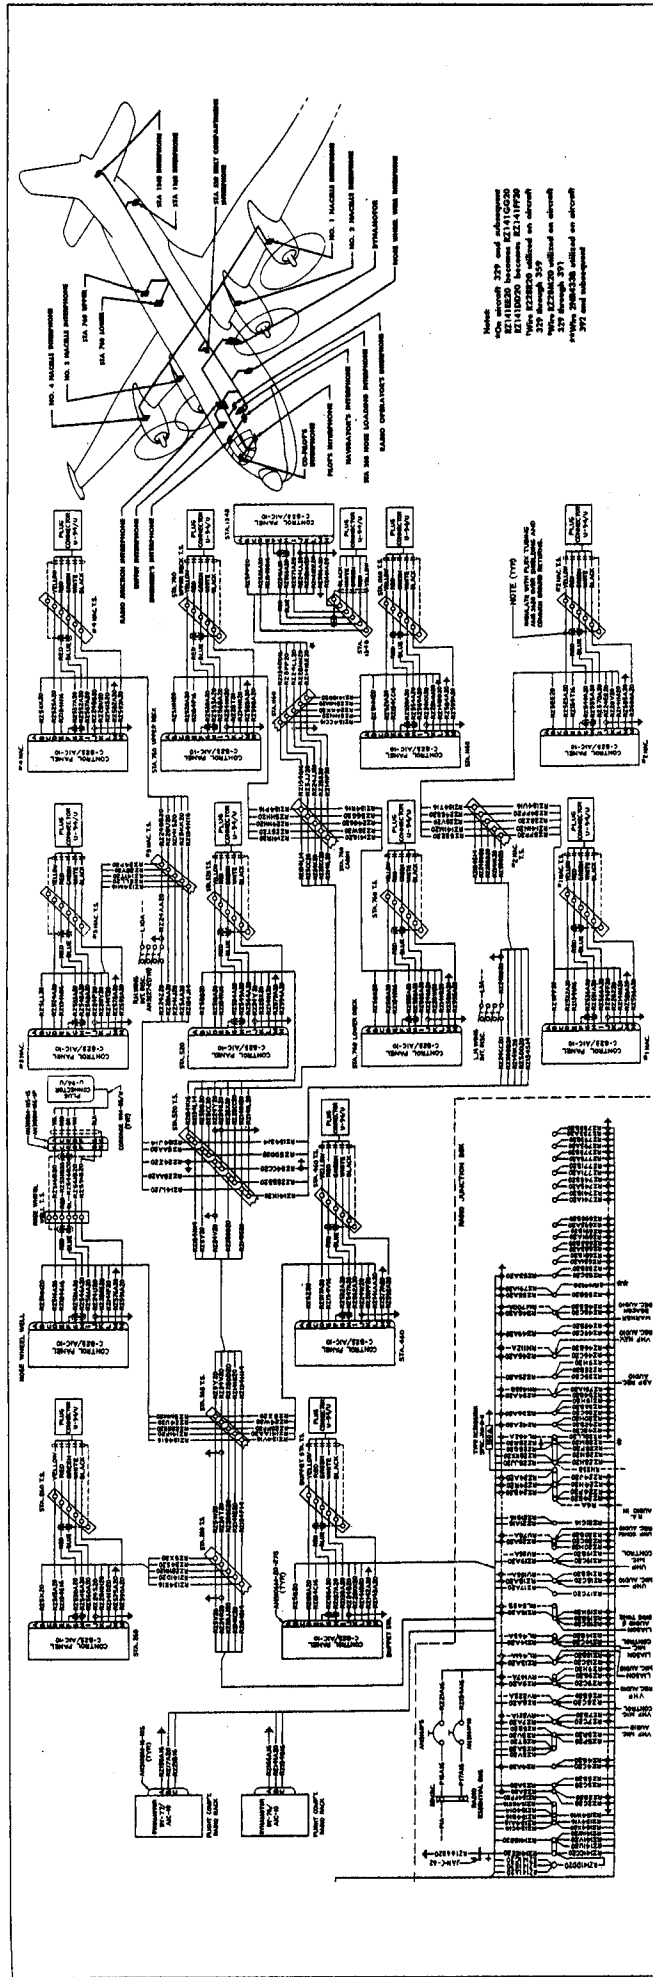


Figure 497C (Sheet 2 of 2) Interphone System - AN/AC-10 (Interph 229 through 229B)

Revised 15 January 1955

500C

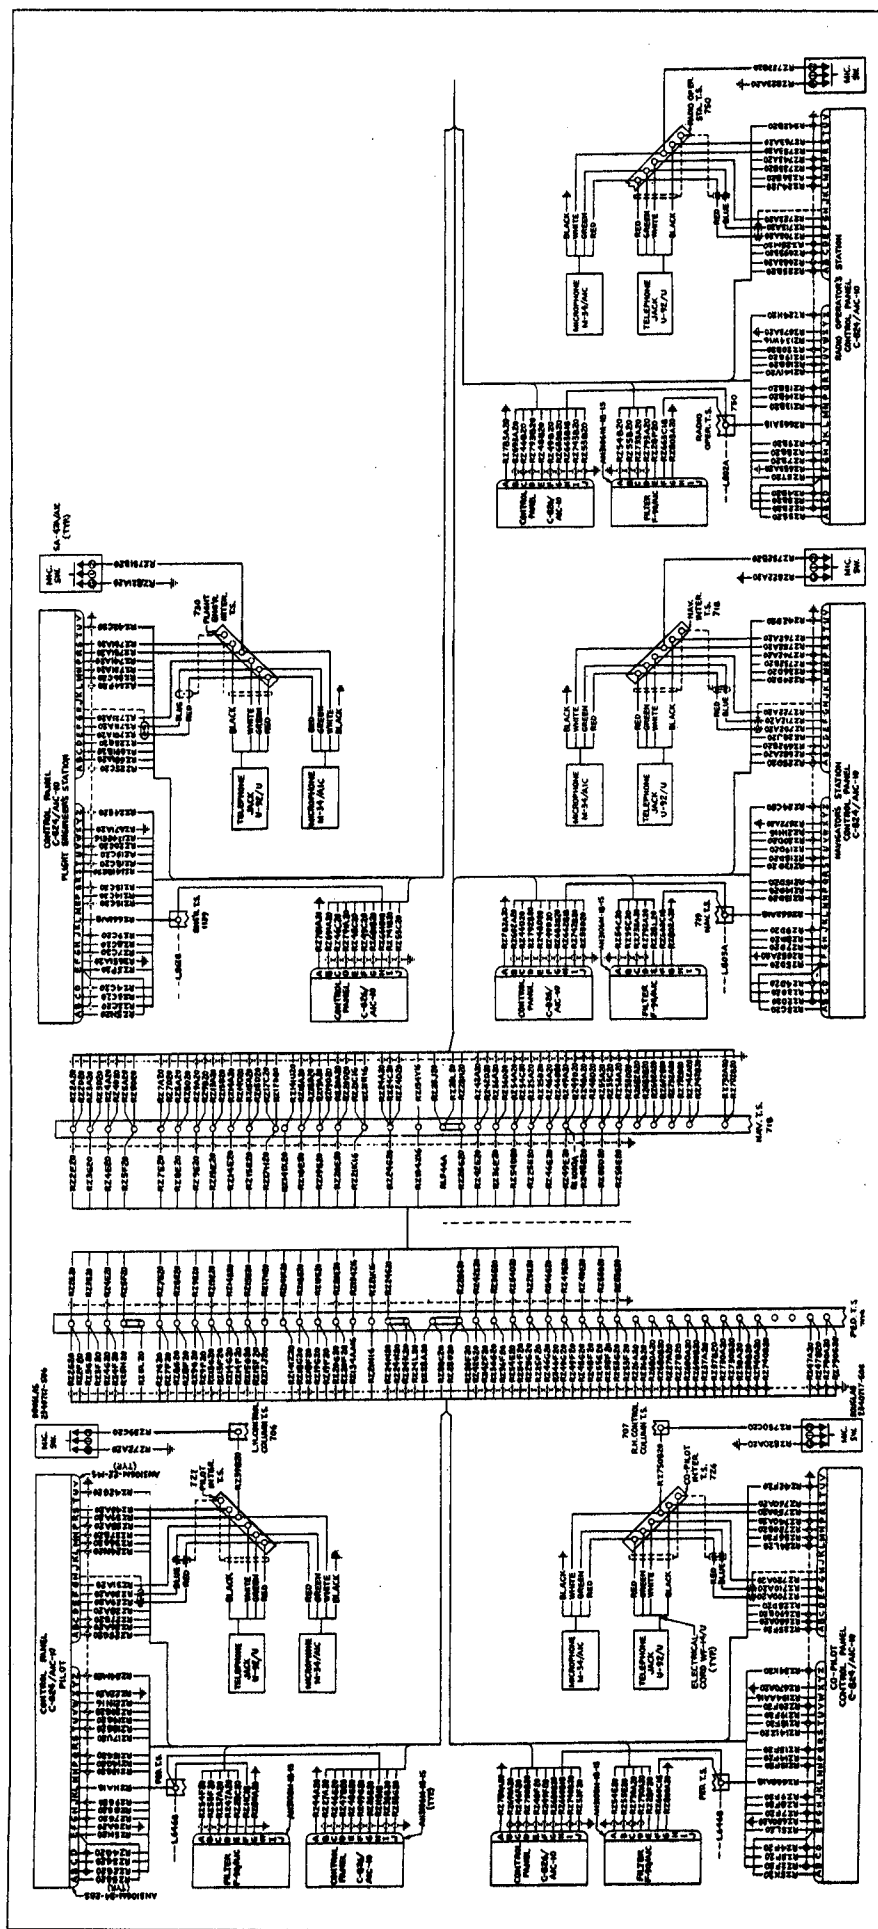


Figure 493 (Sheet 1 of 2). Interphone System - AN/AC-10 (Aircraft 360 through 421)

- ① See D-C Reader System
- ② See Air Command - AN/ARC-3
- ③ See Air Command - AN/ARC-37
- ④ See Air Transmitter Receiver - AN/ARC-27
- ⑤ See ADP Compass Receiver - AN/ARC-4
- ⑥ See VOR Receiver - AN/ARN-14
- ⑦ See Marker Beacon Receiver - AN/ARN-12
- ⑧ See Public Address System
- ⑨ See Lights - Wing Command

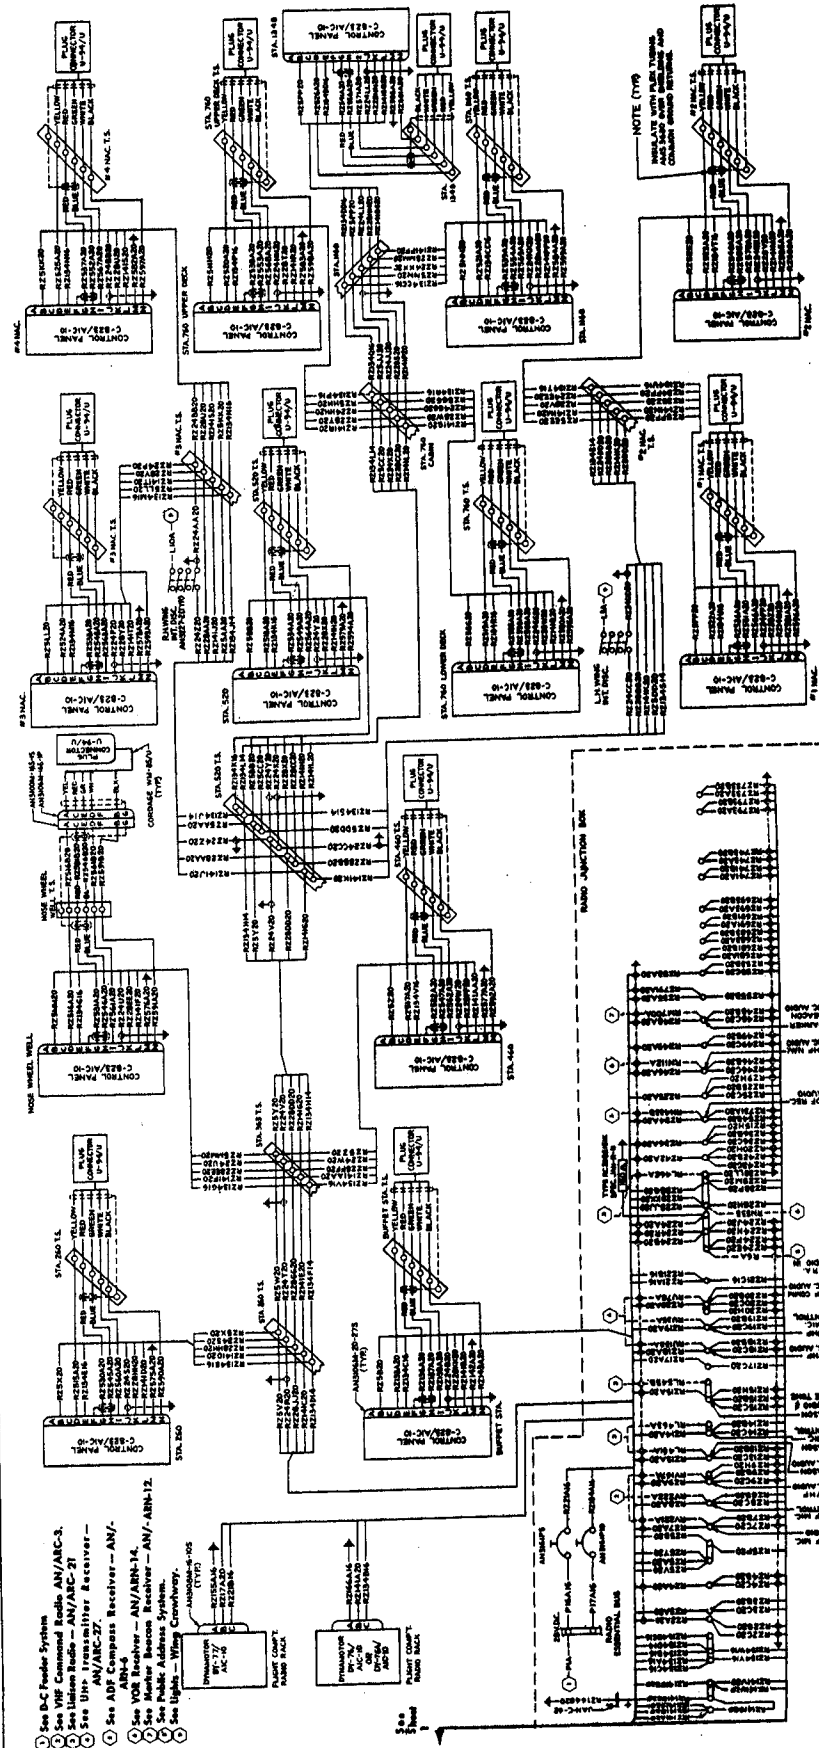


Figure 493 (Sheet 2 of 2). Interphone System - AN/ARC-10 (Aircraft 340 through 421)

ALPHABETICAL INDEX OF WIRING DIAGRAMS

A		<i>Figure No.</i>	<i>Page No.</i>		<i>Figure No.</i>	<i>Page No.</i>
A-C Power — Inverters (Aircraft A)	308	314		ADF Compass Receiver — AN/ARN-6 (Aircraft 287 through 327)	465A	471
A-C Power — Inverters (Aircraft 1 through 29) ..	309	315		ADF Compass Receiver — AN/ARN-6 (Aircraft 328 through 391)	466	472
A-C Power — Inverters (Aircraft 30 through 79) ..	310	316		ADF Compass Receiver — AN/ARN-6 (LH Side) (Aircraft 392 and Subsequent)	466A	472A
A-C Power — Inverters (Aircraft 80 through 114) ..	311	317		ADF Compass Receiver — AN/ARN-6 (RH Side) (Aircraft 1 through 30)	466B	472B
A-C Power — Inverters (Aircraft 115 through 164)	312	318		ADF Compass Receiver — AN/ARN-6 (RH Side) (Aircraft 31 through 45)	466C	472C
A-C Power — Inverters (Aircraft 165 through 214)	313	319		ADF Compass Receiver — AN/ARN-6 (RH Side) (Aircraft 46 through 114)	466D	472D
A-C Power — Inverters (Aircraft 215 through 244)	314	320		ADF Compass Receiver — AN/ARN-6 (RH Side) (Aircraft 392 and Subsequent)	466E	472E
A-C Power — Inverters (Aircraft 245 through 327)	315	320A		Aileron Boost (Aircraft 1 through 114)	3	9
A-C Power—Inverters (Aircraft 328 and Subsequent)	315A	321		Aileron Boost (Aircraft 115 through 164)	4	10
A-C Power (Nesa Glass) — Variable Frequency, Single Phase (Aircraft 80 through 114)	318	324B		Aileron Boost (Aircraft 165 through 214)	5	11
A-C Power (Nesa Glass) — Variable Frequency, Single Phase (Aircraft 115 through 139)	319	325		Aileron Boost (Aircraft 215 through 244)	6	12
A-C Power (Nesa Glass) — Variable Frequency, Single Phase (Aircraft 140 through 164)	320	326		Aileron Boost (Aircraft A, 245 through 327) ..	7	13
A-C Power (Nesa Glass) — Variable Frequency, Single Phase (Aircraft 165 through 204)	321	327		Aileron Boost (Aircraft 328 and Subsequent) ..	8	14
A-C Power (Nesa Glass) — Variable Frequency, Single Phase (Aircraft 205 through 214)	322	328		Aileron Trim Tab and Position Indicator (Aircraft A through 53)	9	15
A-C Power (Nesa Glass) — Variable Frequency, Single Phase (Aircraft 215 through 327)	323	329		Aileron Trim Tab and Position Indicator (Aircraft 54 through 189)	11	17
A-C Power (Nesa Glass) — Variable Frequency, Single Phase (Aircraft 328 through 391)	324	330		Aileron Trim Tab and Position Indicator (Aircraft 190 through 214)	12	18
A-C Power (Nesa Glass) — Variable Frequency, Single Phase (Aircraft 392 and Subsequent) ..	324A	330A		Aileron Trim Tab and Position Indicator (Aircraft 215 through 327)	14	20
A-C Power — Three Phase (Aircraft 245 through 268)	316	322		Aileron Trim Tab and Position Indicator (Aircraft 328 and Subsequent)	15	21
A-C Power — Three Phase (Aircraft 269 through 327)	316A	322A		Air Pressure — Emergency Brake (Aircraft 30 and Subsequent)	61	67
A-C Power — Three Phase (Aircraft 328 through 339)	317	323		Alighting Gear Position and Warning Indicators (Aircraft A)	47	53
A-C Power — Three Phase (Aircraft 340 through 391)	317A	324		Alighting Gear Position and Warning Indicators (Aircraft 1 through 12)	48	54
A-C Power — Three Phase (Aircraft 392 and Subsequent)	317B	324A		Alighting Gear Position and Warning Indicators (Aircraft 13 through 29)	49	55
ADF Compass Receiver — AN/ARN-6 (Aircraft A)	464A	470A		Alighting Gear Position and Warning Indicators (Aircraft 30 through 79)	50	56
ADF Compass Receiver — AN/ARN-6 (LH Side) (Aircraft 1 through 30)	464B	470B		Alighting Gear Position and Warning Indicators (Aircraft 80 through 214)	51	57
ADF Compass Receiver — AN/ARN-6 (LH Side) (Aircraft 31 through 45)	464C	470C		Alighting Gear Position and Warning Indicators (Aircraft 215 through 421)	52	58
ADF Compass Receiver — AN/ARN-6 (LH Side) (Aircraft 46 through 114)	464D	470D		Alighting Gear Position and Warning Indicators (Aircraft 422 and Subsequent)	52A	58A
ADF Compass Receiver — AN/ARN-6 (Aircraft 115 through 286)	465	470E		Alighting Gear Safety Switches and Throttle Quadrant Lock (Aircraft A)	53	59

Revised 1 October 1954

A through D

A (Continued)	Figure No.	Page No.		Figure No.	Page No.
Alighting Gear Safety Switches and Throttle Quadrant Lock (Aircraft 1 through 214)	57	63	Auxiliary Power Unit — GTPU (Aircraft 340 through 359)	455A	462
Alighting Gear Safety Switches and Throttle Quadrant Lock (Aircraft 215 and Subsequent)	58	64	Auxiliary Power Unit — GTPU (Aircraft 360 through 391)	455B	462A
Ammeters and Voltmeter (D-C) (Aircraft A)	264	270	Auxiliary Power Unit — GTPU (Aircraft 392 through 421)	455C	462B
Ammeters and Voltmeter (D-C) (Aircraft 1 through 29)	265	271	Auxiliary Power Unit — GTPU (Aircraft 422 and Subsequent)	455D	462C
Ammeters and Voltmeter (D-C) (Aircraft 30 through 41)	266	272			
Ammeters and Voltmeter (D-C) (Aircraft 42 through 65)	267	273	B		
Ammeters and Voltmeter (D-C) (Aircraft 66 through 214)	268	274	Bail-Out Alarm (Aircraft A through 65)	36A	42A
Ammeters and Voltmeter (D-C) (Aircraft 215 through 327)	269	275	Bail-Out Alarm (Aircraft 66 through 164)	36B	42B
Ammeters and Voltmeter (D-C) (Aircraft 328 and Subsequent)	270	276	Bail-Out Alarm (Aircraft 165 through 327)	37	43
Automatic Keyer — AN/ARA-26 (Aircraft 165 through 327)	484	490	Bail-Out Alarm (Aircraft 328 and Subsequent)	38	44
Automatic Keyer — AN/ARA-26 (Aircraft 328 and Subsequent)	485A	490B	Blower Supercharger Control (Aircraft 205 through 214)	150	156
Automatic Pilot — Type E-4 (Aircraft A)	282	288	Blower Supercharger Control (Aircraft 215 and Subsequent)	151	157
Automatic Pilot — Type E-4 (Aircraft 42 through 53)	283	289	Buffet Power (Aircraft A through 29)	39	45
Automatic Pilot — Type E-4 (Aircraft 54 through 89)	284	290	Buffet Power (Aircraft 30 through 214)	40	46
Automatic Pilot — Type E-4 (Aircraft 90 through 114)	285	291	Buffet Power (Aircraft 215 through 327)	41	47
Automatic Pilot — Type E-4 (Aircraft 115 through 164)	286	292	Buffet Power (Aircraft 328 and Subsequent)	42	48
Automatic Pilot — Type E-4 (Aircraft 165 through 214)	287	293			
Automatic Pilot — Type E-4 (Aircraft 215 through 244)	288	294	C		
Automatic Pilot — Type E-4 (Aircraft 245 through 286)	288A	294A	Cabin Oven and Hot Cup Circuit (Aircraft 30 through 114)	43	49
Automatic Pilot — Type E-4 (Aircraft 287)	288B	294B	Cabin Oven and Hot Cup Circuit (Aircraft 115 through 327)	44	50
Automatic Pilot — Type E-4 (Aircraft 288 through 327)	288C	294C	Carburetor Air Filter (Aircraft A)	152	158
Automatic Pilot — Type E-4 (Aircraft 328 through 359)	289	294D	Carburetor Air Filter (Aircraft 1 through 29)	153	159
Automatic Pilot — Type E-4 (Aircraft 360 through 391)	289A	294E	Carburetor Air Filter (Aircraft 30 through 79) ..	154	160
Automatic Pilot — Type E-4 (Aircraft 392 and Subsequent)	289B	294F	Carburetor Air Filter (Aircraft 80 through 214) ..	155	161
Auxiliary Hydraulic Pump (Aircraft A through 89)	65	70A	Carburetor Air Filter (Aircraft 215 through 327) ..	156	162
Auxiliary Hydraulic Pump (Aircraft 90 through 164)	65A	71	Carburetor Air Filter (Aircraft 328 and Subsequent)	157	163
Auxiliary Hydraulic Pump (Aircraft 165 through 214)	67	73	Carburetor Anti-Icer (Aircraft A through 114) ..	117	125
Auxiliary Hydraulic Pump (Aircraft 215 through 327)	68	74	Carburetor Anti-Icer (Aircraft 115 through 214) ..	120	126
Auxiliary Hydraulic Pump (Aircraft 328 and Subsequent)	69	75	Carburetor Anti-Icer (Aircraft 215 through 327) ..	121	127
Auxiliary Power Plant Control (Aircraft A)	449	455	Carburetor Anti-Icer (Aircraft 328 and Subsequent)	122	128
Auxiliary Power Plant Control (Aircraft 1 through 29)	450	456	Cowl Flap Control (Aircraft A through 164)	212	218
Auxiliary Power Plant Control (Aircraft 30 through 65)	451	457	Cowl Flap Control (Aircraft 165 through 183)	213	219
Auxiliary Power Plant Control (Aircraft 66 through 164)	452	458	Cowl Flap Control (Aircraft 184 through 214)	214	220
Auxiliary Power Plant Control (Aircraft 165 through 214)	453	459	Cowl Flap Control (Aircraft 215 through 327)	215	221
Auxiliary Power Plant Control (Aircraft 215 through 327)	454	460	Cowl Flap Control (Aircraft 328 and Subsequent)	216	222
Auxiliary Power Unit — GTPU (Aircraft 328 through 339)	455	461	Cowl Flap Position Indicator (Aircraft A through 214)	262	268
			Cowl Flap Position Indicator (Aircraft 215 and Subsequent)	263	269
			D		
			D-C Feeder System (Aircraft A)	325	331
			D-C Feeder System (Aircraft 1 through 29)	326	332
			D-C Feeder System (Aircraft 30 through 41)	327	333
			D-C Feeder System (Aircraft 42 through 65)	328	334
			D-C Feeder System (Aircraft 66 through 79)	329	335
			D-C Feeder System (Aircraft 80 through 114)	330	336
			D-C Feeder System (Aircraft 115 through 139)	331	337
			D-C Feeder System (Aircraft 140 through 164)	332	338
			D-C Feeder System (Aircraft 165 through 214)	333	339
			D-C Feeder System (Aircraft 215 through 244)	334	340
			D-C Feeder System (Aircraft 245 through 268)	335	341
			D-C Feeder System (Aircraft 269 through 327)	336	342
			D-C Feeder System (Aircraft 328 through 339)	336A	342A
			D-C Feeder System (Aircraft 340 through 374)	336B	342B

Revised 15 January 1955

D (Continued)	Figure No.	Page No.
D-C Feeder System (Aircraft 375 and Subsequent)	337	342C
Defroster - Navigator's Viewing Window (Aircraft 165 through 327)	128	134
Defroster - Navigator's Viewing Window (Aircraft 328 and Subsequent)	129	135
Detectors - Generator and Alternator Overheat (Aircraft 422 and Subsequent)	147A	154
Doors-Open Warning (Aircraft A through 327) ..	344	350
Doors-Open Warning (Aircraft 328 and Subsequent)	345	351
Driftmeter (Aircraft A through 331)	280	286
Driftmeter (Aircraft 332 and Subsequent)	280A	286A

E

Electrical Symbols	2	5
Engine Analyzer (Aircraft A through 204)	271	277
Engine Analyzer (Aircraft 205 and Subsequent) ..	274	278
Examples of Wire Identification Coding	1	2

F

Fire Detectors - Engine and Auxiliary Power Plant (Aircraft A)	138	144
Fire Detectors - Engine and Auxiliary Power Plant (Aircraft 1 through 33)	139	145
Fire Detectors - Engine and Auxiliary Power Plant (Aircraft 34 through 140)	142	148
Fire Detectors - Engine and Auxiliary Power Plant (Aircraft 141 through 164)	144	150
Fire Detectors - Engine and Auxiliary Power Plant (Aircraft 165 through 214)	145	151
Fire Detectors - Engine and Auxiliary Power Plant (Aircraft 215 through 327)	146	152
Fire Detectors - Engine and Auxiliary Power Plant (Aircraft 328 and Subsequent)	147	153
Fire Extinguisher - Engine (Aircraft A)	133A	140
Fire Extinguisher - Engine (Aircraft 1 through 164)	134	140A
Fire Extinguisher - Engine (Aircraft 165 through 214)	135	141
Fire Extinguisher - Engine (Aircraft 215 through 327)	136	142
Fire Extinguisher - Engine (Aircraft 328 and Subsequent)	137	143
Firewall Shutoff Valves (Aircraft A through 114)	171	179
Firewall Shutoff Valves (Aircraft 115 through 139)	174	180
Firewall Shutoff Valves (Aircraft 140 through 164)	175	181
Firewall Shutoff Valves (Aircraft 165 through 214)	176	182
Firewall Shutoff Valves (Aircraft 215 through 327)	178	184
Firewall Shutoff Valves (Aircraft 328 through 359)	179	184A
Firewall Shutoff Valves (Aircraft 360 and Subsequent)	179A	185
Flight Deck Ladder Control (Aircraft A through 44)	31	37
Flight Deck Ladder Control (Aircraft 45 through 114)	32	38
Flight Deck Ladder Control (Aircraft 115 through 327)	33	39
Flight Deck Ladder Control (Aircraft 328 and Subsequent)	34	40
Fuel Booster Pump (Aircraft A)	158	164

Fuel Booster Pump (Aircraft 1 through 89)	159	165
Fuel Booster Pump (Aircraft 90 through 139)	162	168
Fuel Booster Pump (Left Wing) (Aircraft 140 through 214)	164	170
Fuel Booster Pump (Left Wing) (Aircraft 215 and Subsequent)	165	171
Fuel Booster Pump (Right Wing) (Aircraft 140 through 214)	167	173
Fuel Booster Pump (Right Wing) (Aircraft 215 and Subsequent)	168	174
Fuel Flow (Aircraft A through 114)	225	231
Fuel Flow - Sensitive Type (Aircraft 115 through 214)	226	232
Fuel Flow - Sensitive Type (Aircraft 215 and Subsequent)	227	233
Fuel Flow - Temporary Installation (Tentatively Effective Aircraft 120 and Subsequent)	228	234
Fuel Pressure - Combustion Heater (Aircraft A through 139 and 205 through 214)	221	227
Fuel Pressure - Combustion Heater (Aircraft 215 and Subsequent)	222	228
Fuel Pressure - Engine (Aircraft A through 214)	223	229
Fuel Pressure - Engine (Aircraft 215 and Subsequent)	224	230
Fuel Quantity - Capacitance Type (Aircraft A through 29)	248	254
Fuel Quantity - Capacitance Type (Aircraft 30 through 139)	249	255
Fuel Quantity - Totalizing System (Left Wing) (Aircraft 140 through 156)	250	256
Fuel Quantity - Totalizing System (Left Wing) (Aircraft 157 through 204)	251	257
Fuel Quantity - Totalizing System (Left Wing) (Aircraft 205 through 327)	252	258
Fuel Quantity - Totalizing System (Left Wing) (Aircraft 328 and Subsequent)	253	259
Fuel Quantity - Totalizing System (Right Wing) (Aircraft 140 through 156)	254	260
Fuel Quantity - Totalizing System (Right Wing) (Aircraft 157 through 204)	255	261
Fuel Quantity - Totalizing System (Right Wing) (Aircraft 205 through 327)	256	262
Fuel Quantity - Totalizing System (Right Wing) (Aircraft 328 and Subsequent)	257	263
Fuel System - Single Point (Aircraft 80 through 139)	180	186

G

Generators (Aircraft A)	298E	304E
Generators (Aircraft 1 through 65)	298F	304F
Generators (Aircraft 66 through 204)	299	305
Generators (Aircraft 205 through 214)	300	306
Generators (Aircraft 215 through 327)	301	307
Generators (Aircraft 328 through 391)	302	308
Generators (Aircraft 392 and Subsequent)	302A	308A
Generators - Auxiliary Power Plant (Aircraft 1 through 65)	303	309
Generators - Auxiliary Power Plant (Aircraft 66 through 140)	304	310
Generators - Auxiliary Power Plant (Aircraft 141 through 214)	305	311
Generators - Auxiliary Power Plant (Aircraft 215 through 327)	306	312
Glide Path Receiver - (Aircraft 115 through 327)	477	483
Glide Path Receiver (Aircraft 328 and Subsequent)	477A	484

Figure No.	Page No.
---------------	-------------

Ground Refueling System (Left Wing) (Aircraft 140 through 174)	181	187
Ground Refueling System (Left Wing) (Aircraft 175 through 327)	182	188
Ground Refueling System (Left Wing) (Aircraft 328 and Subsequent)	182A	188A
Ground Refueling System (Right Wing) (Aircraft 140 through 174)	183	189
Ground Refueling System (Right Wing) (Aircraft 175 through 327)	184	190
Ground Refueling System (Right Wing) (Aircraft 328 and Subsequent)	184A	190A
Gyros - Vertical and Directional (Aircraft A through 89)	290	297
Gyros - Vertical and Directional (Aircraft 90 through 244)	294	298
Gyros - Vertical and Directional (Aircraft 245 through 327)	297	303
Gyros - Vertical and Directional (Aircraft 328 through 339)	298	304
Gyros - Vertical and Directional (Aircraft 340 through 359)	298A	304A
Gyros - Vertical and Directional (Aircraft 360 and Subsequent)	298B	304B
Gyros - Vertical, K-4 (Aircraft 360 through 391)	298C	304C
Gyros - Vertical, K-4 (Aircraft 392 and Subsequent)	298D	304D

Heater — Anti-Icer (Aircraft A)	92A	98A
Heater — Anti-Icer (Aircraft 1 through 65)	93	98B
Heater — Anti-Icer (Aircraft 66 through 79)	93A	99
Heater — Anti-Icer (Aircraft 80 through 114)	94	100
Heater — Anti-Icer (Aircraft 115 through 139)	95	101
Heater — Anti-Icer (Aircraft 140 through 189)	96	102
Heater — Anti-Icer (Aircraft 190 through 250)	97	103
Heater — Anti-Icer (Aircraft 251 through 327)	98	104
Heater — Anti-Icer (Aircraft 328 through 411)	99	104A
Heater — Anti-Icer (Aircraft 412 and Subsequent)	99A	105
Heater — Battery (Aircraft 361 and Subsequent)	99B	106
Heater — Cabin (Aircraft A)	79	85
Heater — Cabin (Aircraft 1 through 29)	80	86
Heater — Cabin (Aircraft 30 through 53)	81	87
Heater — Cabin (Aircraft 54 through 65)	82	88
Heater — Cabin (Aircraft 66 through 79)	83	89
Heater — Cabin (Aircraft 80 through 114)	84	90
Heater — Cabin (Aircraft 115 through 129)	85	91
Heater — Cabin (Aircraft 130 through 139)	86	92
Heater — Cabin (Aircraft 140 through 204)	87	93
Heater — Cabin (Aircraft 205 through 214)	88	94
Heater — Cabin (Aircraft 215 through 327)	89	95
Heater — Cabin (Aircraft 328 and Subsequent)	90	96
Heater — Electrically Heated Windshield (Aircraft A)	104	110
Heater — Electrically Heated Windshield (Aircraft 80 through 114)	105	111
Heater — Electrically Heated Windshield (Aircraft 115 through 214)	106	112
Heater — Electrically Heated Windshield (Aircraft 215 and Subsequent)	107	113
Heater — Fire Detector and Extinguisher (Aircraft 1 through 79)	149	155
Heater — Flight Compartment (Aircraft A)	72B	78B
Heater — Flight Compartment (Aircraft 1 through 29)	72C	78C
Heater — Flight Compartment (Aircraft 30 through 79)	72D	78D

	Figure No.	Page No.
Heater — Flight Compartment (Aircraft 80 through 164)	74	80
Heater — Flight Compartment (Aircraft 165 through 189)	75	81
Heater — Flight Compartment (Aircraft 190 through 214)	76	82
Heater — Flight Compartment (Aircraft 215 through 327)	77	83
Heater — Flight Compartment (Aircraft 328 and Subsequent)	78	84
Heater — Forward Urinal Drain Tube Anti-Icing (Aircraft 166 through 327)	131	137
Heater — Forward Urinal Drain Tube Anti-Icing (Aircraft 328 and Subsequent)	132	138
Heater Fuel Control (Aircraft A)	69A	76
Heater Fuel Control (Aircraft 1 through 140)	70	76A
Heater Fuel Control (Aircraft 141 through 214)	71	77
Heater Fuel Control (Aircraft 215 through 421)	72	78
Heater Fuel Control (Aircraft 422 and Subsequent)	72A	78A
Heater — Pitot Tube (Aircraft A)	122A	128A
Heater — Pitot Tube (Aircraft 1 through 164)	125A	131
Heater — Pitot Tube (Aircraft 165 through 339)	127	133
Heater — Pitot Tube (Aircraft 340 and Subsequent)	127A	134
Heater — Urinal Drain Tube Anti-Icing (Aircraft 1 through 164)	129A	136
Heater — Urinal Drain Tube Anti-Icing (Aircraft 165 and Subsequent)	130	136A
Heater — Windshield (Aircraft 1 through 15)	100A	106A
Heater — Windshield (Aircraft 16 through 29)	100B	106B
Heater — Windshield (Aircraft 30 through 53)	100C	106C
Heater — Windshield (Aircraft 54 through 79)	100D	106D
Heater — Windshield (Nesa Glass) (Aircraft 80 through 214)	101	107
Heater — Windshield (Nesa Glass) (Aircraft 215 through 327)	102	108
Heater — Windshield (Nesa Glass) (Aircraft 328 and Subsequent)	103	109
Hoist Control (Aircraft A through 41)	34A	40A
Hoist Control (Aircraft 42 through 114)	35	41
Hoist Control (Aircraft 115 and Subsequent)	36	42
Hydraulic Control System (Aircraft 215 and Subsequent)	62	68
Hydraulic Pressure (Aircraft 30 and Subsequent)	63	69

IFF Radar Equipment — AN/APX-6 (Aircraft 5 through 274)	478	484A
IFF Radar Equipment — AN/APX-6 (Aircraft 275 through 327)	479	485
IFF Radar Equipment — AN/APX-6 (Aircraft 328 through 339)	480	486
IFF Radar Equipment — AN/APX-6 (Aircraft 340 through 391)	480A	486A
IFF Radar Equipment — AN/APX-6 (Aircraft 392)	480B	486B
IFF Radar Equipment — AN/APX-6A (Aircraft 393 and Subsequent)	480C	486C
Ignition and Booster (Aircraft A)	198	204
Ignition and Booster (Aircraft 1 through 41)	199	204A
Ignition and Booster (Aircraft 42 through 204) ..	200	206
Ignition and Booster (Aircraft 205 and Subsequent)	201	207
Instrument Landing Equipment — AN/ARN-5A and RC-103-A (Aircraft A through 41)	493B	500H

I (Continued)

Figure Page
No. No.Figure
No.

Instrument Landing Equipment — AN/ARN-5A and RC-103-A (Aircraft 42 through 114)	493C	500J
Interphone — Headset and Microphone Connections (Aircraft A through 41)	485B	490C
Interphone System — AN/AIC-3 (Aircraft A)	485C	491
Interphone System — AN/AIC-3 (Aircraft 1 through 41)	486	492
Interphone System — AN/AIC-8 (Aircraft 42 through 65)	487	493
Interphone System — AN/AIC-8 (Aircraft 66 through 72)	488	494
Interphone System — AN/AIC-8 (Aircraft 73 through 164)	489	495
Interphone System — AN/AIC-8 (Aircraft 165 through 244)	490	496
Interphone System — AN/AIC-10 (Aircraft 245 through 299)	492	498
Interphone System — AN/AIC-10 (Aircraft 300 through 327)	492A	498B
Interphone System — AN/AIC-10 (Aircraft 328)	492B	500
Interphone System — AN/AIC-10 (Aircraft 329 through 359)	492C	500B
Interphone System — AN/AIC-10 (Aircraft 360 through 421)	493	500D
Interphone System — AN/AIC-10 (Aircraft 422 and Subsequent)	493A	500F
Interrogator Responder — AN/APN-12 (Radar)	493D	500K

L

Lamp Installation Control (Inspection) (Aircraft 165 through 327)	447	453
Lamp Installation Control (Inspection) (Aircraft 328 and Subsequent)	448	454
Liaison Radio — AN/ARC-8 (Aircraft A through 41)	455E	462D
Liaison Radio — AN/ARC-8 (Aircraft 42 through 164)	456	462E
Liaison Radio — AN/ARC-8 (Aircraft 165 through 244)	457	463
Liaison Radio — AN/ARC-8 (Aircraft 245 through 327)	458	464
Liaison Radio — 618S-1 (No. 1) (Aircraft 328 and Subsequent)	459A	466
Liaison Radio — 618S-1 (No. 2) (Aircraft 328 and Subsequent)	459B	466A
Light — Passing (Aircraft 1 through 164)	349	355
Light — Passing (Aircraft 165 through 327)	350	356
Light — Passing (Aircraft 328 and Subsequent)	351	357
Light — Taxi (Aircraft A)	362A	368A
Light — Taxi (Aircraft 1 through 41)	362B	368B
Light — Taxi (Aircraft 42 through 327)	363	369
Light — Taxi (Aircraft 328 and Subsequent)	364	370
Lights — Alighting Gear (Aircraft 66 through 327)	373	379
Lights — Alighting Gear (Aircraft 328 and Subsequent)	374	380
Lights — Cabin Floor (Aircraft A through 15)	395	401
Lights — Cabin Floor (Aircraft 16 through 114)	396	402
Lights — Cabin Floor (Aircraft 115 through 286)	397	403
Lights — Cabin Floor (Aircraft 287 through 327)	398	404
Lights — Cabin Floor (Aircraft 328 and Subsequent)	399	405
Lights — Dome, Auxiliary Floor (Aircraft A through 15)	391	397
Lights — Dome, Auxiliary Floor (Aircraft 16 through 114)	392	398

Revised 15 January 1955

Lights — Dome, Auxiliary Floor (Aircraft 115 through 286)	393
Lights — Dome, Auxiliary Floor (Aircraft 287 through 328)	394A
Lights — Dome, Auxiliary Floor (Aircraft 329 and Subsequent)	394B
Lights — Dome, Belly Compartments (Aircraft A through 164)	379
Lights — Dome, Belly Compartments (Aircraft 165 through 189)	380
Lights — Dome, Belly Compartments (Aircraft 190 through 327)	381
Lights — Dome, Belly Compartments (Aircraft 328 and Subsequent)	382
Lights — Dome, Cabin Entrance (Aircraft A through 114)	383
Lights — Dome, Cabin Entrance (Aircraft 115 and Subsequent)	384
Lights — Dome, Cockpit (Aircraft A through 214)	377
Lights — Dome, Cockpit (Aircraft 215 and Subsequent)	378
Lights — Dome, Flight Deck (Aircraft A through 53)	388
Lights — Dome, Flight Deck (Aircraft 54 through 214)	389
Lights — Dome, Flight Deck (Aircraft 215 and Subsequent)	390
Lights — Dome, Lavatories and Tail Section (Aircraft A)	399A
Lights — Dome, Lavatories and Tail Section (Aircraft 1 through 29)	400
Lights — Dome, Lavatories and Tail Section (Aircraft 30 and Subsequent)	401
Lights — Dome, Main Cabin (Aircraft A through 114)	385
Lights — Dome, Main Cabin (Aircraft 115 through 286)	386
Lights — Dome, Main Cabin (Aircraft 287 and Subsequent)	387
Lights — Formation (Aircraft A)	360A
Lights — Formation (Aircraft 1 through 53)	361
Lights — Formation (Aircraft 54 and Subsequent)	362
Lights — Instrument (Aircraft 1 through 29)	406
Lights — Instrument (Aircraft 30 through 53)	407
Lights — Instrument (Aircraft 54 through 164)	408
Lights — Instrument (Aircraft 165 through 214)	409
Lights — Instrument (Aircraft 215 through 391)	410
Lights — Instrument (Aircraft 392 and Subsequent)	410A
Lights — Intercall (Aircraft A through 114)	402
Lights — Intercall (Aircraft 115 through 214)	403
Lights — Intercall (Aircraft 215 through 328)	404
Lights — Intercall (Aircraft 329 and Subsequent)	405
Lights — Landing (Aircraft A through 214)	346
Lights — Landing (Aircraft 215 through 327)	347
Lights — Landing (Aircraft 328 and Subsequent)	348
Lights — Loading Ramp and Elevator (Aircraft A through 114)	370
Lights — Loading Ramp and Elevator (Aircraft 115 through 214)	371
Lights — Loading Ramp and Elevator (Aircraft 215 and Subsequent)	372
Lights — Nacelle Work (Aircraft A and Subsequent)	446
Lights — Navigation (Aircraft A)	352
Lights — Navigation (Aircraft 1 through 12)	353
Lights — Navigation (Aircraft 13 through 29)	354
Lights — Navigation (Aircraft 30 through 114)	355

L through N

L (Continued)	Figure No.	Page No.
Lights — Navigation (Aircraft 115 through 214)	356	362
Lights — Navigation (Aircraft 215 and Subsequent)	357	363
Lights — Panel, Cockpit (Aircraft A)	410B	416B
Lights — Panel, Cockpit (Aircraft 1 through 29)	410C	416C
Lights — Panel, Cockpit (Aircraft 30 through 41)	410D	416D
Lights — Panel, Cockpit (Aircraft 42 through 65)	410E	416E
Lights — Panel, Cockpit (Aircraft 66 through 79)	411	417
Lights — Panel, Cockpit (Aircraft 80 through 89)	412	418
Lights — Panel, Cockpit (Aircraft 90 through 214)	413	419
Lights — Panel, Cockpit (Aircraft 215 through 244)	413A	420
Lights — Panel, Cockpit (Aircraft 245 through 327)	414	420A
Lights — Panel, Cockpit (Aircraft 328 and Subsequent)	415	421
Lights — Panel, Engineer's (Aircraft 90 through 114)	416	422
Lights — Panel, Engineer's (Aircraft 115 through 139)	417	423
Lights — Panel, Engineer's (Aircraft 140 through 164)	418	424
Lights — Panel, Engineer's (Aircraft 165 through 204)	419	425
Lights — Panel, Engineer's (Aircraft 205 through 214)	420	426
Lights — Panel, Engineer's (Aircraft 215 through 286)	421	426A
Lights — Panel, Engineer's (Aircraft 287 through 327)	421A	426B
Lights — Panel, Engineer's (Aircraft 328 through 391)	421B	426C
Lights — Panel, Engineer's (Aircraft 392 through 421)	421C	426D
Lights — Panel, Engineer's (Aircraft 422 and Subsequent)	421D	427
Lights — Panel, Flight Deck, Navigator and Radio Operator (Aircraft A)	422	428
Lights — Panel, Flight Deck, Navigator and Radio Operator (Aircraft 5 through 89)	423	429
Lights — Panel, Flight Deck, Navigator and Radio Operator (Aircraft 90 through 164)	423A	430
Lights — Panel, Flight Deck, Navigator and Radio Operator (Aircraft 165 through 214)	424	430A
Lights — Panel, Flight Deck, Navigator and Radio Operator (Aircraft 215 through 244)	425	431
Lights — Panel, Flight Deck, Navigator and Radio Operator (Aircraft 245 through 327)	426	432
Lights — Panel, Flight Deck, Navigator and Radio Operator (Aircraft 328 and Subsequent)	426A	432A
Lights — Reading, Crew Quarters (Aircraft A through 114)	375	381
Lights — Reading, Crew Quarters (Aircraft 115 and Subsequent)	376	382
Lights — Red, Engineer's (Aircraft A through 214)	434	440
Lights — Red, Engineer's (Aircraft 215 and Subsequent)	436	442
Lights — Red, Navigator's (Aircraft A)	437	443
Lights — Red, Navigator's (Aircraft 1 and Subsequent)	438	444
Lights — Red, Pilot's (Aircraft A)	427	433
Lights — Red, Pilot's (Aircraft 1 through 41)	428	434
Lights — Red, Pilot's (Aircraft 42 through 53)	429	435

	Figure No.	Page No.
Lights — Red, Pilot's (Aircraft 54 through 65)	430	436
Lights — Red, Pilot's (Aircraft 66 through 164)	431	437
Lights — Red, Pilot's (Aircraft 165 and Subsequent)	433	438A
Lights — Standby Compass, Pilot's (Aircraft A)	433A	438B
Lights — Ultraviolet, Engineer's (Aircraft A)	433B	438C
Lights — Ultraviolet, Engineer's Table (Aircraft A)	433C	438D
Lights — Ultraviolet, Navigator's (Aircraft A)	433D	438E
Lights — Ultraviolet, Pilot's (Aircraft A)	433E	439
Lights — Utility, Flight Deck (Aircraft A through 339)	367	372A
Lights — Utility, Flight Deck (Aircraft 340 and Subsequent)	367A	373
Lights — Warning, Test Circuit (Aircraft A)	441	447
Lights — Warning, Test Circuit (Aircraft 1 through 65)	442	448
Lights — Warning, Test Circuit (Aircraft 66 through 79)	443	449
Lights — Warning, Test Circuit (Aircraft 80 through 114)	444	450
Lights — Warning, Test Circuit (Aircraft 115 through 327)	445	451
Lights — Warning, Test Circuit (Aircraft 328 and Subsequent)	446	452
Lights — Wing Crawlway (Aircraft A)	368	374
Lights — Wing Crawlway (Aircraft 1 through 65)	368A	375
Lights — Wing Crawlway (Aircraft 66 and Subsequent)	369	376
Lights — Wing Leading Edge (Aircraft 1 through 29)	358	364
Lights — Wing Leading Edge (Aircraft 30 through 114)	358A	364A
Lights — Wing Leading Edge (Aircraft 115 through 214)	359	365
Lights — Wing Leading Edge (Aircraft 215 and Subsequent)	360	366
Lights — Work Table (Aircraft A through 41)	365	371
Lights — Work Table (Aircraft 42 and Subsequent)	366	372
Long Range Navigation — AN/APN-9A (Aircraft A through 29)	472D	478E
Long Range Navigation — AN/APN-9 (Aircraft 30 through 327)	473	479
Long Range Navigation — AN/APN-70 (Aircraft 328 and Subsequent)	474A	480A

M

Main Gear Door Warning (Aircraft A through 114)	59	65
Main Gear Door Warning (Aircraft 115 and Subsequent)	60	66
Marker Beacon Receiver — AN/ARN-12 (Aircraft A through 41)	467	473
Marker Beacon Receiver — AN/ARN-12 (Aircraft 42 through 114)	468	474
Marker Beacon Receiver — AN/ARN-12 (Aircraft 115 through 244)	469	475
Marker Beacon Receiver — AN/ARN-12 (Aircraft 245 through 392)	470	476
Marker Beacon Receiver — AN/ARN-12 (Aircraft 393 and Subsequent)	470A	476A

N

N-1 Compass System (Aircraft 328 through 359)	289C	294G
N-1 Compass System (Aircraft 360 through 391)	289D	295

Revised 15 January 1955

N (Continued)		Figure No.	Page No.			Figure No.	Page No.
N-1 Compass System (Aircraft 392 through 421)		289E	296	Pressurization Equipment — MK-59/AP (Aircraft A)		482A	488A
N-1 Compass System (Aircraft 422 and Subsequent)		289F	296A	Pressurization Equipment — MK-59/AP (Aircraft 165 and Subsequent)		483	489
Nose Loading Door and Ramp Control (Aircraft A through 44)		23	28B	Primer — Engine (Aircraft A through 214)		169	175
Nose Loading Door and Ramp Control (Aircraft 45 through 114)		23A	29	Primer — Engine (Aircraft 215 and Subsequent)		170	176
Nose Loading Door and Ramp Control (Aircraft 115 through 214)		24	30	Propeller Control (Aircraft A)		204	210
Nose Loading Door and Ramp Control (Aircraft 215 through 327)		26	32	Propeller Control (Aircraft 1 through 29)		205	210A
Nose Loading Door and Ramp Control (Aircraft 328 and Subsequent)		27	33	Propeller Control (Aircraft 30 through 114)		206	212
Nose Loading Door Latch Sequence Control (Aircraft A through 7)		28	34	Propeller Control (Aircraft 115 through 164)		207	213
Nose Loading Door Latch Sequence Control (Aircraft 8 through 214)		29	35	Propeller Control (Aircraft 165 through 214)		208	214
Nose Loading Door Latch Sequence Control (Aircraft 215 and Subsequent)		30	36	Propeller Control (Aircraft 215 through 327)		209	215
O				Propeller Control (Aircraft 328 through 359)		210	216
Oil Cooler Door Control (Aircraft A through 164)		195	201	Propeller Control (Aircraft 360 and Subsequent)		210A	216A
Oil Cooler Door Control (Aircraft 165 through 214)		196	202	Propeller De-Icing (Aircraft 1 through 204)		113	119
Oil Cooler Door Control (Aircraft 215 through 327)		197	202A	Propeller De-Icing (Aircraft 205 through 214)		115	121
Oil Cooler Door Control (Aircraft 328 through 359)		197A	202B	Propeller De-Icing (Aircraft 215 and Subsequent)		116	122
Oil Cooler Door Control (Aircraft 360 and Subsequent)		197B	203	Public Address System (Aircraft 42 through 53)		493E	500L
Oil Dilution — Engine (Aircraft A through 29)		192	198A	Public Address System (Aircraft 54 through 114)		493F	500M
Oil Dilution — Engine (Aircraft 30 through 164)		192A	198B	Public Address System (Aircraft 115 through 327)		494	501
Oil Dilution — Engine (Aircraft 165 through 214)		193	199	Public Address System (Aircraft 328 and Subsequent)		494A	502
Oil Dilution — Engine (Aircraft 215 and Subsequent)		194	200	Pump — Drinking Water (Aircraft 1 through 164)		45	51
Oil Pressure — Auxiliary Power Plant (Aircraft A through 214)		231	237	Pump — Drinking Water (Aircraft 165 through 204)		46	52
Oil Pressure — Auxiliary Power Plant (Aircraft 215 through 327)		232	238	S			
Oil Pressure — Engine (Aircraft A through 214)		229	235	Search Radar — AN/APS-42 (Aircraft A)		480D	486D
Oil Pressure — Engine (Aircraft 215 and Subsequent)		230	236	Search Radar — AN/APS-42 (Aircraft 165 through 327)		481	487
Oil Quantity — Engine (Aircraft A through 214)		258	264	Search Radar — AN/APS-42 (Aircraft 328 and Subsequent)		482	488
Oil Quantity — Engine (Aircraft 215 and Subsequent)		259	265	Snubber — Rudder and Elevator (Aircraft A)		16	22
Oil Temperature — Engine (Aircraft A through 29)		233	239	Snubber — Rudder and Elevator (Aircraft 1 through 164)		17	23
Oil Temperature — Engine (Aircraft 30 through 214)		234	240	Snubber — Control Surfaces (Aircraft 165 through 214)		18	24
Oil Temperature — Engine (Aircraft 215 and Subsequent)		235	241	Snubber — Control Surfaces (Aircraft 215 through 286)		19	25
P				Snubber — Control Surfaces (Aircraft 287 through 327)		21	27
Periscopic Sextant Power (Aircraft 165 and Subsequent)		279	285	Snubber — Control Surfaces (Aircraft 328)		21A	28
Power Outlets — Flight Deck (Aircraft A through 65)		337A	342D	Snubber — Control Surfaces (Aircraft 329 and Subsequent)		22	28A
Power Outlets — Flight Deck (Aircraft 66 through 164)		337B	343	Starter (Aircraft A through 214)		202	208
Power Outlets — Flight Deck (Aircraft 165 through 214)		338	344	Starter (Aircraft 215 and Subsequent)		203	209
Power Outlets — Flight Deck (Aircraft 215 and Subsequent)		339	345	T			
Q				Tachometer		211	217
R				Tail Anti-Icer (Aircraft A)		107A	114
S				Tail Anti-Icer (Aircraft 80 through 84, 86 through 114)		108	114A
T				Tail Anti-Icer (Aircraft 85)		108A	114B
U				Tail Anti-Icer (Aircraft 115 through 189)		109	115
V				Tail Anti-Icer (Aircraft 190 through 214)		110	116
W				Tail Anti-Icer (Aircraft 215 through 250)		111	117
X				Tail Anti-Icer (Aircraft 251 through 411)		112	118
Y				Tail Anti-Icer (Aircraft 412 and Subsequent)		112B	118A
Z				Take-Off Warning (Aircraft A)		341A	346B

T (Continued)	Figure No.	Page No.
Take-Off Warning (Aircraft 1 through 114)	341B	346C
Take-Off Warning (Aircraft 115 through 164).....	341D	346E
Take-Off Warning (Aircraft 165 through 214).....	341E	346F
Take-Off Warning (Aircraft 215 through 244).....	341F	347
Take-Off Warning (Aircraft 245 through 327).....	342	348
Take-Off Warning (Aircraft 328 through 339)	343	348A
Take-Off Warning (Aircraft 340 and Subsequent)	343A	349
Temperature - Cabin Air and Outside Air (Aircraft A through 29)	244	250
Temperature - Cabin Air and Outside Air (Aircraft 30 through 89)	245	251
Temperature - Cabin Air and Outside Air (Aircraft 90 through 214)	246	252
Temperature - Cabin Air and Outside Air (Aircraft 215 and Subsequent)	247	253
Temperature - Carburetor Air (Aircraft A through 29)	235A	242
Temperature - Carburetor Air (Aircraft 30 through 214)	236	242A
Temperature - Carburetor Air (Aircraft 215 and Subsequent)	237	243
Temperature - Engine (Aircraft A through 29)	240	246
Temperature - Engine (Aircraft 30 through 214)	241	247
Temperature - Engine (Aircraft 215 and Subsequent)	243	249
Temperature - Heater (Aircraft 1 through 7)	237A	244
Temperature - Heater (Aircraft 8 through 79)	237B	244A
Temperature - Heater (Aircraft A, 80 through 214)	238	244B
Temperature - Heater (Aircraft 215 and Subsequent)	239	245
Torque Pressure (Aircraft A through 41)	217	223
Torque Pressure (Aircraft 42 through 214)	218	224
Torque Pressure (Aircraft 215 and Subsequent) ..	220	226
Trailing Antenna - AS-401/A (Aircraft A through 29)	474B	480B
Trailing Antenna - AS-401/A (Aircraft 30 through 114)	474C	480C
Trailing Antenna - AS-401/A (Aircraft 115 through 164)	475	481
Trailing Antenna - AS-401/A (Aircraft 165 and Subsequent)	476	482
Turn-and-Bank Indicators (Aircraft A through 164)	275	281
Turn-and-Bank Indicators (Aircraft 165 through 244)	276	282
Turn-and-Bank Indicators (Aircraft 245 through 268)	277	282A
Turn-and-Bank Indicators (Aircraft 269 through 327)	277A	283
Turn-and-Bank Indicators (Aircraft 328 through 339)	278	284
Turn-and-Bank Indicators (Aircraft 340 and Subsequent)	278A	284A

U	Figure No.	Page No.
UHF Transmitter-Receiver - AN/ARC-27 (Aircraft A through 65)	461A	467
UHF Transmitter-Receiver - AN/ARC-27 (Aircraft 66 through 244)	462	468
UHF Transmitter-Receiver - AN/ARC-27 (Aircraft 245 through 328)	463	469
UHF Transmitter-Receiver - AN/ARC-27 (Aircraft 329 and Subsequent)	464	470

V	Figure No.	Page No.
Ventilating Fans - Cabin (Aircraft A through 41)	90A	96A
Ventilating Fans - Cabin (Aircraft 42 through 214)	91	97
Ventilating Fans - Cabin (Aircraft 215 and Subsequent)	92	98
VHF Command Radio - AN/ARC-3 (Aircraft A through 65)	460A	466C
VHF Command Radio - AN/ARC-3 (Aircraft 73 through 114)	460B	466D
VHF Command Radio - AN/ARC-3 (Aircraft 115 through 244)	460C	466E
VHF Command Radio - AN/ARC-3 (Aircraft 245 and Subsequent)	461	466F
VOR Receiver - AN/ARN-14 (Aircraft 115 through 244)	471	477
VOR Receiver - AN/ARN-14 (Aircraft 245 through 327)	471A	478
VOR Receiver - AN/ARN-14 (Aircraft 328 through 359)	472	478A
VOR Receiver - AN/ARN-14 (Aircraft 360 through 391)	472A	478B
VOR Receiver - AN/ARN-14 (Aircraft 392 through 421)	472B	478C
VOR Receiver - AN/ARN-14 (Aircraft 422 and Subsequent)	472C	478D

W	Figure No.	Page No.
Water Injection (Aircraft A through 214)	189	195
Water Injection (Aircraft 215 through 327)	190	196
Water Injection (Aircraft 328 through 359)	191	197
Water Injection (Aircraft 360 and Subsequent) ..	191A	198
Water Pressure - Water Injection (Aircraft A through 29)	186	192
Water Pressure - Water Injection (Aircraft 30 through 214)	187	193
Water Pressure - Water Injection (Aircraft 215 and Subsequent)	188	194
Water Quantity - Water Injection	185	191
Windshield Wiper - Electric	133	139
Wing Flap Position Indicator (Aircraft A through 214)	260	266
Wing Flap Position Indicator (Aircraft 215 and Subsequent)	261	267